


# Assembly Instructions

Item# 110205005

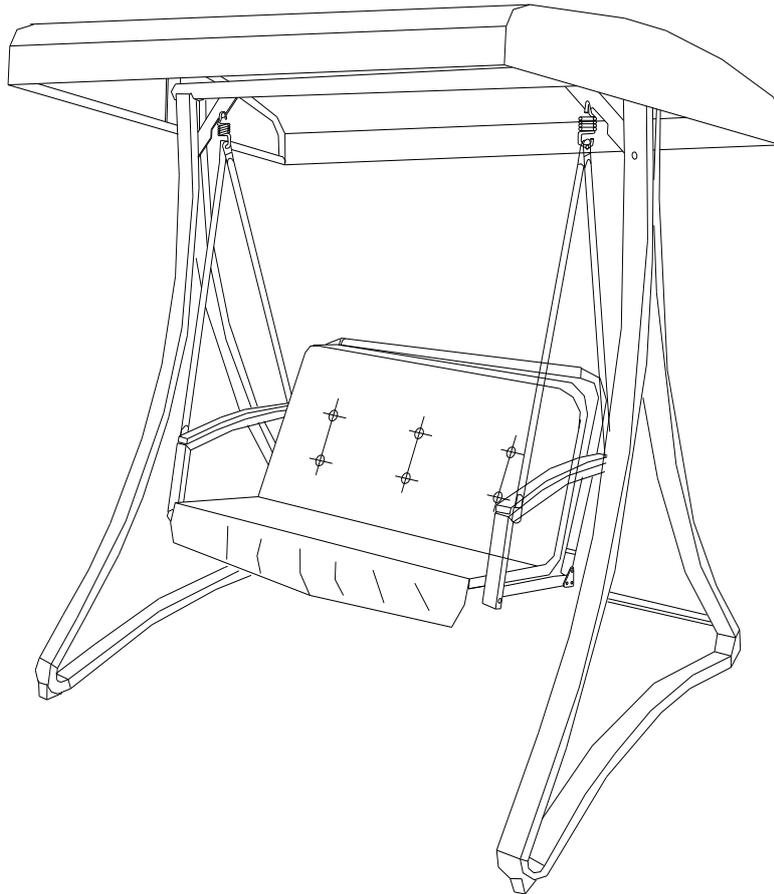


## Warranty:


1. This swing must be assembled by two adults or more.
2. Tools are not included in packaging. The expected time required for assembly is usually 1-2 hours.
3. Before assembly, ensure all parts are present and not damaged.
4. Assembly on a flat, hard, and debris-free surface.
5. Keep canopy swing away from fire or inflammable objects.
6. There are small parts present in the packaging, do keep small parts away from children.
7. Children should be accompanied under the adults when use the swing.
8. Do not repack your swing until it is completely dry.
9. This swing must not be left erect in high wind conditions.

Parts List:



No.	Description	Qty
A	Foot connector	4
B	Foot connect bar	2
C1	Front foot	2
C2	Back foot	2
D	Top beam	1
E	Swing bar	4
F	Foot connect bar	J
G	Seat	K
H	Armrest	L
I	Seat cushion	1
J	Canopy	2
K	Top connect bar	2
L	Top side support bar	2
AA	M6 plastic cap	16
BB	Bolt M6*70	8
MM	Bolt M6*75	4
CC	M6 washer	8
DD	M6 nut	12
EE	M8 plastic cap	10
FF	Bolt M8*75	6
GG	M8 washer	20
HH	M8 nut	10
II	Bolt M8*80	2
SS	Bolt M8*55	2
JJ	Bolt M6*35	4
KK	Hook	2
LL	Adjust bolt (plastic)	2

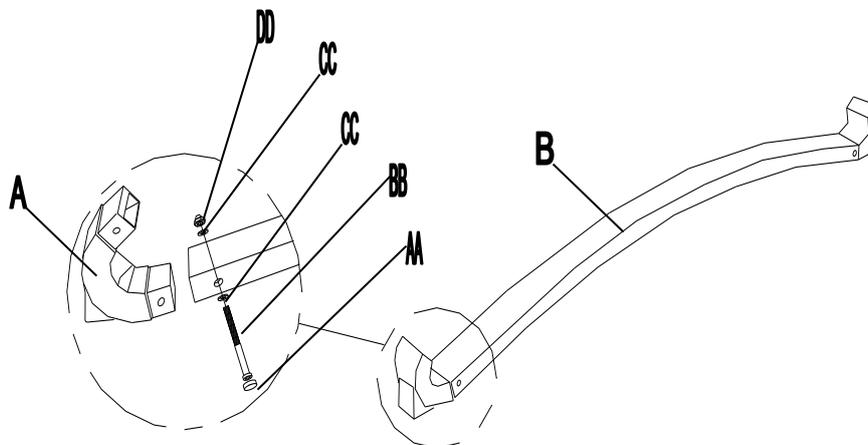


Step 1: Insert Foot connector (A) to Foot connect bar (B), fix them by bolt (BB), washer (CC) and nut (DD), then cover Plastic cap (AA).

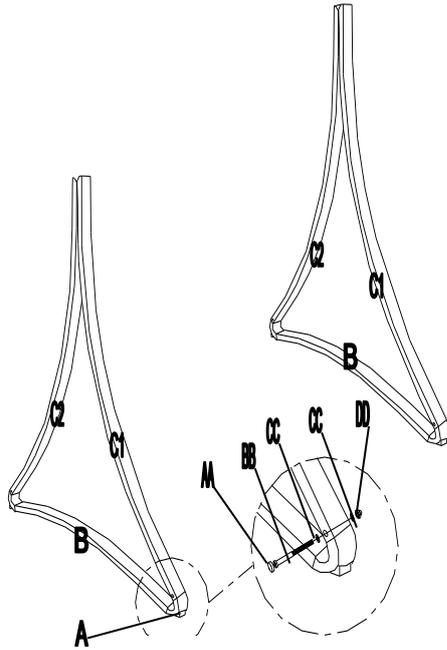

Step 2: Connect Foot connector (A) to Front foot (C1) & Back foot (C2) by using bolt (BB), washer (CC) and nut (DD), then cover Plastic cap (AA).

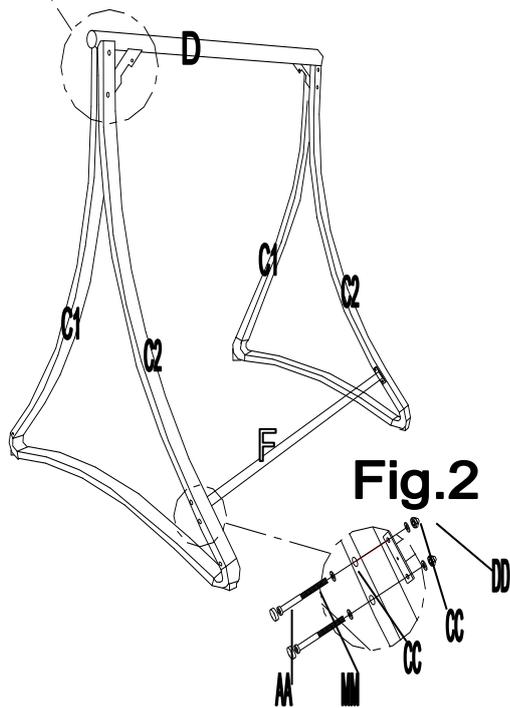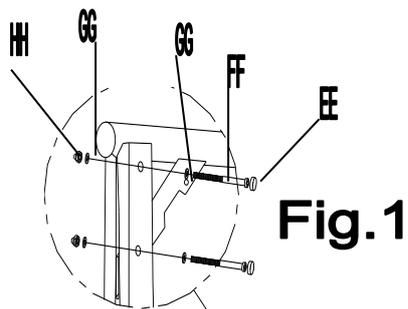



Step 3: Connect Top beam (D) to Front foot (C1) & Back foot (C2) by using bolt (FF), washer (GG) and nut (HH), then cover Plastic cap (EE), as Fig.1. Connect Foot connect bar (F) to Back foot (C2) by using bolt (MM), washer (CC), nut (DD), then cover Plastic cap (AA), as Fig.2.

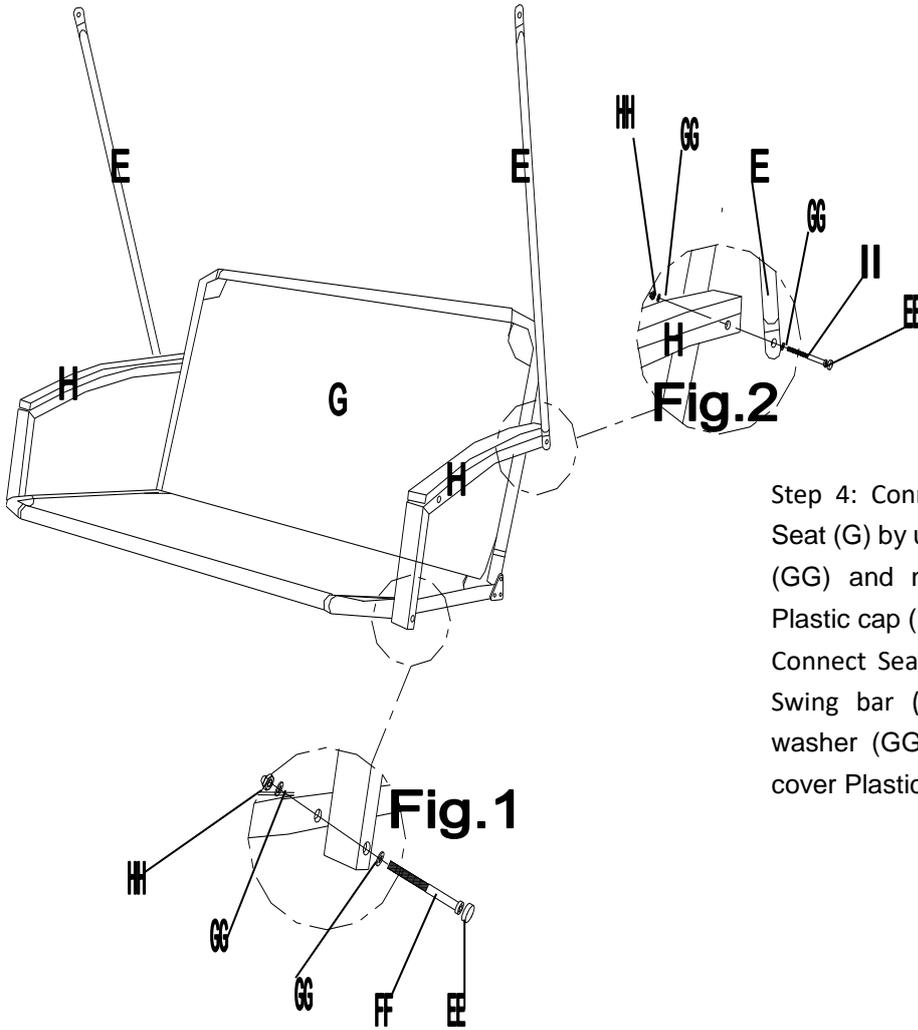


Step 4: Connect Armrest (H) and Seat (G) by using bolt (FF), washer (GG) and nut (HH), then cover Plastic cap (EE), as Fig.1.  
 Connect Seat (G), Armrest (H) and Swing bar (E) by using bolt (II), washer (GG) and nut (HH), then cover Plastic cap (EE), as Fig.2.

Step 5: Connect Swing bar (E) to Armrest (H) by using bolt (SS), washer (GG) and nut (HH), then cover Plastic cap (EE), as Fig.1. Hang Hook (KK) to the Swing bar (E) as Fig.2.

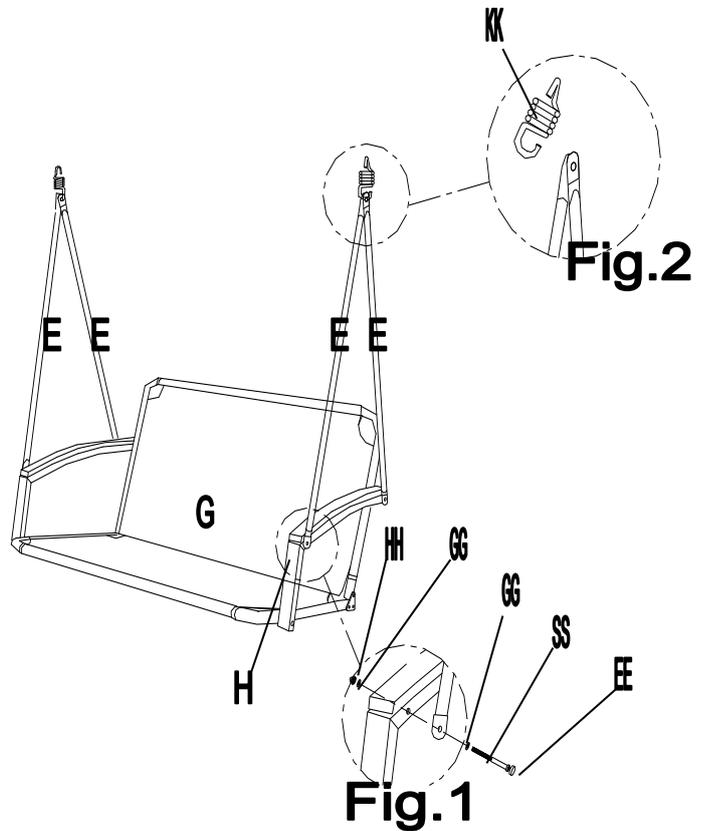


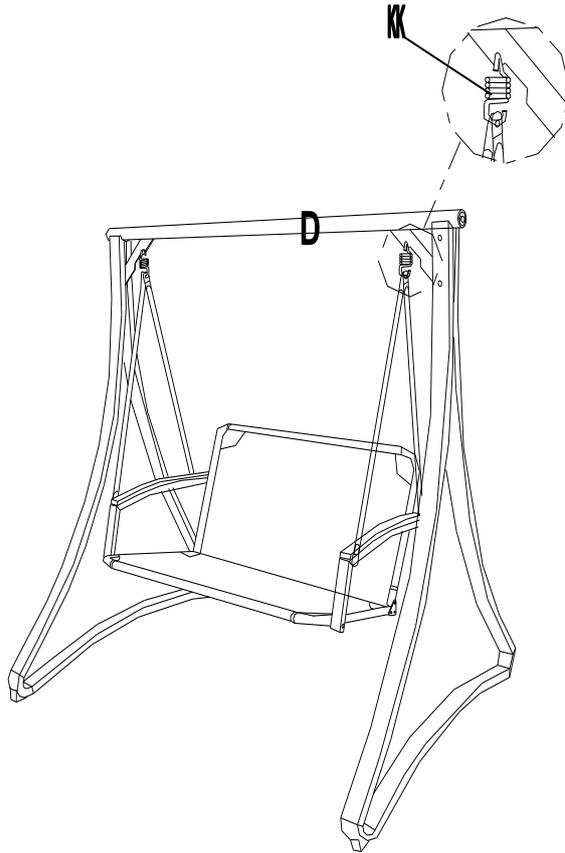


Step 6: Hang another end of Hook (KK) to Top beam (D).

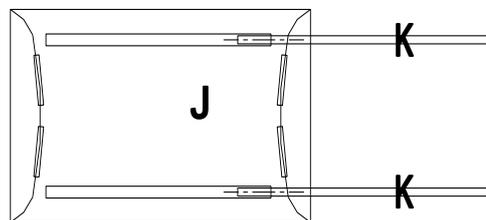

Step 7: Insert Top connect bar (K) into Canopy (J).

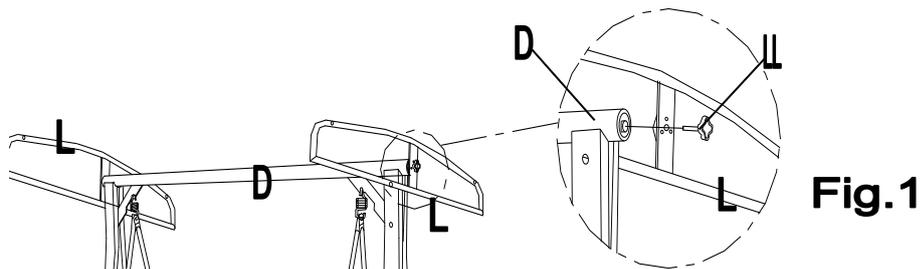


**Fig.1**

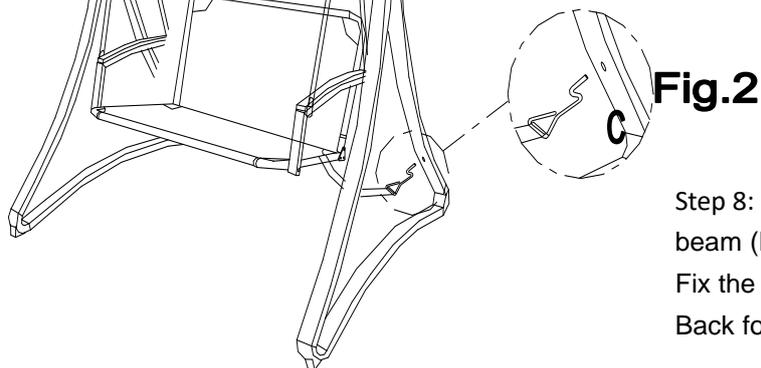


**Fig.2**


Step 8: Connect Top side support bar (L) to Top beam (D) by using Adjust bolt (LL), as Fig.1.  
 Fix the mortise lock of Seat (G) into the hole of Back foot (C2), as Fig.2.

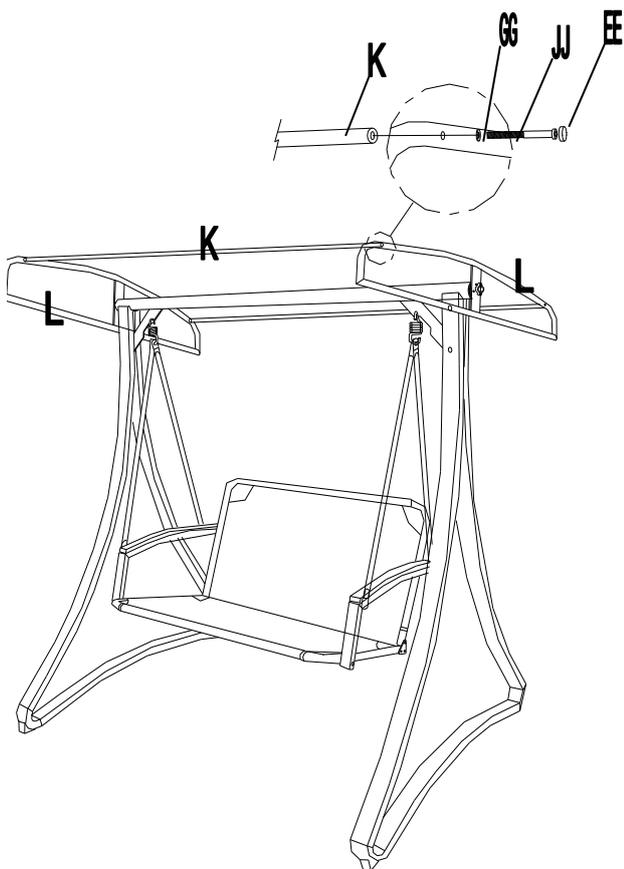

Step 9: Connect Top side support bar (L) and Top connect bar (K) by using bolt (JJ) and washer (GG), then cover plastic cap (EE).

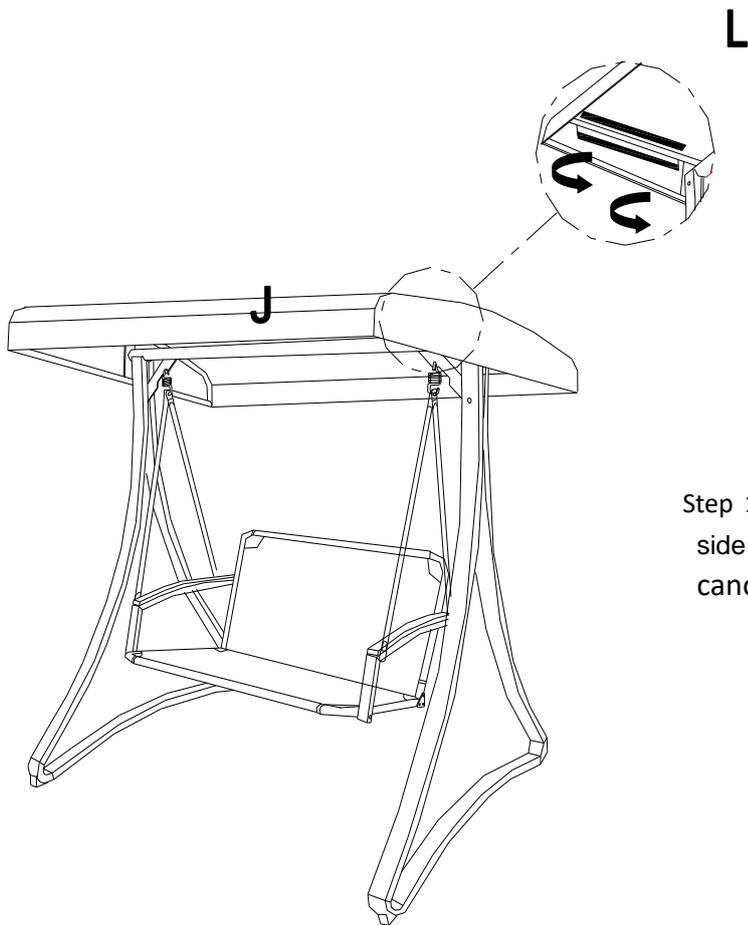

Step 10: Stretch the canopy to fit, wrap Top side support bar (L) as well and stick the canopy velcro.

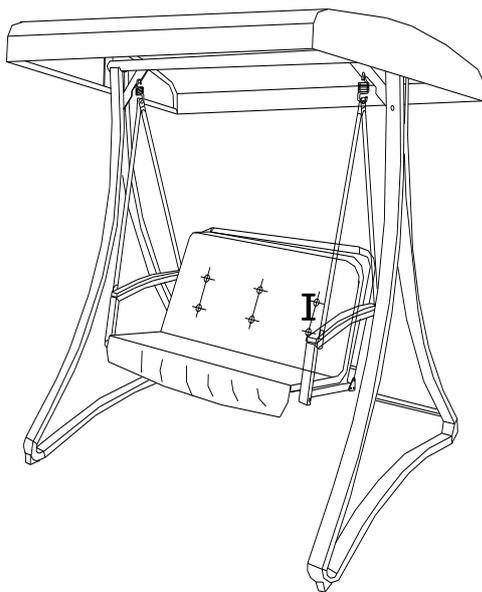

Step 11: Place Seat cushion (I) onto the seat.

**Limited Warranty:**

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **12** months. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

**Exclusions:**

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

**Care & Maintenance:**

1. Before using, clean the swing completely with a soft dry towel.
2. Do not place your swing in wet conditions where there is a risk of rust developing.
3. When not in use, wipe free of any dirt or loose objects, Do not use strong detergent or abrasive cleaners.
4. When not in use, store in a cool, dry location away from sunlight.

Made in China