


Assembly Instructions

Item# D-FT013PST

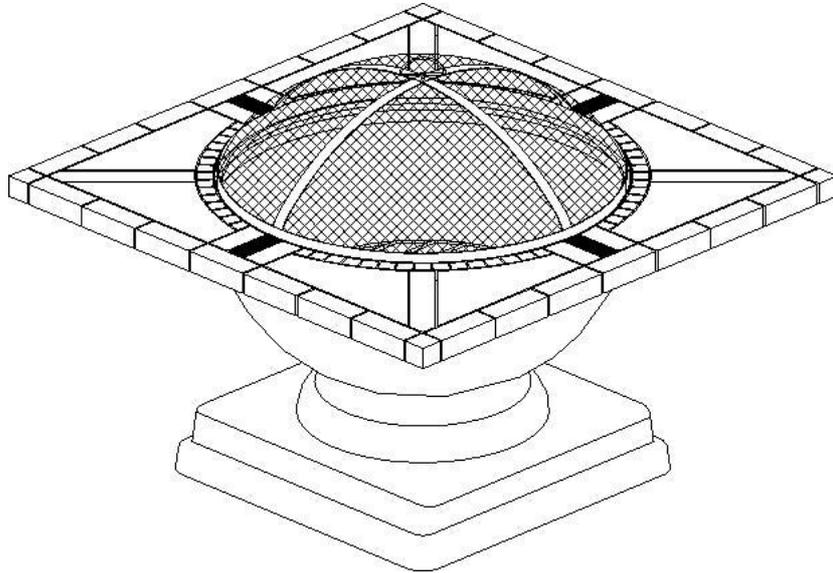

WARNINGS AND CAUTIONS:


- . FOR OUTDOOR USE ONLY! Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn charcoal inside, vehicles or tents.
- . NEVER LEAVE FIRE UNATTENDED!
- . The charcoal fire pit is **HOT!** DO NOT TOUCH or allow children to play near the Fire Pit when it is in use. Hot embers can fly out of the basin in breezy conditions. A fire extinguisher should be readily available.
- . When the fire pit is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- . **DO NOT TOUCH** the surface of the iron fire grate or the Fire Bowl while in use, as burns may result.
- . This unit has been designed to burn charcoal or untreated wood only. **DO NOT** use gasoline or kerosene to light your fire.
- . **DO NOT** use on wood deck.
- . **DO NOT** use in the vicinity of flammable objects.
- . **DO NOT** use this Fire Pit as a cooking appliance. This Fire Pit is not designed to be used for grilling food.

CARE & MAINTENANCE:

1. Before using, clean the product completely with a soft dry towel.
2. To extend the life of your fire pit, clean the bowl after each use and cover the unit to protect it from the elements, cover is not included. Due to natural properties of steel material, if rust develops, please clean rust area by sanding slightly, then wipe thoroughly and apply touch-up paint if possible.

Parts List:

No.	Description	Qty
A	Handle	1
B	Fire screen	1
C	Grate	1
D	Slate top	1
E	Fire bowl	1
F	Ash catcher	1
G	Round base	1
H	Square base	1
I	Poker	1
AA	Flanged nut M6	1
BB	Hex bolt M6*15	8
CC	Washer M6	12
DD	Screw M5*10	3
EE	Flanged nut M5	3
FF	Hex bolt M6*30	4
GG	Wrench M6	1

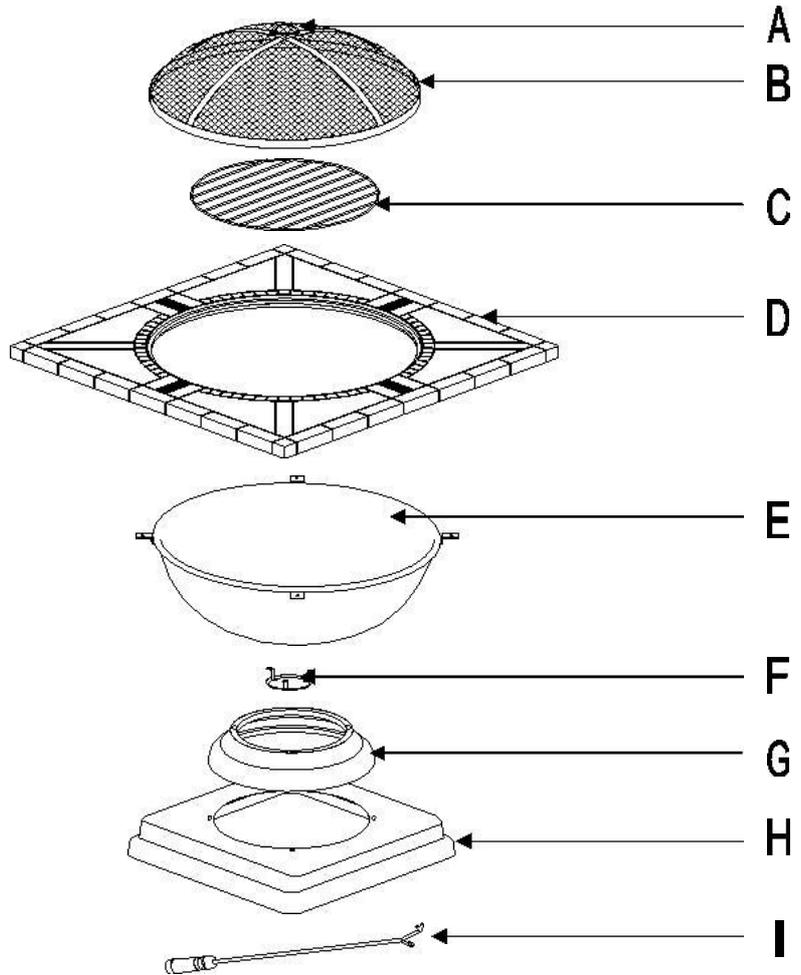


Preparation:

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


Tools Required for Assembly: Wrench (Included) and Philips Screwdriver (Not included)

Assembly instructions:


Step 1: Attach handle (A) to fire screen (B), tighten with flanged nut (AA).

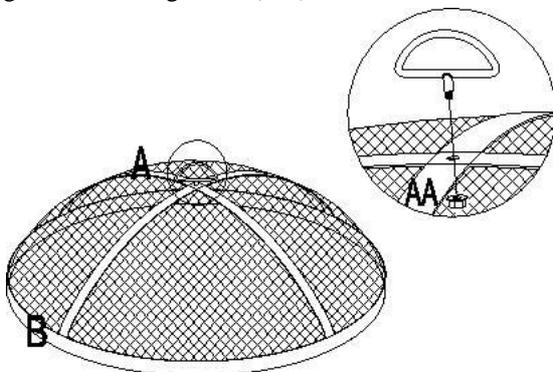


Step 2: Attach ash catcher (F) to Fire bowl (E), tighten with screw (DD) and flanged nut (EE).

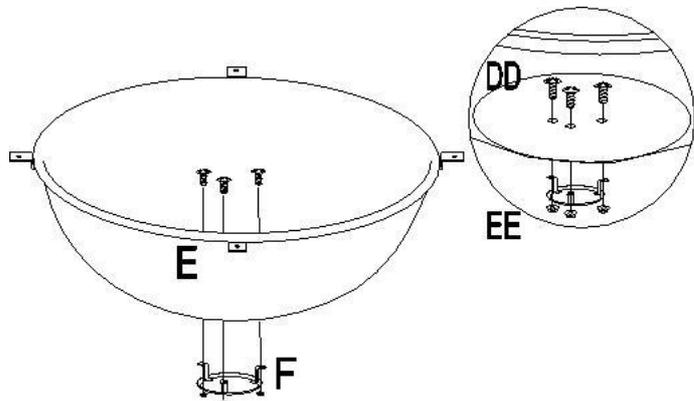


Step 3: Put round base (G) and square base (H) upside down on a soft, non-abrasive surface, connect with bolt (FF) and washer (CC).

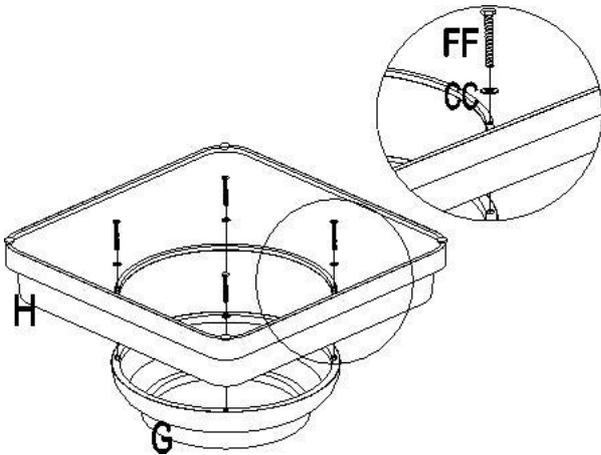


Step 4: Turn over the assembled base. Attach fire bowl (E) to round base (G), tighten with bolt (BB) and washer (CC).

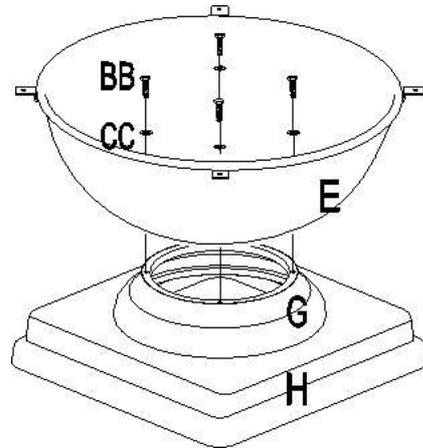

Step 5: Put Slate top (D) upside down on a soft, non-abrasive surface, connect assembled base to slate top (D), tighten with bolt (BB) and washer (CC).

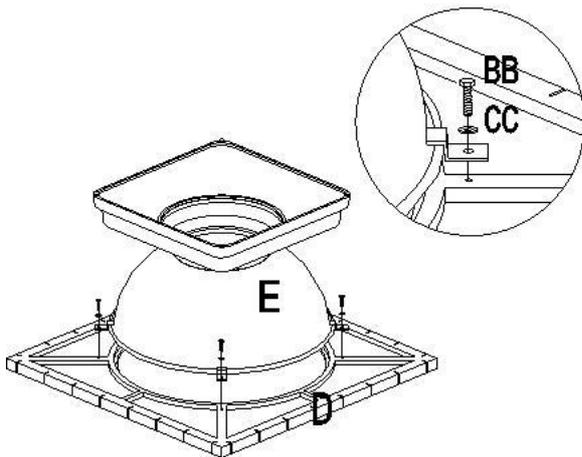

Step 6: Turn over the whole assembled piece. Place Grate (C) and Fire screen (B) in order. Use Poker (J) as necessary.

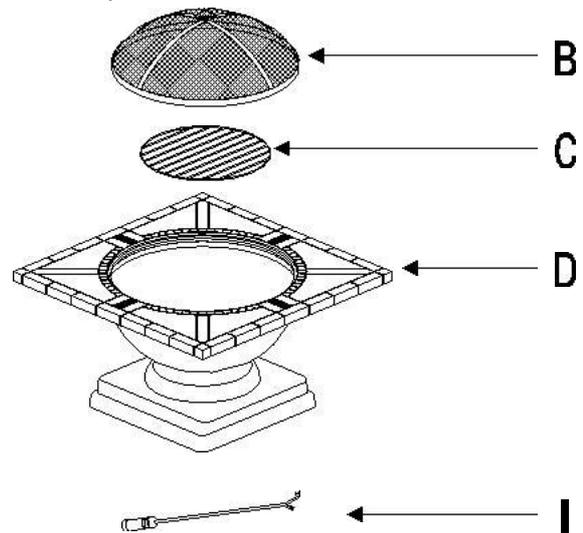

LIMITED WARRANTY:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **1 year**. If any defect is found, please call our customer service department at 1-866-578-6569 for help. The manufacturer will not cover transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

SERVICE:

Please do not return this product to the store. For technical assistance on assembly or replacement parts, in the continental U.S., please call us toll-free at 1-866-578-6569 from 8 a.m. to 5 p.m. CST Monday – Friday. In the continental Canada, please call us toll-free at 1-844-SUNJOY1 (1-844-786-5691) from 8 a.m. to 5 p.m. CST Monday – Friday. You can fax the replacement part form which is in the box to (740)-283-3549 . You can also send Email to customer.care@sunjoydirect.com for assistance.