



OAKMONT GLASS TOP COFFEE TABLE

ASSEMBLY INSTRUCTION

ITEM# GB19-528

SKU# 810419156

ASSEMBLY INSTRUCTION

DO NOT RETURN THIS PRODUCT TO THE STORE. FOR MISSING PARTS OR QUESTIONS TO THIS PRODUCT PLEASE CALL US AT 1-888-733-8169 OR EMAIL US AT customerservice_01@yeah.net OR customerservice_02@yeah.net OR customerservice_03@yeah.net

IMPORTANT:

Please read all the instructions and warnings before assembling. In order to make the whole product adjust to the best, please install all the screws on the product before fully tighten, and tighten all the screws after adjusting the product which can stand on the floor even.

WARNING:

Use the correct screws as indicated. All screws should be hand tight until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tight all screws with provided tool.

Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.

Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.

Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and

The table is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.

CARE & MAINTENANCE

STAIN RESISTANT CUSHIONS CARE — KEEP THE CUSHIONS IN STORAGE IN RAINING DAY.








SPILLS: Immediately wipe up the spill using a white damp cloth. Repeat process if necessary until stain is gone. Allow cushion to air dry.

FABRIC CARE: Hand wash cold, non-chlorine bleach when needed, lay flat to dry. Cool iron if necessary. Do not dry clean.


ALL WEATHER WICKER PRODUCT CARE

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Over time nuts and screws can loosen. Occasionally, check nuts and screws on the rocker, re-tighten if necessary.

PARTS LIST


No.	Part	Qty	Image	No.	Part	Qty	Image
A		1	Table Top	B		2	Table Side Board
C		1	Table Support Frame	D		4	Short Screw φ6x15mm
E		4	Long Screw φ6x35mm	F		8	Washer
G		1	Allen Wrench				

STEP 1

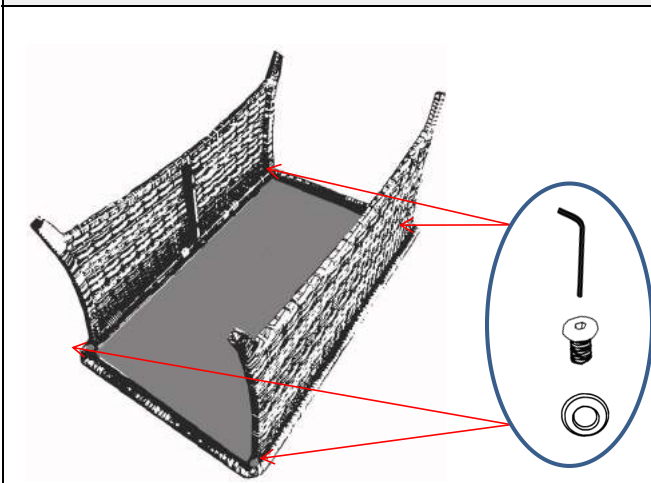

Secure 2 table side board (B) to table top (A) by using 4 short screw (D) and 4 washer (F) with allen wrench (G).

STEP 2

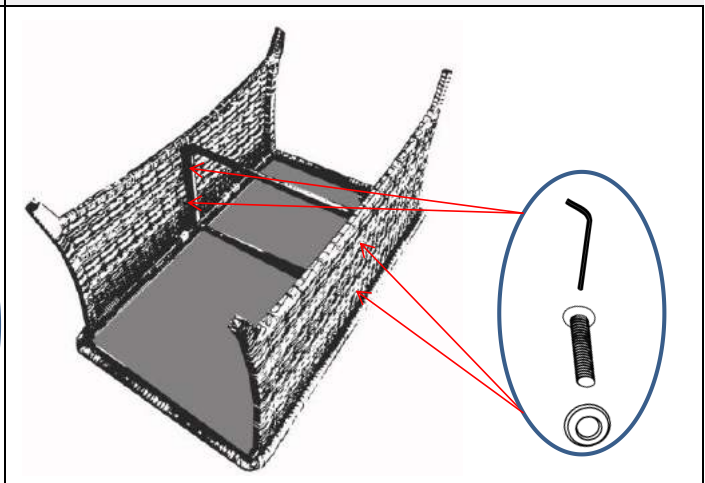

Secure table support frame (C) to 2 table side board (B) by using 4 long screw (E) and 4 washer (F) with allen wrench (G).

STEP 3



Finish!