



BROADMOOR ROUND GLASS TABLE

ASSEMBLY INSTRUCTION

ITEM# GB20-502

SKU# 810459674

DO NOT RETURN THIS PRODUCT TO THE STORE. FOR MISSING PARTS OR QUESTIONS TO THIS PRODUCT PLEASE
CALL US AT 1-888-733-8169 OR EMAIL US AT
customerservice_01@yeah.net OR customerservice_02@yeah.net OR customerservice_03@yeah.net

IMPORTANT:

Please read all the instructions and warnings before assembling. In order to make the whole product adjust to the best, please install all the screws on the product before fully tighten, and note to put the washer to the screw before putting the screw into the screw hole.

WARNING:

Use the correct bolts as indicated. All bolts should be hand tight until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tight all bolts with provided tool.

Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.

Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.

Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.

The table is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.









Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

CARE & MAINTENANCE


ALL WEATHER WICKER PRODUCT CARE

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Over time nuts and bolts can loosen. Occasionally, check nuts and bolts on all chairs and tables, re-tighten if necessary.

PARTS LIST


NO.	Part	Qty	Image	NO.	Part	Qty	Image
A	Table leg	3		B	Table Base	1	
C	Table top	1		D	Glass	1	
E	Short Bolt	6		F	Long Bolt	3	
G	Washer	9		H	Allen wrench	1	

STEP 1

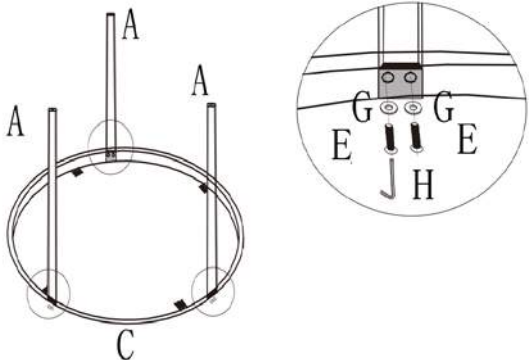


DO NOT TIGHTEN ALL BOLTS NOW.

STEP 2

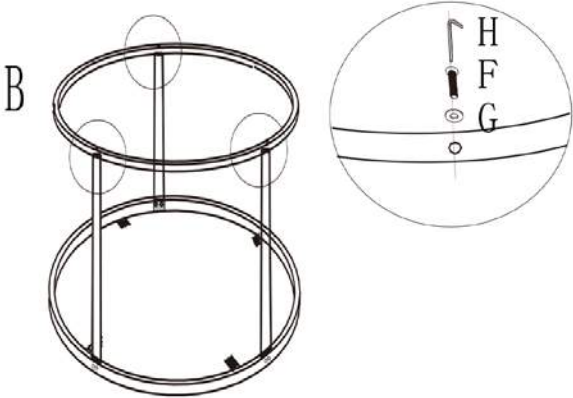

DO NOT TIGHTEN ALL BOLTS NOW.

STEP 3

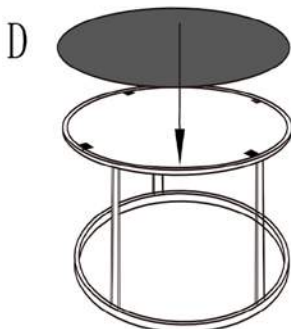

Verify the alignment and adjust, fully tighten all the bolts. Turn over the assembled table and put the glass (D) on the table frame.