



## OAKMONT 22IN SQ ALL WEATHER WICKER SIDE TABLE

### ASSEMBLY INSTRUCTION

ITEM# : GB21-617

SKU# : 810499324

DO NOT RETURN THIS PRODUCT TO THE STORE. FOR MISSING PARTS OR QUESTIONS TO THIS PRODUCT PLEASE CALL US AT 1-888-733-8169 OR EMAIL US AT customerservice\_01@yeah.net OR customerservice\_02@yeah.net OR customerservice\_03@yeah.net

### IMPORTANT:

Please read all the instructions and warnings before assembling. In order to make the whole product adjust to the best, please install all the screws on the product before fully tighten, and note to put the washer to the screw before putting the screw into the screw hole

### WARNING:

**Use the correct screws as indicated. All screws should be hand tight until the complete piece is assembled ( This will make the assembly process much easier ). Once the piece is fully assembled, then go back and tight all screws with provided tool.**

Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.

Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.

Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.

The table is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.

Please be sure that all screws are securely tighten before use. Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

## CARE & MAINTENANCE

### ALL WEATHER WICKER PRODUCT CARE

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Over time screws can loosen. Occasionally, check screws on the table, re-tighten if necessary.

## PARTS LIST



A

4PC Table Leg



B

1PC Glass Table Top



C

1PC Table Tray

## HARDWARE LIST



D

12PC Washer



E

12PC Screw(φ6x15mm)




F

1PC Allen Wrench


## STEP 1

Secure 4 table legs (A) to glass table top (B) by using 8 screws (E) and 8 washers (D) with allen wrench (F). Do not tighten all screws now.

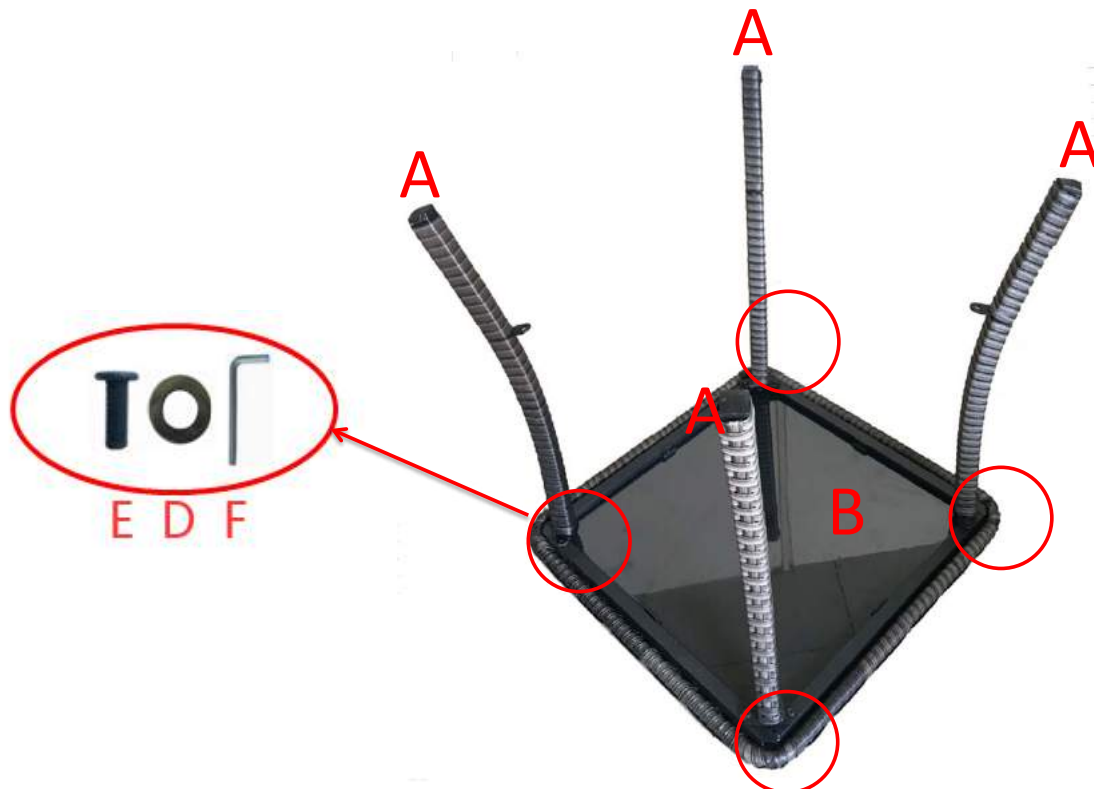

## STEP 2

Secure table tray (C) to 4 table legs (A) by using 4 screws (E) and 4 washers (D) with allen wrench (F). Do not tighten all screws now.

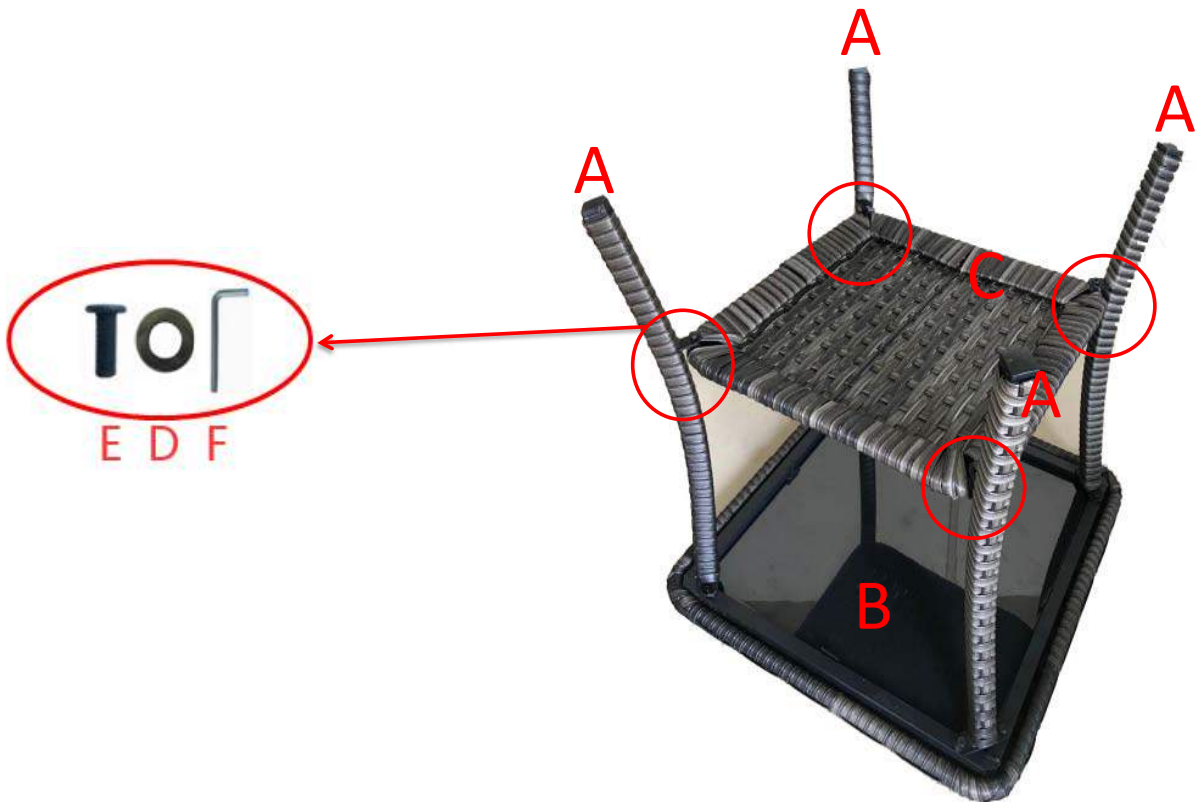

## STEP 3

Turn over the assembled table. Verify the alignment and adjust, fully tighten all screws.

