

SANDPOINTE



ASSEMBLY INSTRUCTIONS

ITEM#: A208037901

SKU# 81046631


SANDPOINTE FIRE PIT DINING TABLE

Need help? We are here for you! 1(866)578-6569 24/7 • Toll Free



8" 3" / * / (For Outdoor Use Only.
Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

* / 4 5 " - - & Leave this manual with the appliance.
\$ 0 / 4 6 . & Retain this manual for future reference.

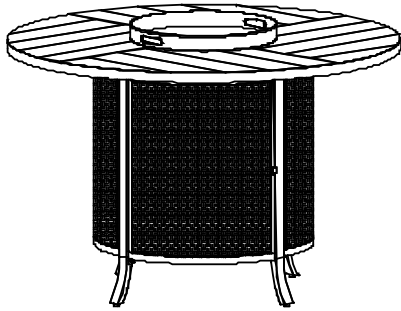

% " / (& 3
' * 3 & 0 3 & 9 1 - 0 4 * 0 /) " ; " 3 %

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, leave the area immediately
4. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



C US
Energy Verified



Propane cylinder required (not included)
1AA 1.5V battery required (not included)



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.



8" 3" / * / (

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.

An LP - cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



% " / (& 3

\$ " 3 # 0 / . 0 / 0 9 * % &) " ; " 3 %



This appliance can produce carbon monoxide which has no odor.
Using it in an enclosed space can kill you.
Never use this appliance in an enclosed space such as a camper, tent, car or home.

This appliance complies with "ANSI Z21.97-2017/CSA 2.41-2017, Outdoor Decorative Gas Appliances.

TABLE OF CONTENTS

General information - - - - -	3
Specification - - - - -	
Important safety information and precaution - - - - -	4-5
Expanded view - - - - -	
Parts list- - - - -	
Installation - - - - -	
Location- - - - -	
Set up- - - - -	
Gas connection- - - - -	1
Operation - - - - -	
Leak check - - - - -	
Ignite lighting - - - - -	1
Storage and Maintenance- - - - -	18
Trouble shooting- - - - -	1
Limited warranty- - - - -	1

WARNINGS:

Failure to position the parts in accordance with these diagrams or use only parts specifically approved with this appliance may result in property damage or personal injury.

This product can expose you to Carbon Monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

GENERAL INFORMATION

* . 1 0 3 5 " / 5

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual to consumer for installer and consumer future reference/use.

We would like to hear from you with any comments or suggestions. In the continental U.S., you can call Sunjoy Toll Free number: 1-866-578-6569 at any time.

You can also send us an email to biglots@sunjoygroup.com


4 1 & \$ * ' * \$ " 5 * 0 /

1 S P E V D U O B N F	6 \$ 1 ' 3 2 , 1 7 () , 5 (1 3 1 7 7 \$ % / (
. P E F M / 0	\$
3 B U F E) F B U 0 V U	3,000 BTU/HR
' V F M	Propane - LP
(B T 4 V Q Q M Z	20 lb. LP - Gas cylinder
. B O J G P M E 1 S F T	14.5 lbs W.C.
0 S J G J D F 4 J [F E	J.B.M.F.U.F.S
(B T 4 V Q Q M Z 1 S F	Max. 250 PSI Min. 25 PSI


IMPOTANT SAFETY INFORMATION AND PRECAUTION

- The installation must conform with local codes, or in the absences of local codes with the National Fuel Gas Code, ANSI Z223.1/NFPA54; Internati onal Fuel Gas Code, Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, B149.2, as applicable.
- The LP gas supply cylinder to be used must be:
 - 1- Constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable;
 - 2- Provided with a listed overfilling prevention device;
 - 3- Provided with a cylinder connection device compatible with the connection for the appliance.
- Always place the appliance on a firm and level surface.
- Solid fuels shall not be burned in this gas appliance. When using decorative Lava Rocks, use only Lava Rocks (INCLUDED).
- The appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area.
- When in use, keep the appliance area clear and at least 40 in / 101.6 cm side, back and top clearance from combustible materials, gasoline and other flammable liquid and vapors. Do not use the appliance under overhead combustible surfaces. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be damaged.

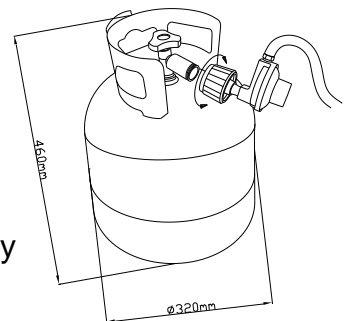


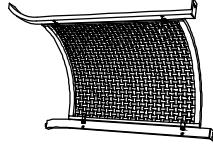
 
 
 


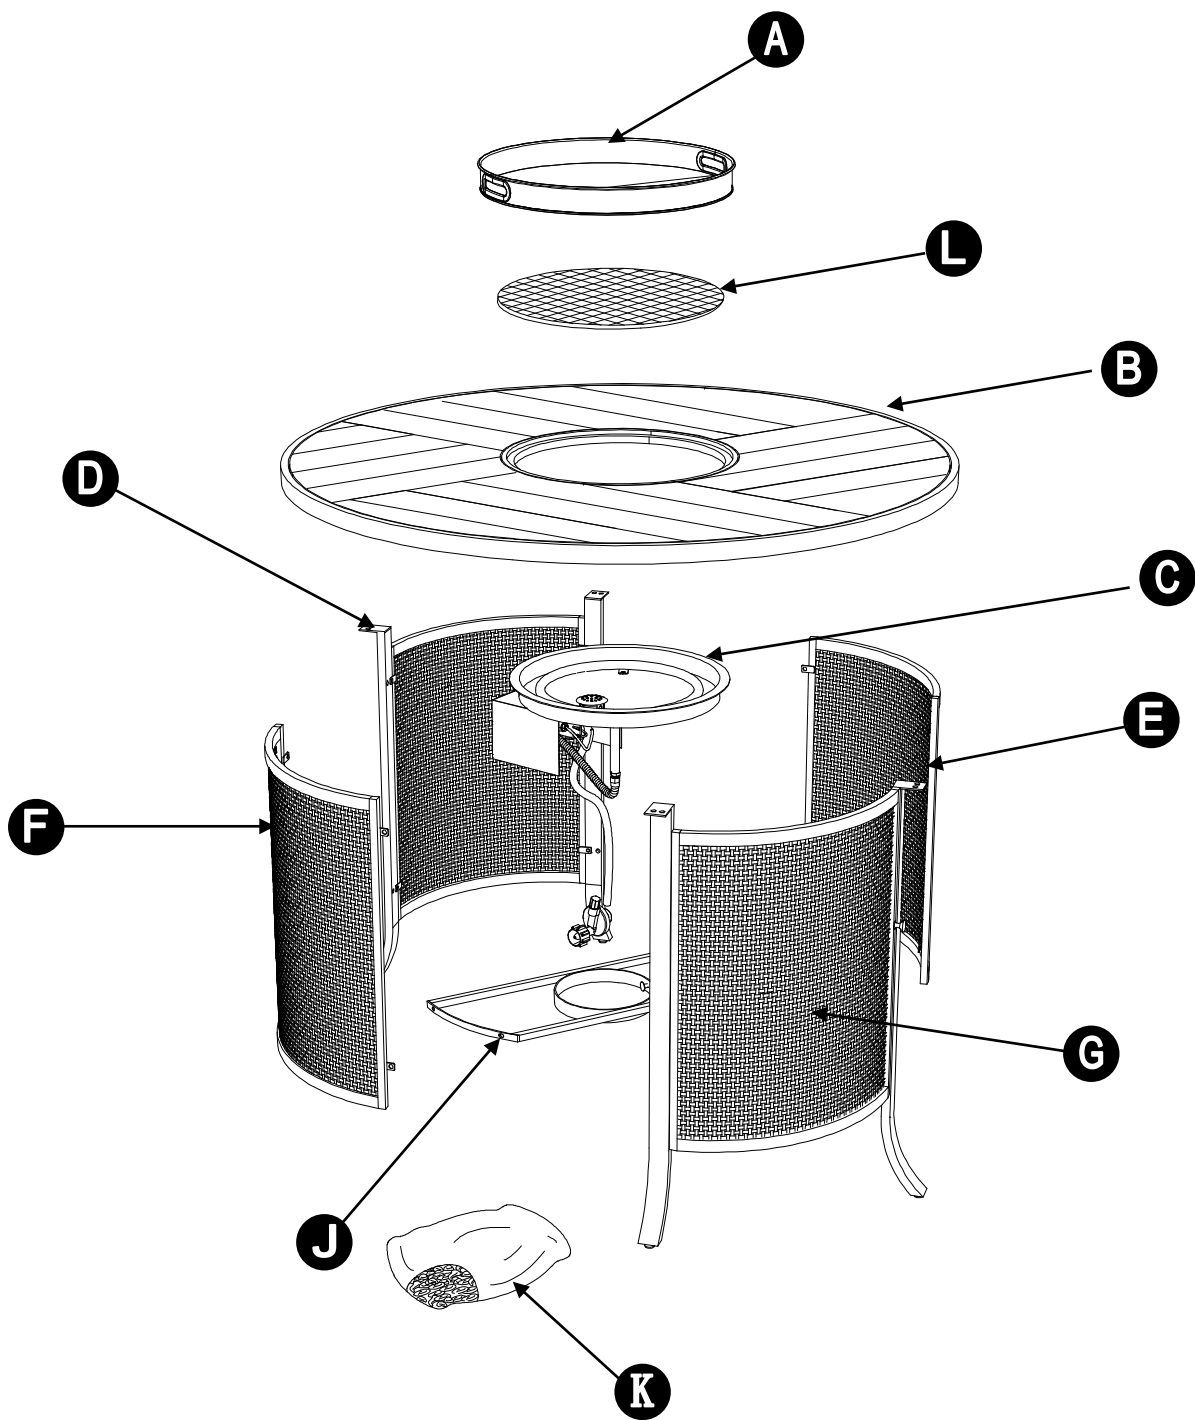

- Open the door and inspect the hose assembly and burner prior to each use. If there is evidence of excessive abrasion or wear or if the hose or burner is damaged, it must be replaced by appropriate part from the manufacturer.
- Inspect the gas connections of the appliance prior to each use. Do not to operate the unit if there is a gas leak. Have the appliance inspected annually by a qualified service person.
- The pressure regulator and hose assembly provided with the appliance must be used. The replacement part must be the same as the part specified by manufacturer.
- The assembly of LP-gas and leak checking please refer to the “Gas connection” on page and “leak Test” on page .
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or prevent clothing ignition.
- Young children and pets should be carefully supervised when they are in the area of the appliance.
- Any guard or other protective device removed for servicing the appliance must be replaced prior to operation.
- Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.
- Do not use the appliance if any part has been under water. Immediately call a qualified technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- LP-gas supply cylinder to be used must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation (DOT).
- The cylinder supplies system must be arranged for vapor withdrawal and the cylinder must include a collar to protect the cylinder valve.
- Use only 20 lb / 9 kg LP-Gas cylinders.
- Do not burn wood or any other materials in this appliance.
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressure equal to or less than 1/2psi (3.5kPa).
- Properly place the hose out of pathways where people may trip over it or in areas where there may be subject to accidental damage.
- The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. The replacement burner must be the same as the part specified by manufacturer.
- The cleaning of the appliance including the burner, please refer to “Storage and Maintenance” on page 18.






EXPANDED VIEW



PARTS LIST





Label	Part Number	Description	Qty	Part Image
A	3	/ L G		
B	3	7DEOH WRS		
C	3)LUH ERZO		
D	3	5HDU GRRU		
E	3	6LGH SDQHO		
F	3	6LGH SDQHO		
G	3	'RRU		
+	3	&\OLQG HU UDFN		
,	3	/DYD URFN.*		
-	3	0HVK VFUHHQ		
		9 \$\$ EDWWHU\ QRW LQFOXGHG		

  HARDWARE PACK


Label	Part Number	Description	Qty	Add	Part Image
)	H010010003	Bolt M6*15	22	3	
)	H050030001	Flat washer M6	22	3	
) 8	H090010017	Wrench M6	1	0	

If you want to replace the parts listed, please contact Customer Service Center: 1(866) 578-6569.




STEP 1

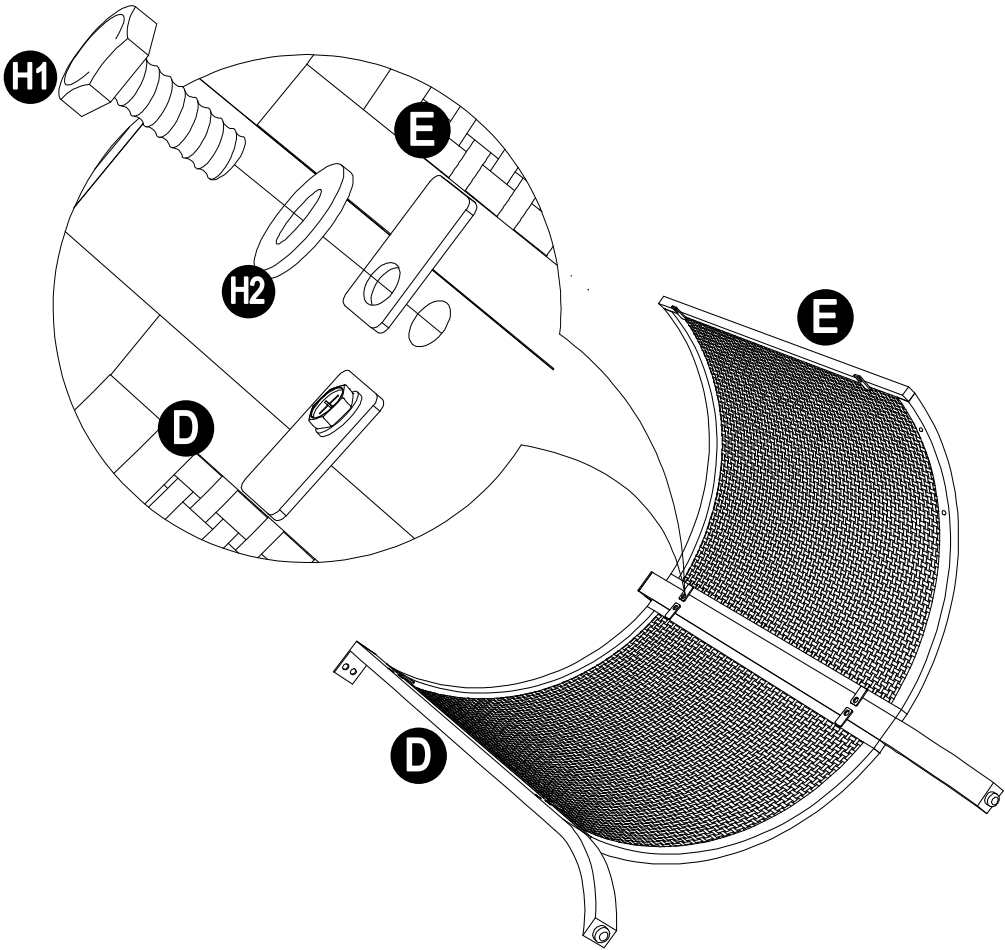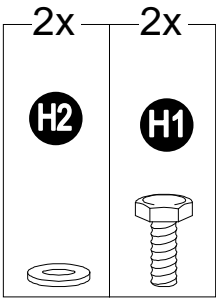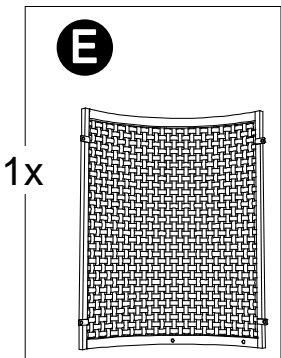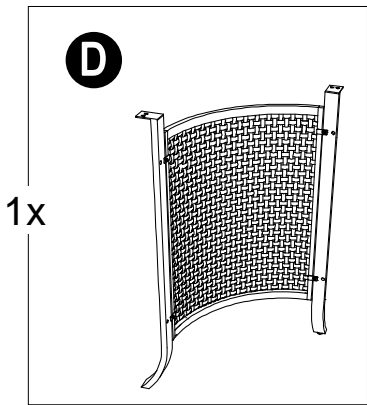


"UUBDIFE 4JEF QBOFM & UP 3FBS EPPS %
XJUI#PMU)BOE 'MBU XBTIFS
.) UJHIUFO UIF CPMUT UP EFQUI XJUI
8SFODI)8

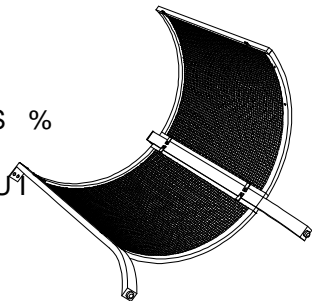




STEP2

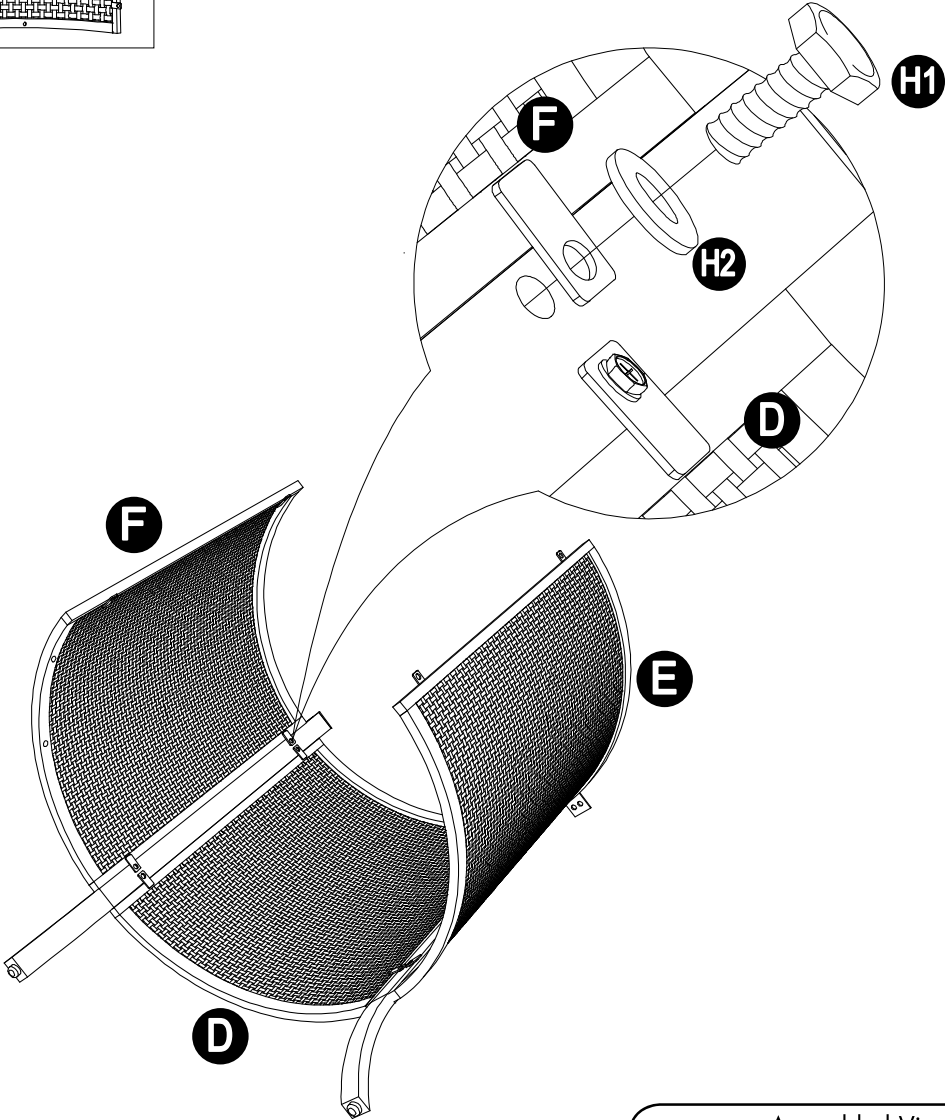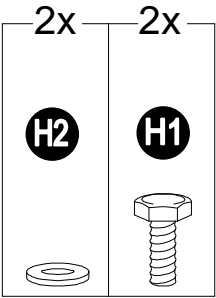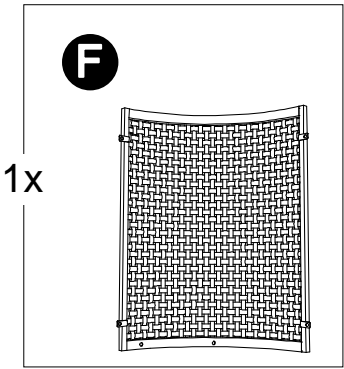


" W D F B F C F M ' D B B B P S %
X J I P W B O ' M B B F S .)
U H U F I O C F M U E Q I U X J I
8 F O) 8

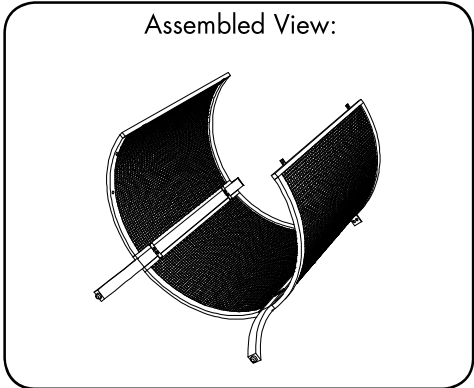

STEP 3

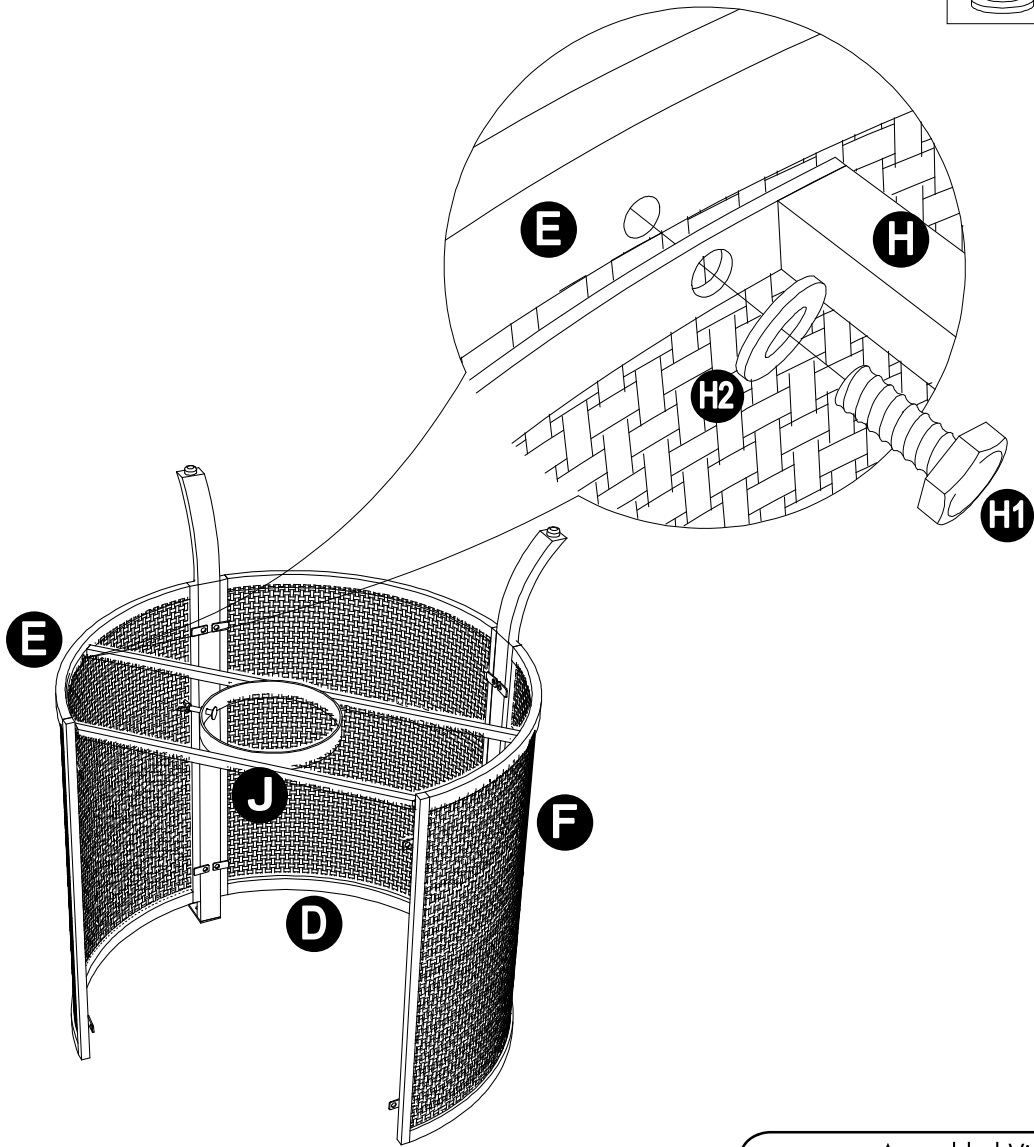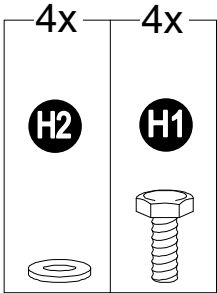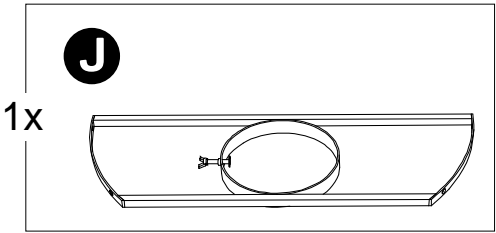

Assembled View:

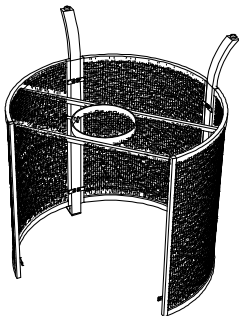

"UUBDIFE \$ZMJOEFS SBDL + UP UIF BTTFNOMFE
4JEF QBOFM & ' XJUI #PMU) BOE 'MBU
XBTIFS .) UJHIUFO UIF CPMUT UP
EFQUI XJUI 8SFODI)8