



ASSEMBLY INSTRUCTIONS

ITEM# : GB22-813

SKU# : 810555269

ASHEVILLE ALL WEATHER WICKER LOVE SEAT WITH CUSHION

Need help? We are here for you! 1-888-733-8169 Toll Free

Or email us at customerservice_01@yeah.net, customerservice_02@yeah.net

customerservice_03@yeah.net

GENERAL BEST PRACTICE FOR ASSEMBLY:

- Read all instructions before starting
- Clear a flat covered space to begin assembly
- Always best to do it with a friend
- Note that hardware required is provided for every step
- Pay attention to orientation
- Helpful hints provided along the way
- Retain these assembly instructions for future reference.

WARNINGS:

Use the correct bolts as indicated. All bolts should be hand tightened until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tighten all bolts with provided tool.

Regularly check hardware and tighten if necessary.

Use the correct bolts as indicated. **Do not fully tighten any of the bolts until the sofa is completely assembled.**

Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

Keep children and pets away during assembly. This item contains small parts that can be swallowed by children.

Children should always be under direct adult supervision while using this product.

Sofa is for sitting purposes only. Standing on or misuse of sofa may result in damage or injury.

Weight limit is 500 lbs (227.3 kg). Not intended for commercial use.

MAINTENANCE:

Wash frame and fabric parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame or fabric parts.

The cushions may be washed on the surface only by using mild soap and water or a commercial foaming upholstery cleaner if necessary.















If washed, rinse well and hang to dry. Do not machine wash or dry.

We recommend the use of furniture covers when not in use.

Inspect and tighten all of the bolts and fasteners on a regular basis to ensure the proper performance and safety of your product.

In order to prolong the life and beauty of your product, we recommend that it be stored in a dry and protected area during off season periods.

PARTS LIST:

Part No.	Part	Qty	Image	Part No.	Part	Qty	Image
1	Sofa Back	1		R5	Right Armrest Support (with two threaded hole)	1	
2	Seat Panel Frame	1		6	Short Bolt (M6x20mm)	8	
L3	Left Armrest	1		7	Bolt (M6x36mm)	12	
R3	Right Armrest	1		8	Bolt (M6x44mm)	2	
L4	Left Armrest Support (with one threaded hole)	1		9	Washer	22	
R4	Right Armrest Support (with one threaded hole)	1		10	Back Cushion	2	
L5	Left Armrest Support (with two threaded hole)	1		11	Seat Cushion	2	


 



Tools



STEP 1

PART REQUIRED: L3, R3, L4, R4, L5 & R5

Keep the bolts loose.

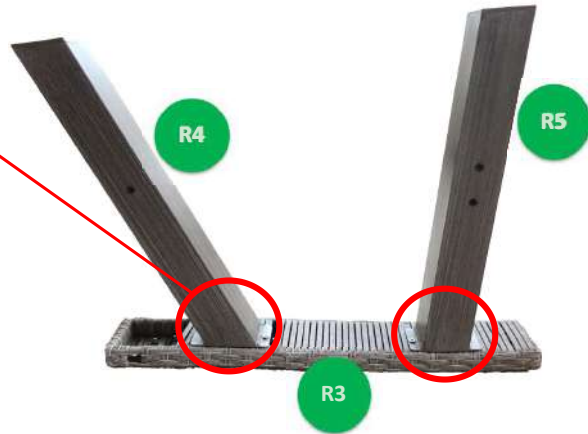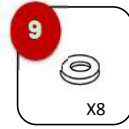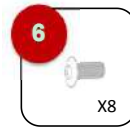
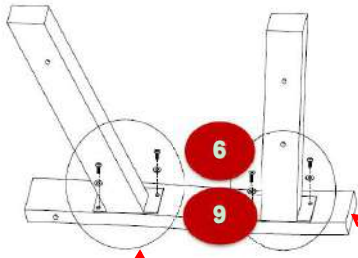


Note: After assembled, keep all the threaded holes inwards.

STEP 2


PART REQUIRED: 1 & 2

Keep the bolts loose.

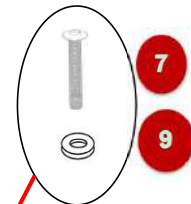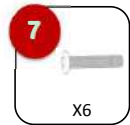


STEP 3

PART REQUIRED: 1, 2, L3, R3, L4, R4, L5 & R5
Keep the bolts loose.

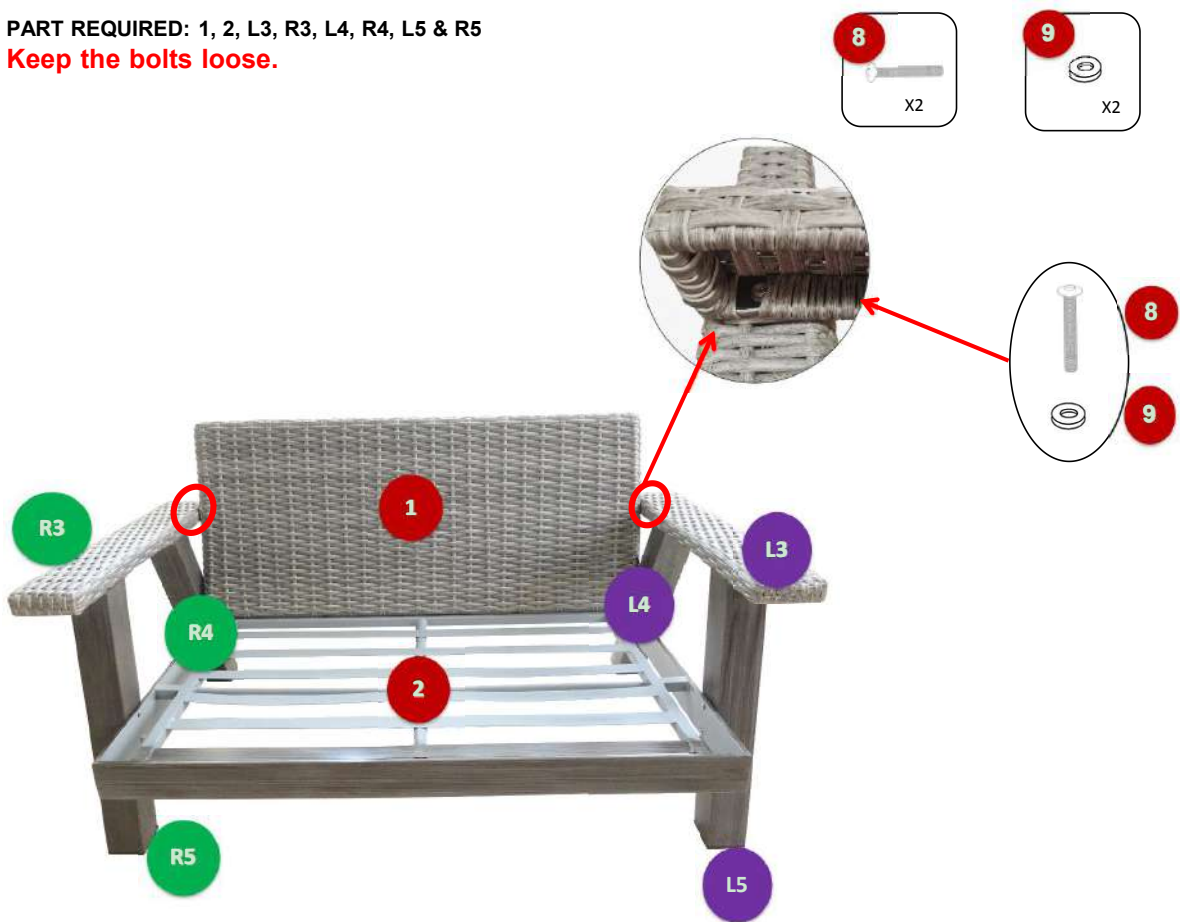


STEP 4

PART REQUIRED: 1, 2, L3, R3, L4, R4, L5 & R5
Keep the bolts loose.

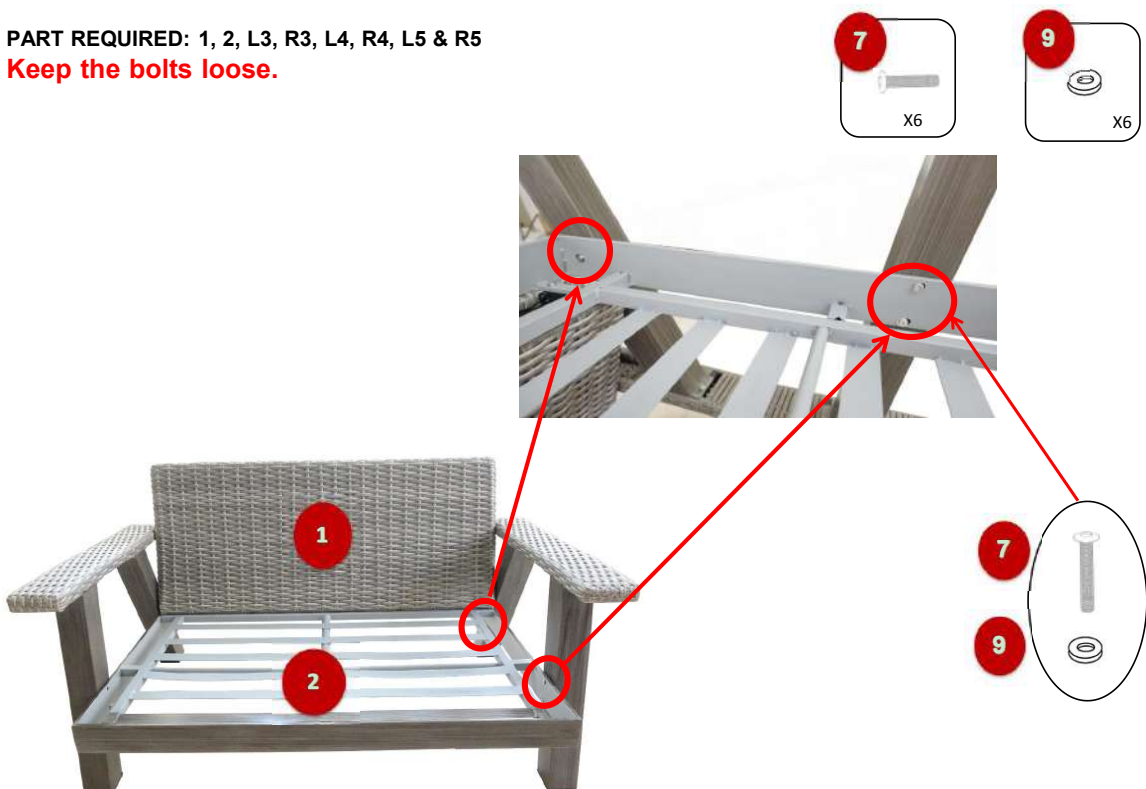

STEP 5

PART REQUIRED: 10 & 11
Finished!

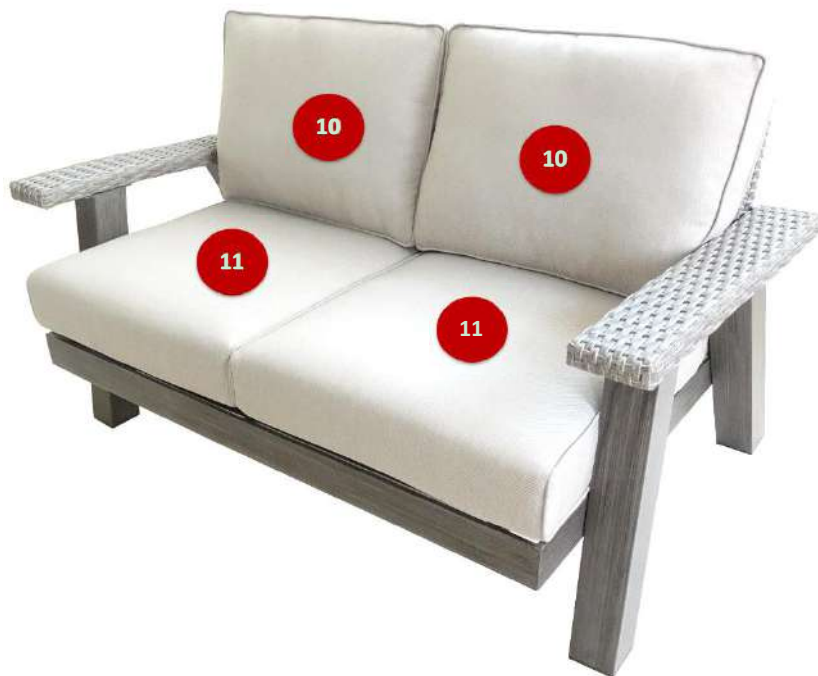

Warranty

One-year limited warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

It remains the customer's responsibility for freight and packing charges to and from the service center.