

21x28.5cm

6 x 9 Sports Shelter Instruction Manual

We advise that you assemble the tent at least once before use to assure that all parts are present and to become familiar with the assembly of the tent. To prolong the life of the tent floor, select a level, clean area for assembly.

2 persons recommended for assembly.

SETTING UP

Step 1: Place your Sports Shelter in the center of area to be shaded. Spread out the tent and lay out the poles and tent pegs on site.

Step 2: Assemble the shock corded poles and then push the pole carefully through the fabric pole sleeve located at the top of the tent. Locate the pins at the corners and insert the pins into the end of the pole. See Figure 1. Repeat for the 2nd pole.

Step 3: Tie up poles at cross area with fabric strap attached to the tent. Attach the quick clips to the poles. See Figure 2.

Step 4: Stake the tent to the ground by driving the stakes at an angle through the rings of each pin-ring.

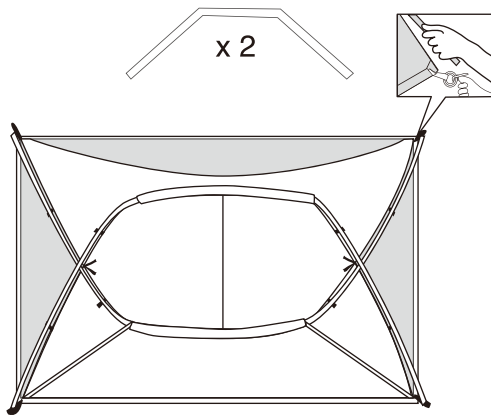


Figure 1

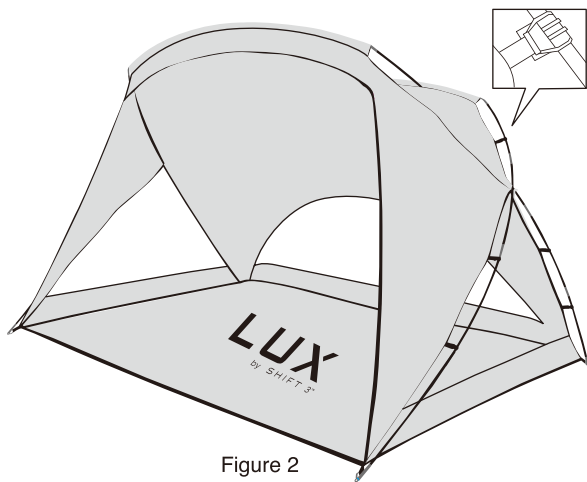


Figure 2

STRUCTURAL INTEGRITY:

Although our tents are constructed to rigid specification, periods of wind or rain soaking the ground may loosen the stakes. This will weaken the rigidity of the overall structure. If the unit is not assembled taut, water pockets may also form in the roof, the weight of which may cause broken frames and torn fabric.

⚠ WARNING

Keep all flame and heat sources away from fabric. This fabric meets flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame sources. The application of any foreign substance to fabric may render the flame-resistant properties ineffective.

TAKING DOWN

Step 1: Collapse the tent, removing and disassembling the poles. Place the poles in the pole storage bag and tie up.

Step 2: Remove stakes. Do not pull on the stakes loops, as this may cause the stake loops to tear out of the seam.

Step 3: Spread tent out flat, with all loose fabric within the edges of the tent.

Step 4: Fold the tent as neatly as possible, compressing the tent while folding to make sure the air is forced out of the tent. Fold the tent so the width is same size as the length of the pole bag.

Step 5: Begin to roll your tent up by placing the tent pole bag on top of the tent on one end and roll the tent around the pole bag, forcing out excess air as you roll.

Step 6: When tent is rolled up, tie strap around it and place it into the tent carry bag, with stake bag, and instruction sheet.

NOTE:

Never fold and store tent while the fabric is damp. If it is damp, try to dry it completely before storing to prevent mildew and damage to the tent.

CARE INSTRUCTIONS:

Your tent is made of durable polyester fabric. No tent fabric can withstand prolonged exposure to the sun's ULTRAVIOLET (UV) light and polyester fabric will quickly degrade with constant, long-term exposure to sunlight. Take your tent down and store when not in use.

STORAGE:

Never roll up or pack a tent that is damp, as mildew will form. Allow tent to dry completely before rolling and storing.

- Exercise care when using electricity and lighting in or near tent.
- Disassemble and store tent properly after use to ensure the tent's longevity.
- Always use a hammer/mallet when driving stakes into ground.

IMPORTANT:

- DO NOT pitch tent near an open flame.
- DO NOT leave campfires unattended, always extinguish campfire before leaving area.
- DO NOT allow CHILDREN or ADULTS to use lighted candles, matches or other flame sources in or near tent.
- DO NOT use heating, lighting or cooking equipment with open flame in or near tent.
- DO NOT use other-than-recommended water-repellent compounds on your tent.
- DO NOT spray the tent with insecticide.

EXTREME CAUTION: Never use any fuel-burning, oxygen-consuming devices (i.e., heaters, lanterns, or other flame sources), or any device that produces fumes/flames (i.e., stoves, candles, hibachis, etc.) in or around your tent. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.