


BIG LOTS U.S.A

ASSEMBLY INSTRUCTIONS

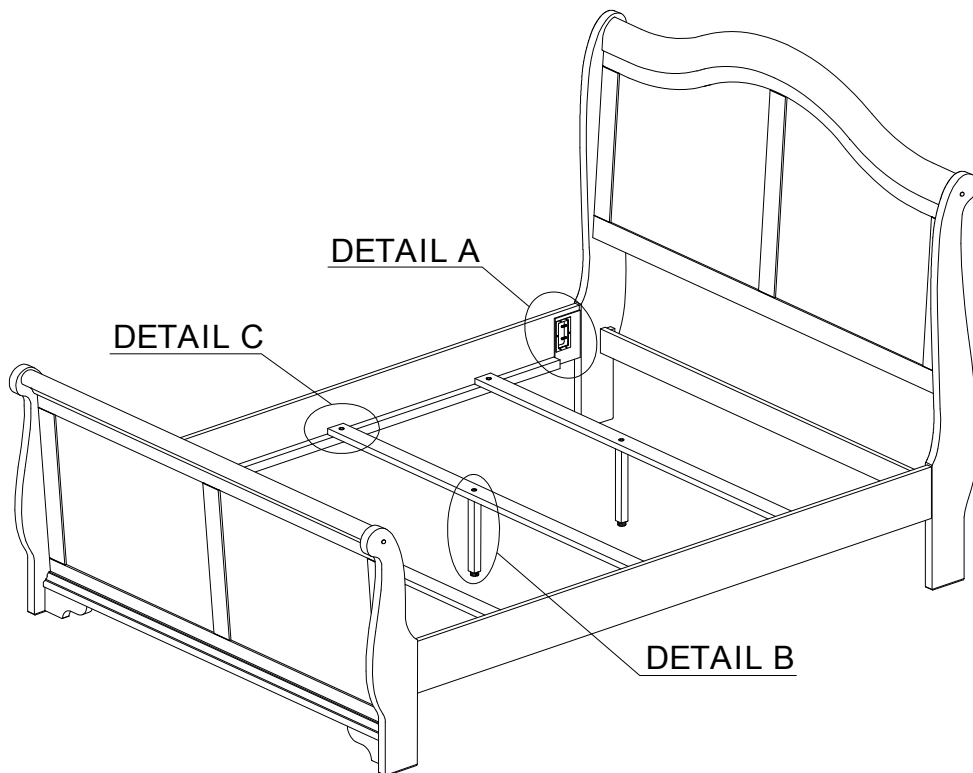

ITEM NO. : B1128-510

SKU NO. : 612010425

BIG LOTS CUSTOMER CARE

For spare screws and bolts, please contact Big Lots Customer Care

Tel: 1-866-244-5687 E-Mail: talk2us@biglots.com


Assembly Instructions

Item No. : B1128-510


SKU No. : 612010425

Description: HENRY QUEEN RAILS/SLAT


WOOD PART LIST

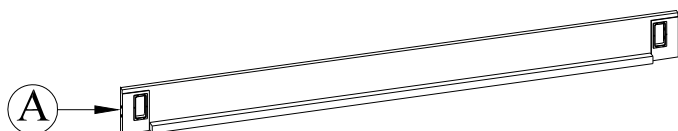

Right rail x 1 pc

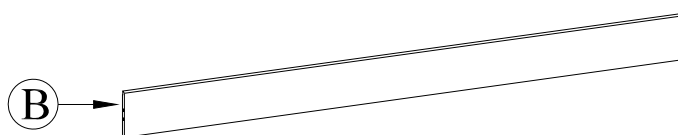

Left rail x 1 pc



Slat x 3 pcs



Slat support x 3 pcs







Assembly Instructions

Item No. : B1128-510



SKU No. : 612010425

Description: HENRY QUEEN RAILS/SLAT

HARDWARE LIST


1		Thread Bolts Ø5/16" x L3"-1/2"	8pcs
2		Hexagonal Nut Ø5/16"(D12 x H6mm)	8pcs
3		Lock Washer:Ø5/16" x Ø14 x 1mm	8pcs
4		Flat Washer:Ø5/16" x Ø14 x 1mm	8pcs
5		Allen Wrench Ø5/16"(D12mm)	1pc
6		Wood Screws Ø8 x L32mm	6pcs

DETAIL A

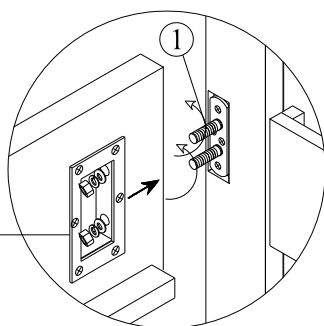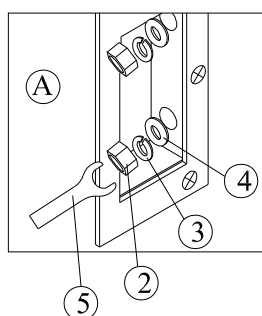

STEP 1


- Set up the Headboard on a solid non-abrasive surface such as carpet or a cloth to prevent scratching the bed finish. Insert the threaded bolt 5/16" x L3"-1/2" into the pre-threaded holes of the Headboard post then securely tighten the Side Rail to the Headboard post by using Hexagonal nut 5/16". (See DETAIL A)

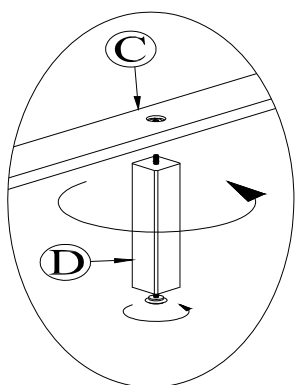

DETAIL B

STEP 2

- Insert exposed threads in leg supports into the pre-threaded holes in center support slat. Secure by turning in counter clockwise direction.(See DETAIL B)

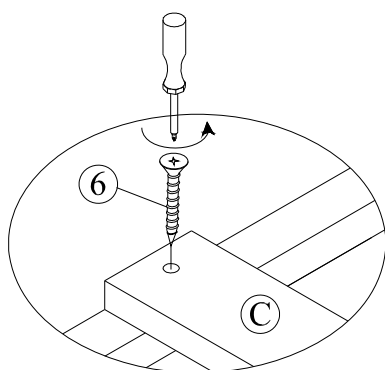

DETAIL C

STEP 3

- Align the pre-drilled holes in the support slats with the cleat rail of Side Rails. Secure with phillips head wood screw using phillips head screwdriver (not enclosed). (See DETAIL C)