

BLACK 3 PC VANITY SINGLE MIRROR SET

ASSEMBLY INSTRUCTIONS

ITEM#: BL-VY-B-SM-3A

SKU#: 810527599

Need help? We are here for you! www.biglots.com/help/contact-us

GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to be in

You will need two adults to assemble this item

Note that hardware required is provided for every step

Pay attention to orientation

Letter of the part corresponds to a sticker on the product

Number of the hardware corresponds to its number in the package

Helpful hints provided along the way

A philips head screwdriver is necessary for assembly but is not included.

WARNINGS:

Two adults required for assembly. Please insure all parts, hardware and tools are unpacked and verified before starting assembly.

Serious injury or death may result if this product topples over. To prevent serious injury or death, this product is equipped with a wall anchoring system.

Before this product can be used, the wall anchoring system must be installed as directed in the assembly instructions.

DO NOT place heavy items such as TVs on this product. This could lead to tip over causing serious injury or death.

Stop using the product if any parts are missing or damaged.

Children should only use this product with adult supervision. DO NOT allow children to climb or play on this product as it may cause tipover resulting in serious injury or death.

During assembly, keep all small parts out of the reach of children. Small parts present a choking hazard and may cause serious injury or death.

Keep all parts off packaging materials (films, plastic bags, foam bards, etc.) out of reach off children, especially toddlers and babies to avoid any potential danger (such as suffocation).


Care should be taken when using sharp objects around this product as they may damage the product surface.

MAINTENANCE:

Check bolts/screws periodically and tighten if necessary.

Carefully wipe with soft cloth.


PARTS LIST

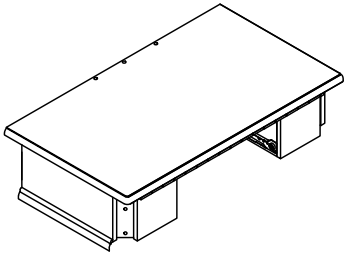

A

X1


Top Panel

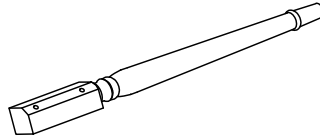

B

X4


Table Legs

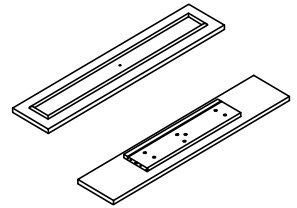

C

X1


Drawer Front

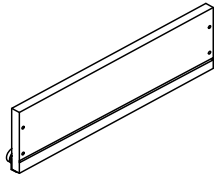

D

X1


Drawer Right Side

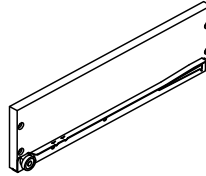

E

X1


Drawer Left Side

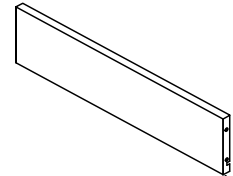

N

X1


Drawer Back

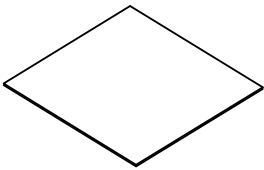

F

X1


Drawer Bottom

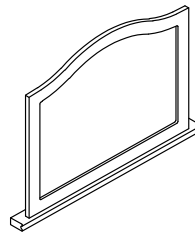

G

X1


Mirror Frame

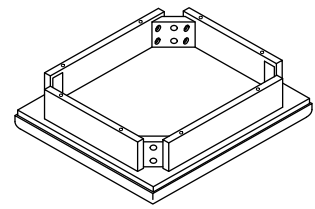

H

X1

Stool Cushion




I

X4


Stool Legs

HARDWARE LIST

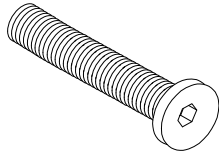


1

X16
Ø1/4" x 2"
Allen Bolt

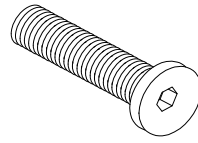

2

X3
Ø1/4" x 1-1/2"
Allen Bolt




3

X16
Ø1/4" x Ø19
Flat Washer



4

X19
Ø1/4" x Ø11
Spring Washer

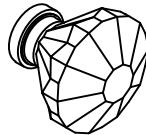

5

X1
Ø30" x Ø30 x 32mm
Knob




6

X1
Ø5/32 x 30mm
Bolt



7

X1
4 x 60mm
Allen Key




8

X8
#8 x 25mm
Screw



9

X3
Ø1/4" x Ø16
Flat Washer

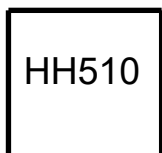


10

X1 Bag
Anti-tipping Kit

HELPFUL HINTS



CARE AND CLEANING

Treat upholstered surfaces with care. Clean any spills immediately using a clean, slightly dampened cloth and dabbing the area until the spill is removed. DO Not use any chemical cleaners. Hardware may loosen over time. Periodically check all bolts and fully tighten any that are loose.

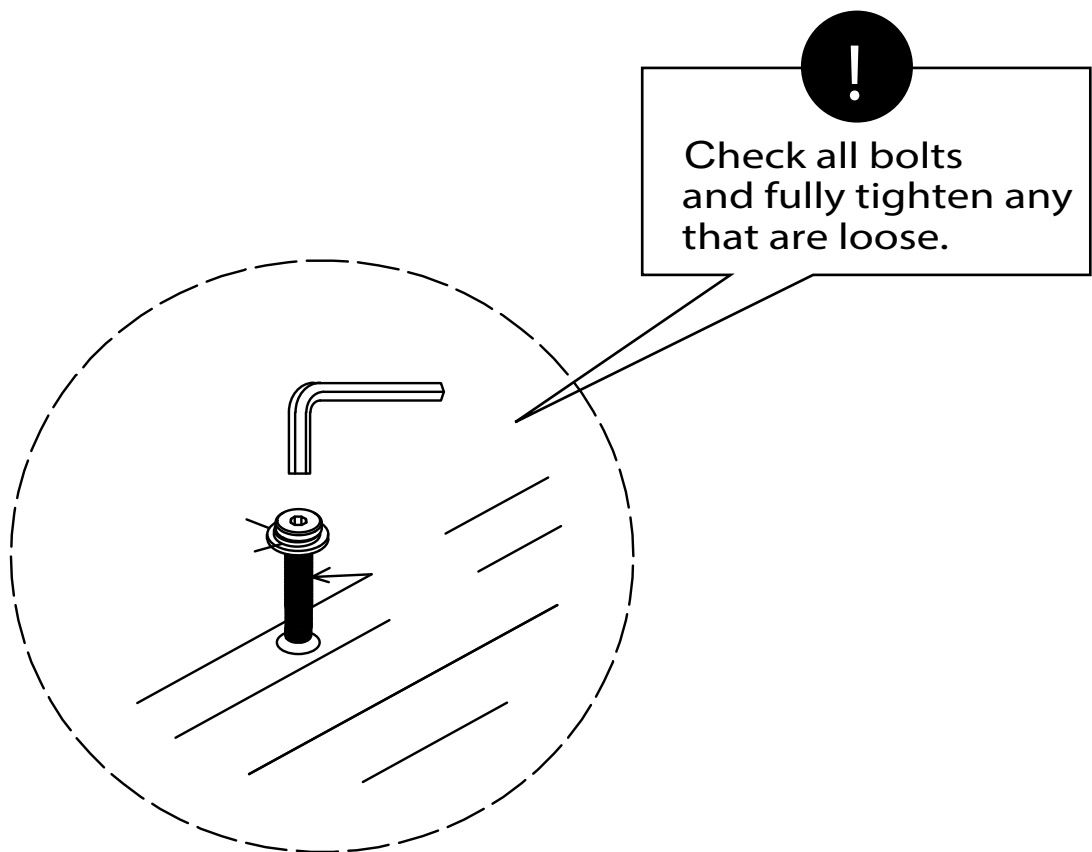


STEP 1

Carefully place the Top Panel (A) upside down on a soft smooth surface to avoid scratching the surface. Attach Table Legs (B) to Top Panel (A) with Allen Bolt (1), Spring Washer (4) and Flat Washer (3) using Allen Key (7). Ensure the legs are straight and fully tighten the bolts.

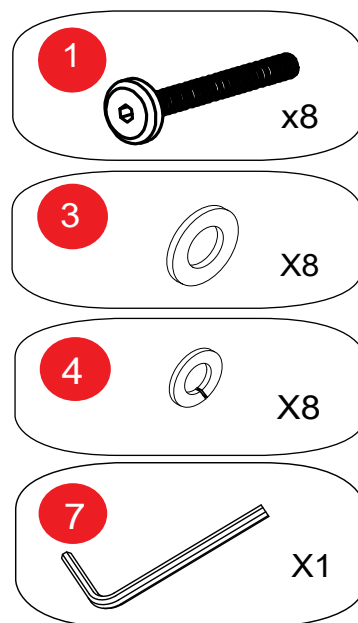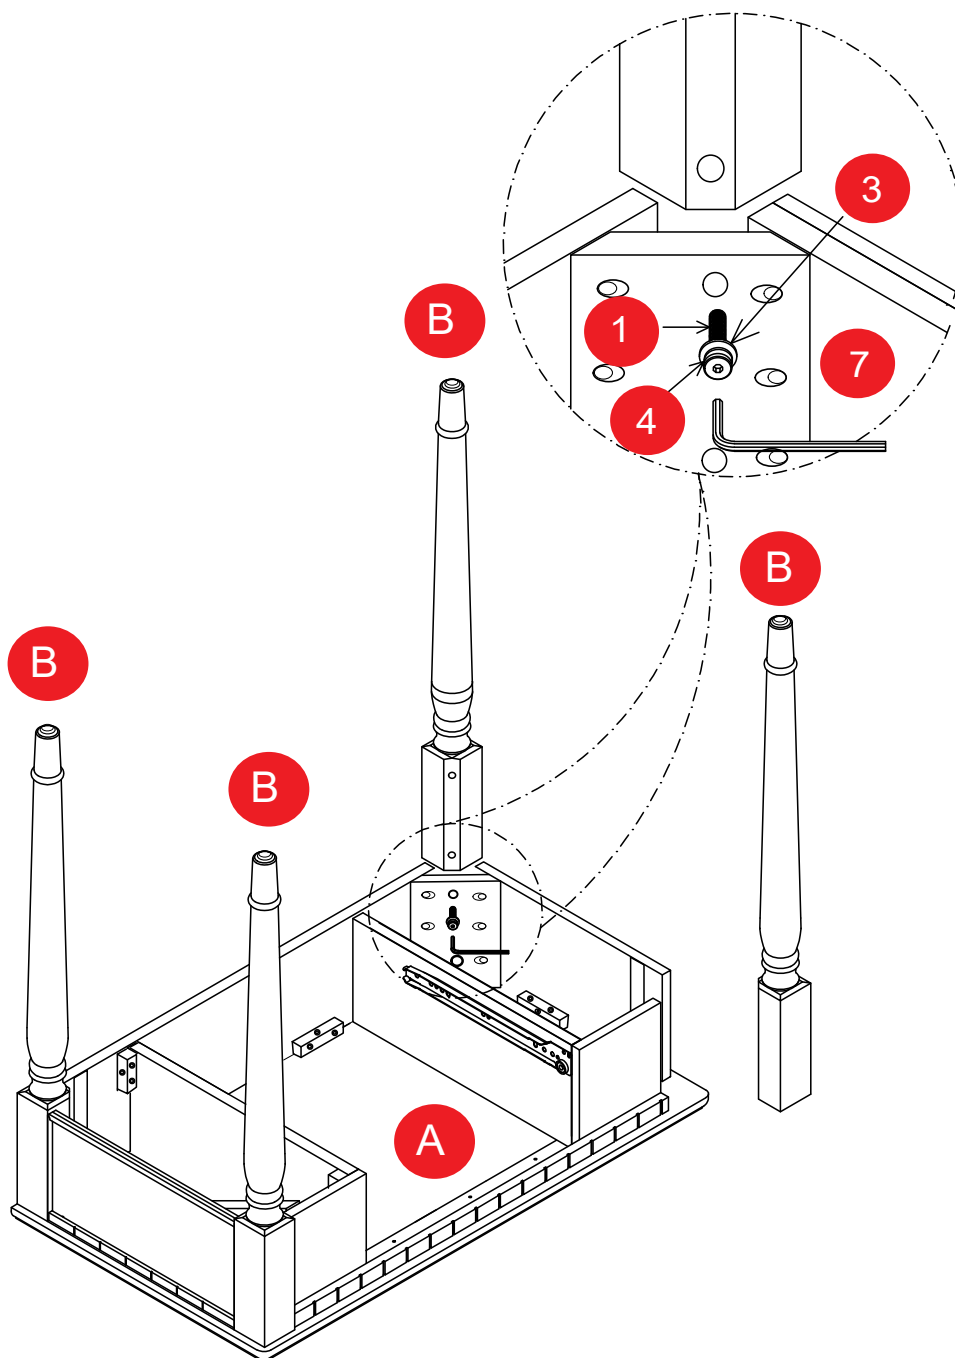


Assembled View:

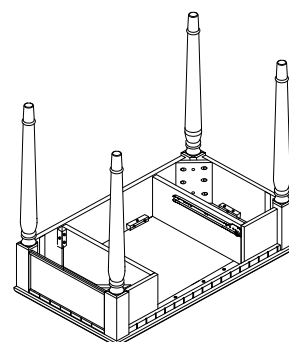


STEP 2

Attach the Drawer Right Side (D) and Drawer Left Side (E) to the Drawer Front (C) with Screw (8) using Phillips screwdriver (not included). Fully tighten screws. Insert the Drawer Bottom (F) into the groove of Drawer Right Side (D) and Drawer Left Side (E) until fully inserted into the groove of Drawer Front (C). Attach the Drawer Back (N) to Drawer Right Side (D) and Drawer Left Side (E) with Screw (8) using Phillips screwdriver (not included). Fully tighten all screws.


8

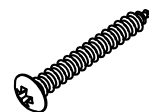


X8

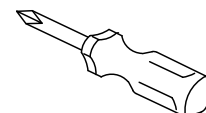

Screwdriver
(Not included)




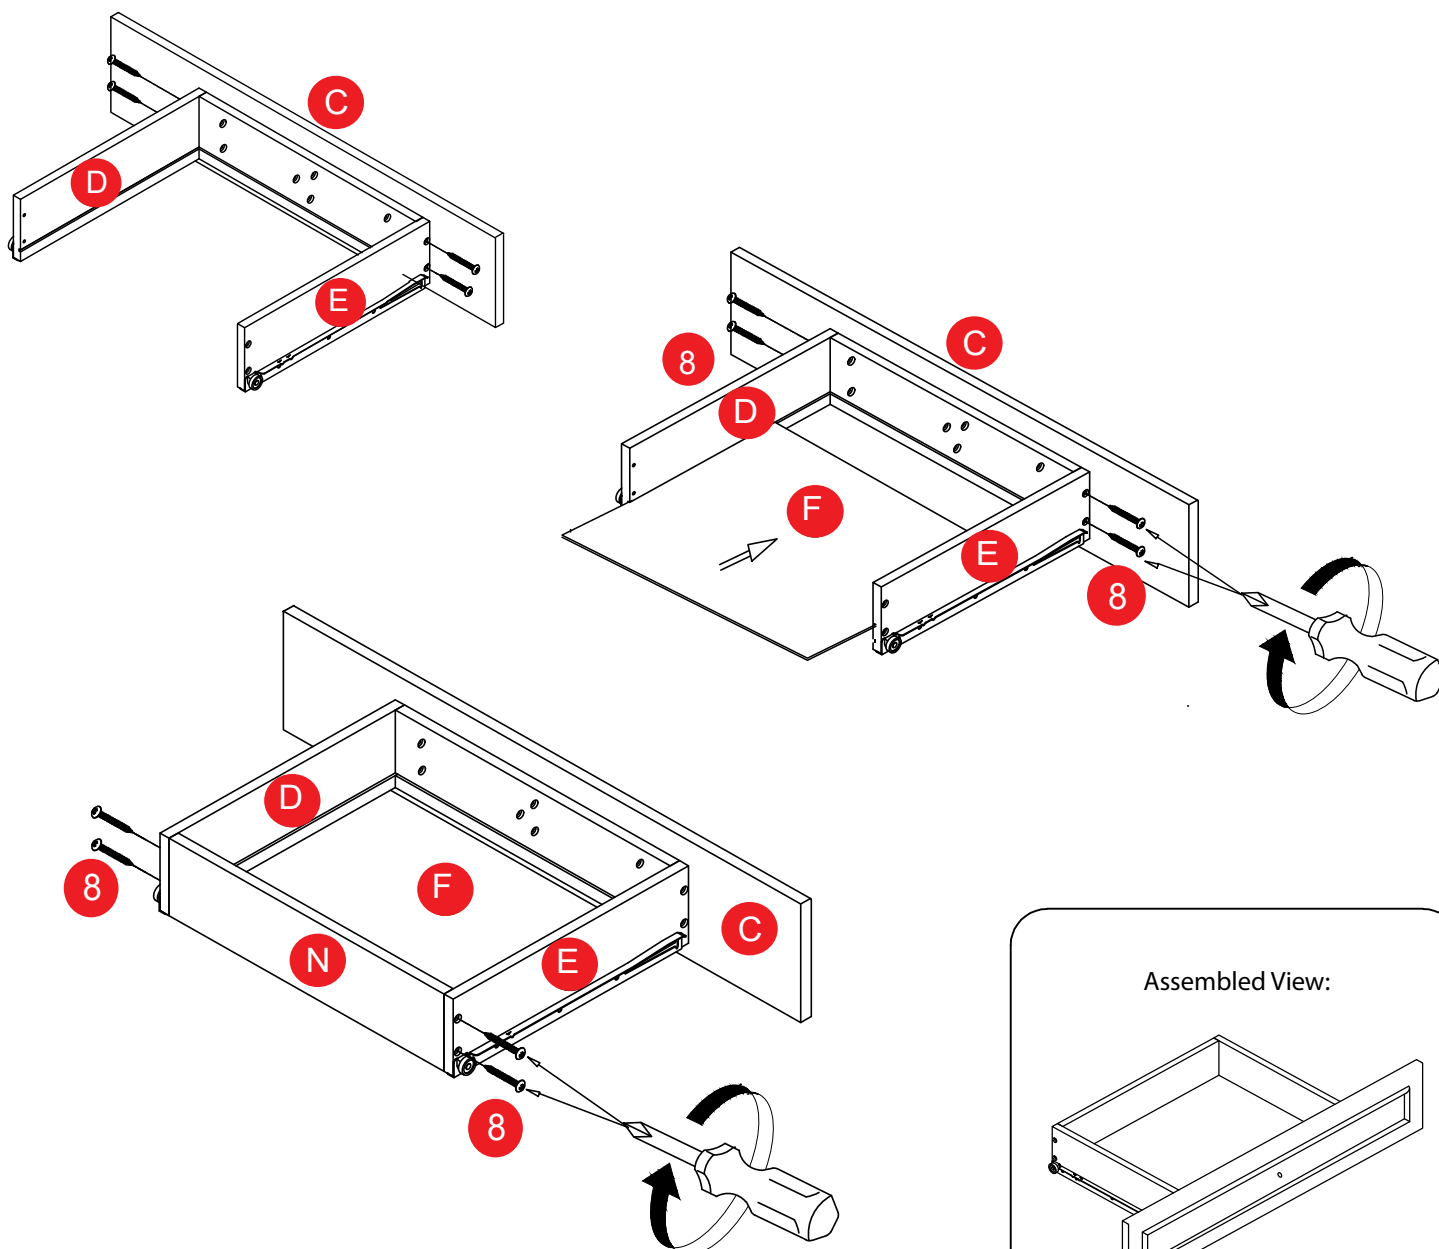


Assembled View:

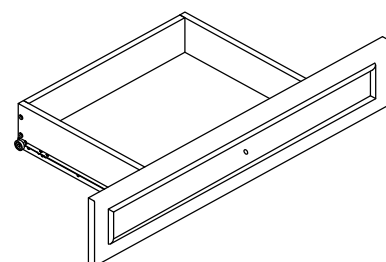


STEP 3


Attach the Knob (5) to Drawer Front (C) with Bolt (6) using Phillips screwdriver (not included) and fully tighten.

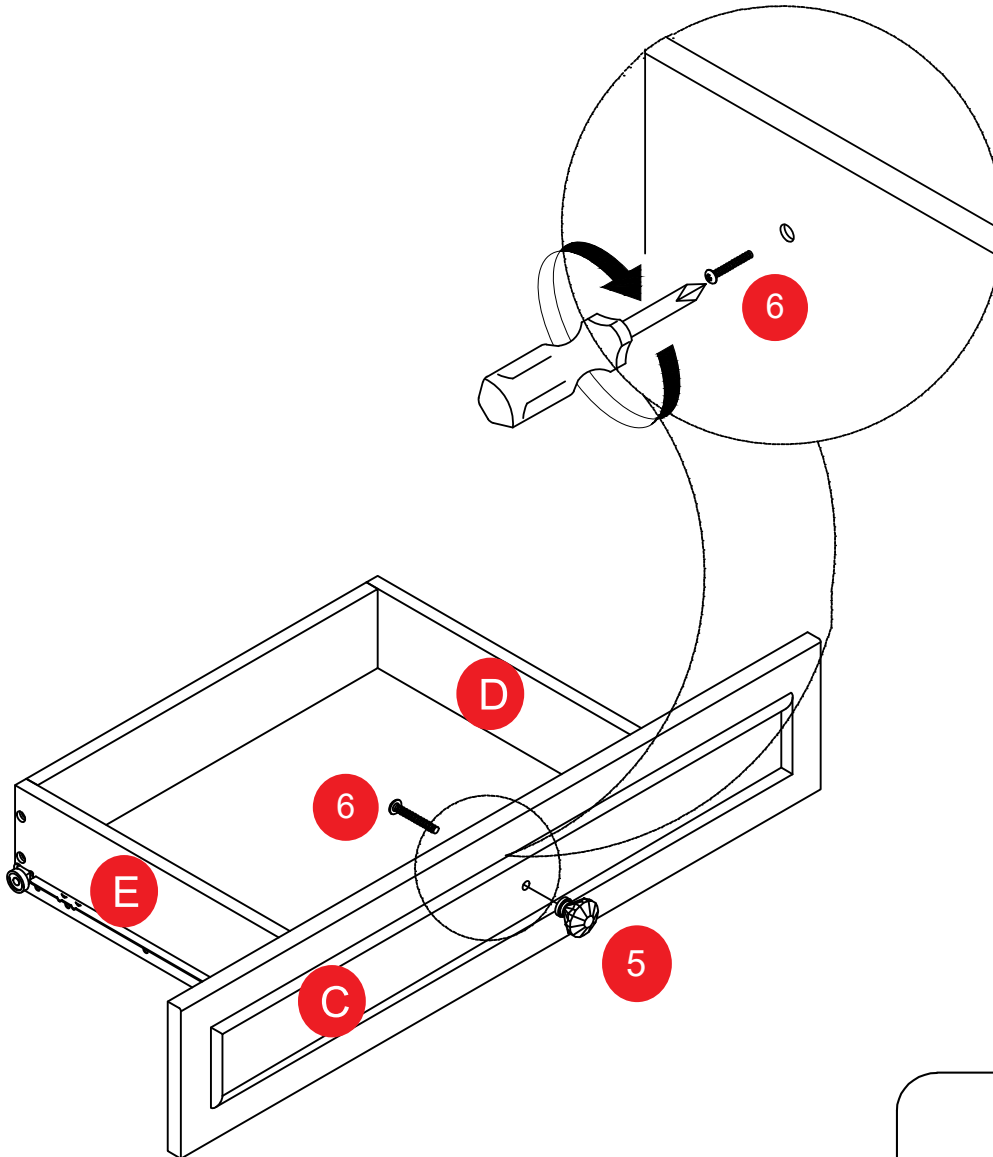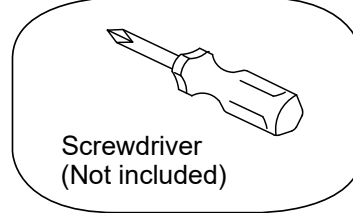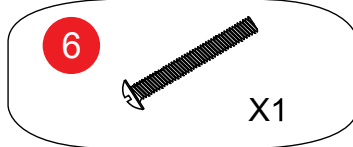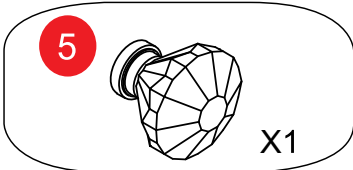

Assembled View:

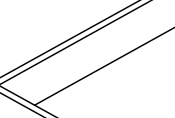


An isometric line drawing of the assembled drawer unit. The drawer is shown partially open, revealing its internal structure. The front panel features a recessed rectangular area with a small, dark, circular knob or handle. The side panel also has a similar recessed area. The unit is shown from a perspective that highlights its three-dimensional form.

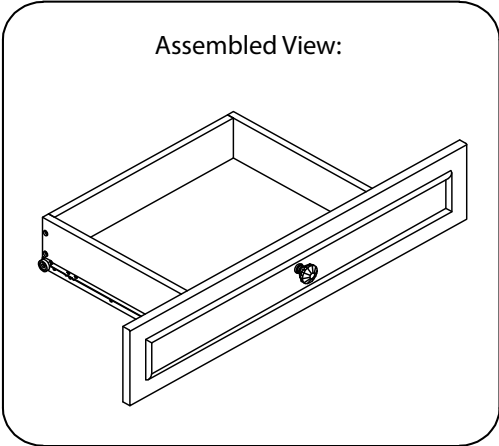


STEP 4

With assistance from the other adult, return the assembled table to the upright position. Insert the assembled drawer into the table.





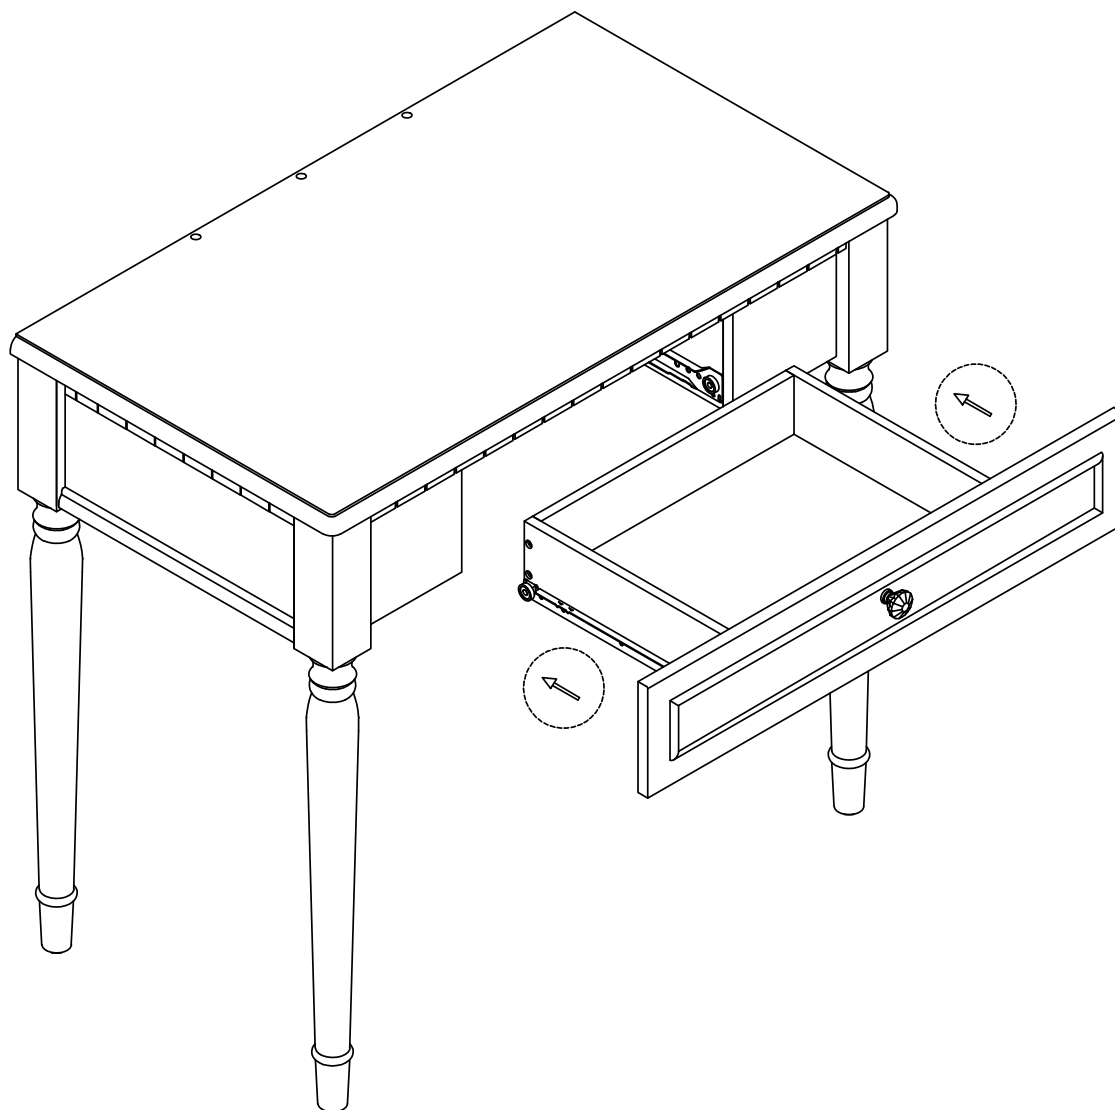


Assembled View:

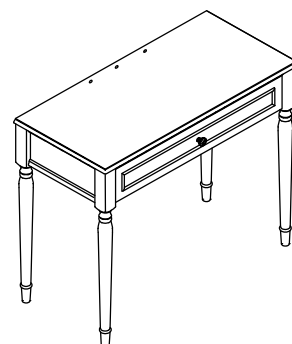


STEP 5

Attach the Assembled Mirror (G) to the Table Top with Allen Bolt (2), Spring Washer (4) and Flat Washer (9) using Allen Key (7). Fully tighten all bolts.


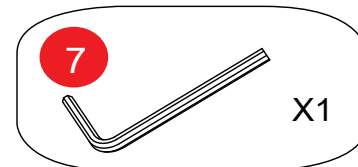
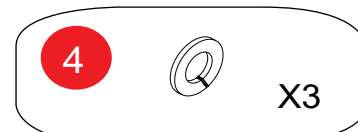
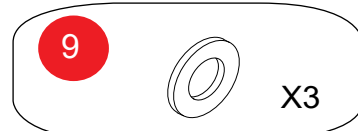
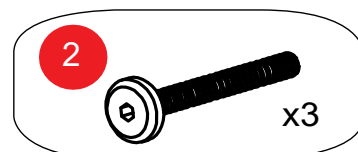
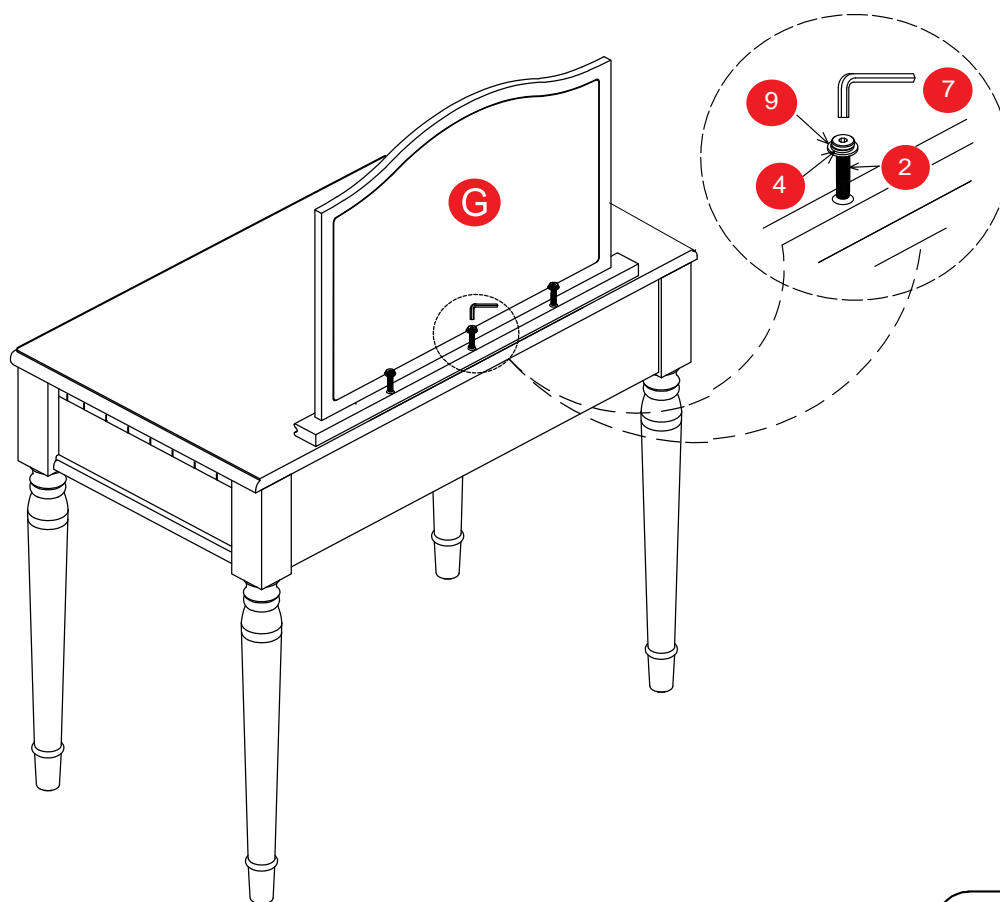


Assembled View:

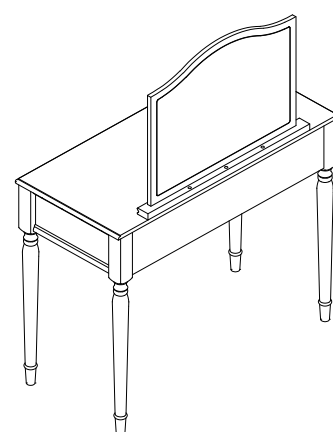


STEP 6

Place the Stool Cushion (H) upside down. Attach Stool Legs (I) to Stool Cushion (H) with Allen Bolt (1), Spring Washer (4) and Flat Washer (3) using Allen Key (7). Ensure Legs are straight and fully tighten all bolts.

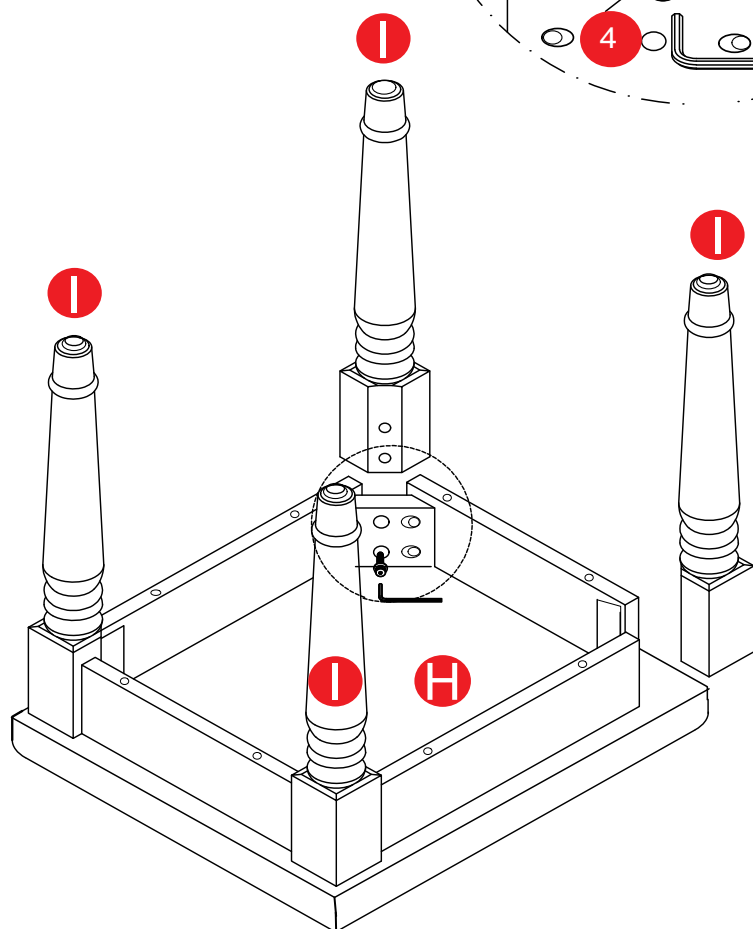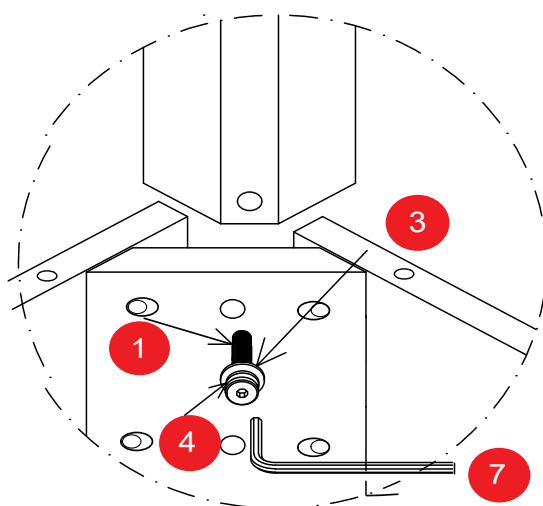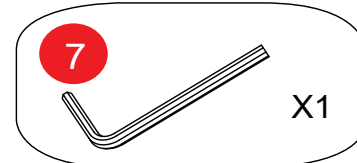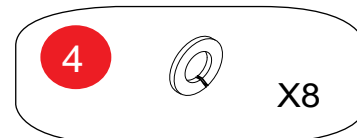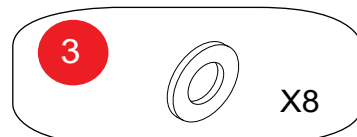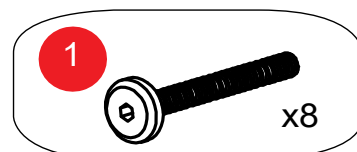

Assembled View:

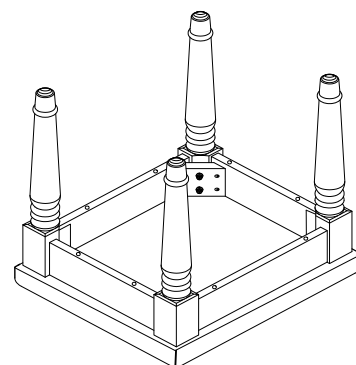

STEP 7

Install the Anti-tipping Kit (10) to secure the vanity to the wall and prevent tip over.

Install one bracket in the top center of the table back using one of the provided screws.

Place the vanity in the desired location and mark where the installed bracket meet the wall.


Remove the table and attach the remaining bracket to wall at the marked location.

Attach the bracket on the vanity to the bracket on the wall using the plastic strap.


10

HH510


X1 Bag

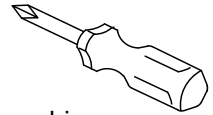

Screwdriver
(Not included)

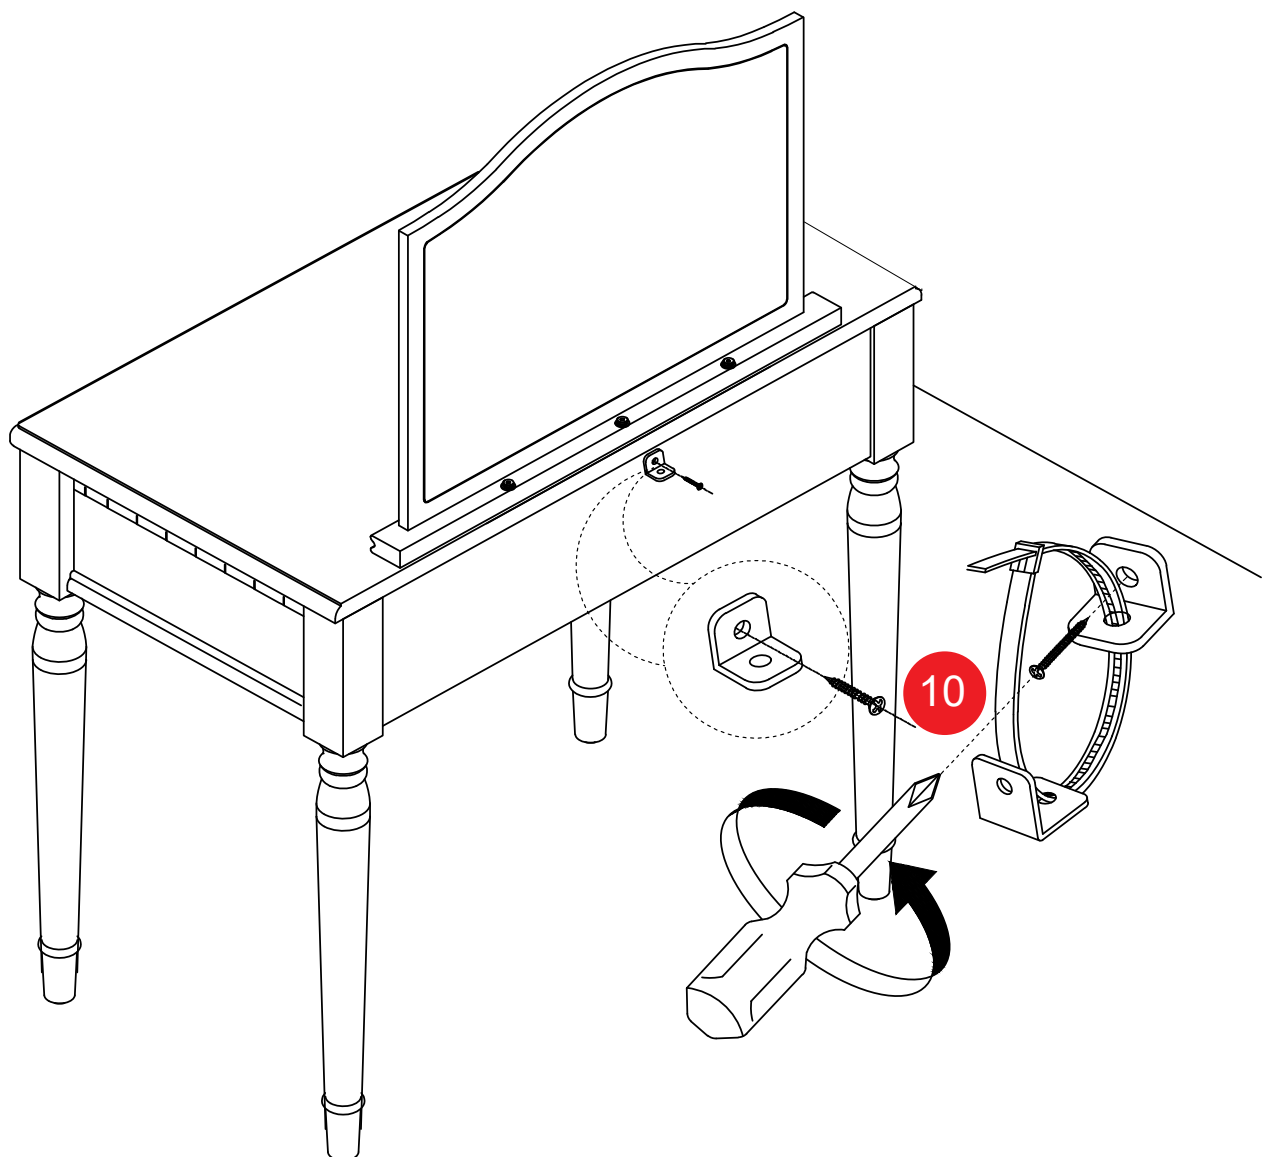

STEP 8

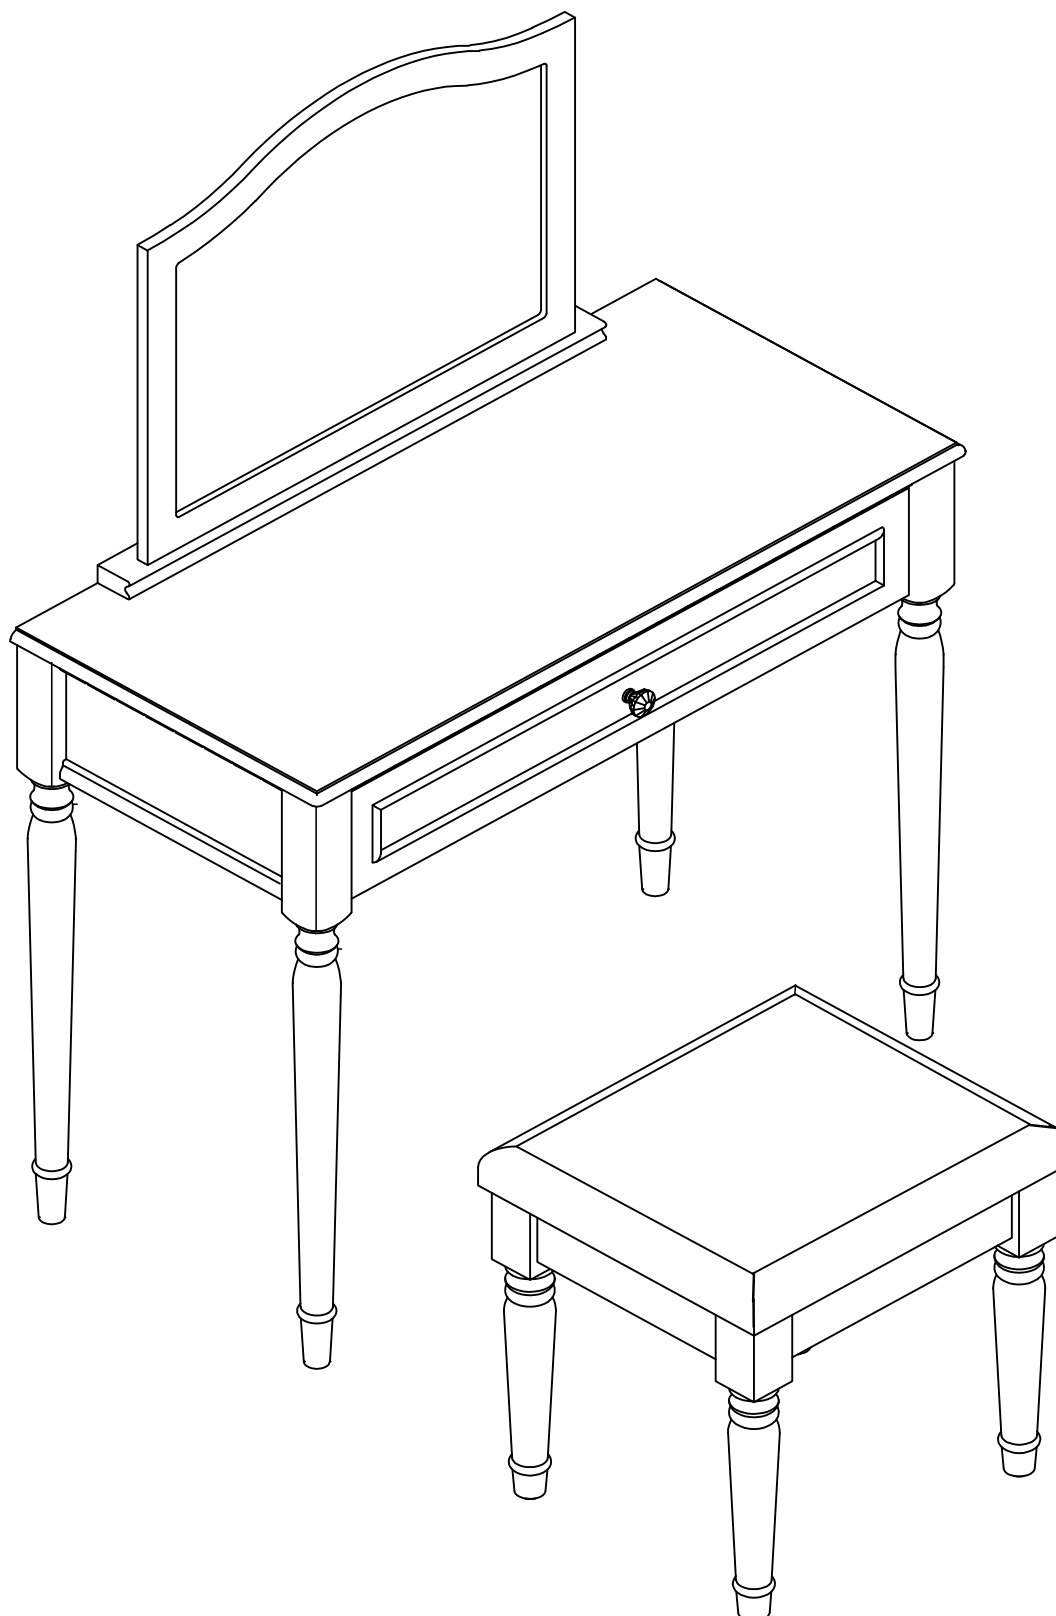

Assembly is now complete.

PRINTED IN VIETNAM