

RUSTIC 5-SHELF BOOKCASE

ASSEMBLY INSTRUCTIONS

ITEM# ZS008R-20MM KD / ZS008B-20MM KD / ZS008W-20MM KD
SKU# 810343917 / 810534675 / 810534676

Need help? We are here for you!
www.biglots.com/help/contact-us

GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to assemble

We recommend two people for assembly

Note that hardware required is provided for every step

Pay attention to orientation

Letter of the part corresponds to a sticker on the product

Number of the hardware corresponds to its number in the package

Helpful hints provided along the way

MAINTENANCE:


Regularly check hardware and tighten if necessary

CARE AND CLEANING:

Clean periodically by wiping the product with a soft clean cloth

DO NOT use abrasive chemicals for cleaning


PARTS LIST



A

x1


LEFT BOTTOM FRAME



B

x1


LEFT TOP FRAME



C

x1


RIGHT BOTTOM FRAME



D

x1


RIGHT TOP FRAME

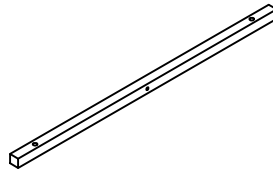

E

x1


TOP BACK CROSS BAR

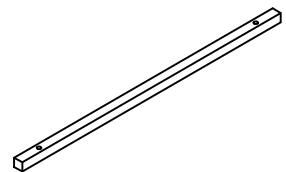

F

x1


TOP FRONT CROSS BAR

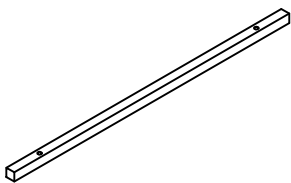

G

x4


SHELF CROSS BAR

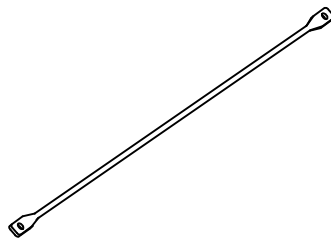

H

x4


REAR X STEEL BAR

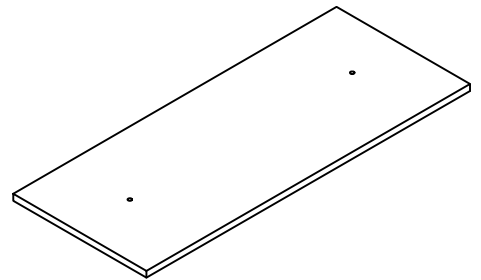

I

x4

SHELF PANEL

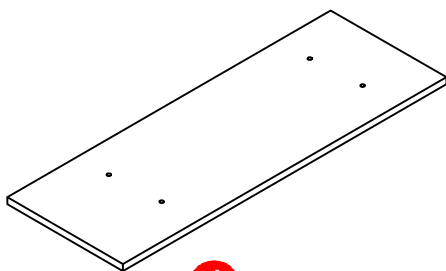

J

x1

TOP PANEL


HARDWARE LIST



1

x8

ALLEN BOLT



2

x4

ALLEN BOLT



3

x12

ALLEN BOLT



4

x1

ALLEN BOLT



5

x5

PHILLIPS SCREW



6

x1

NUT



7

x8


ALLEN BOLT



8

x1

ALLEN WRENCH



9

x1


OPEN END WRENCH



10

x2


OPEN END WRENCH



11

x1


ANTI-TIPPING STRIP



12

x2


WALL ANCHOR



13


x1

SCREW




NOT INCLUDED


STEP 1

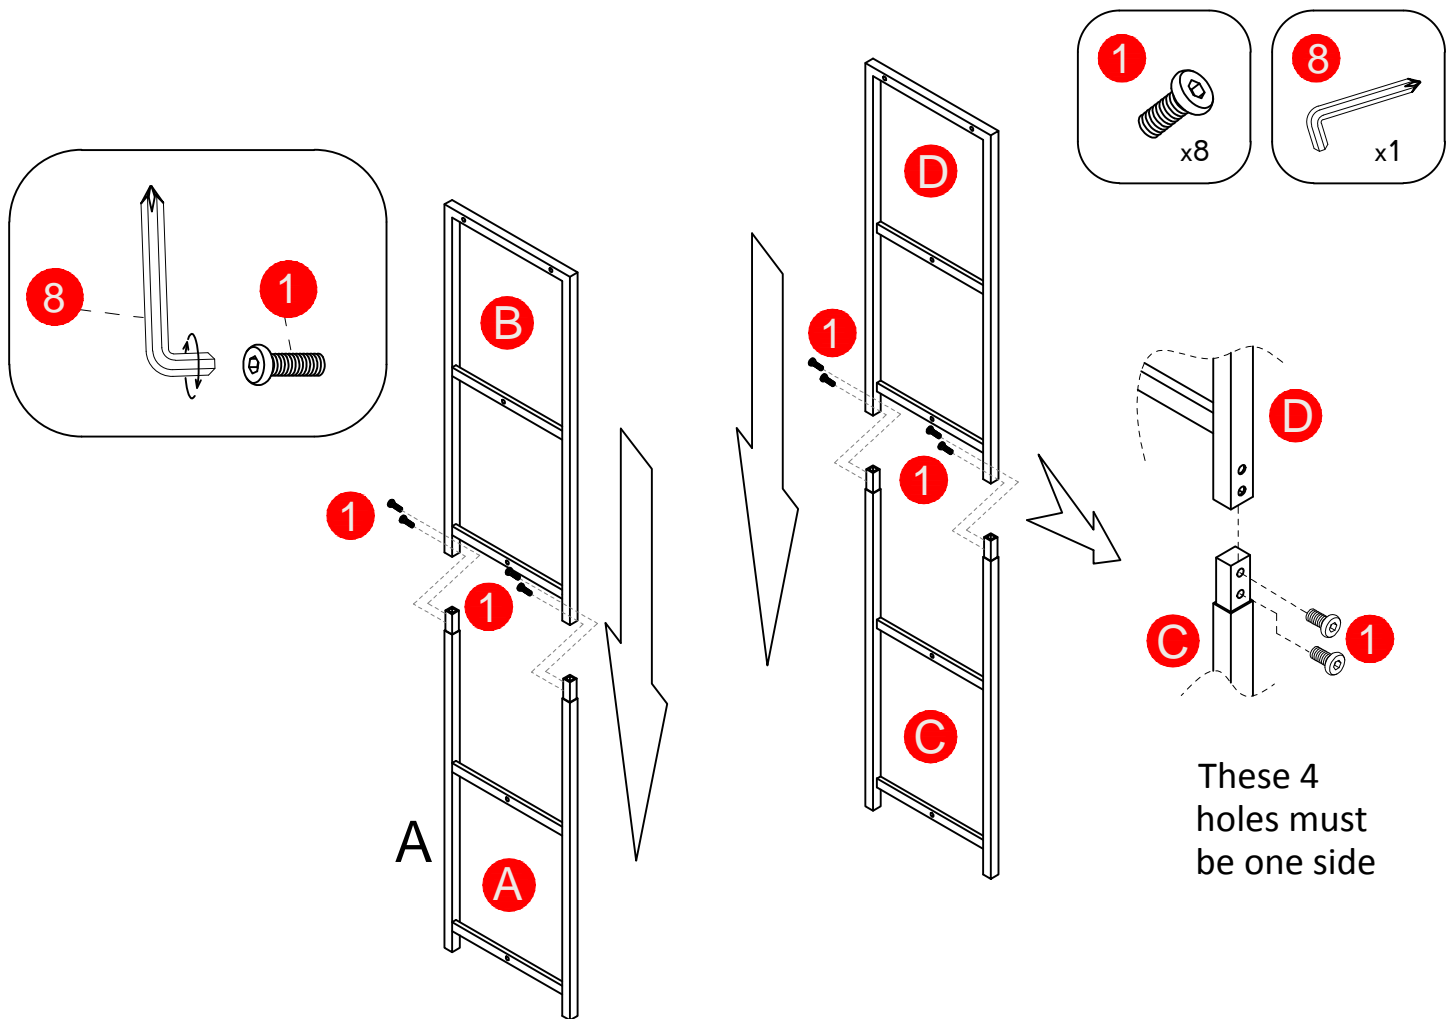

Attach Left Top Frame (B) and Right Top Frame (D) to Left Bottom Frame (A) and Right Bottom Frame (C) with Allen Bolts (1) by using Allen Wrench (8). Fully tighten bolts.

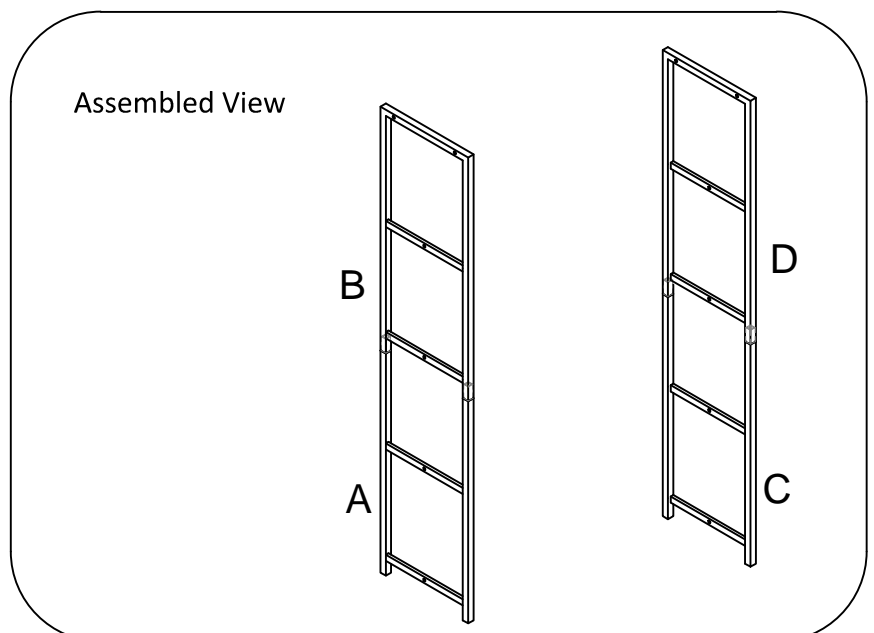


STEP 2

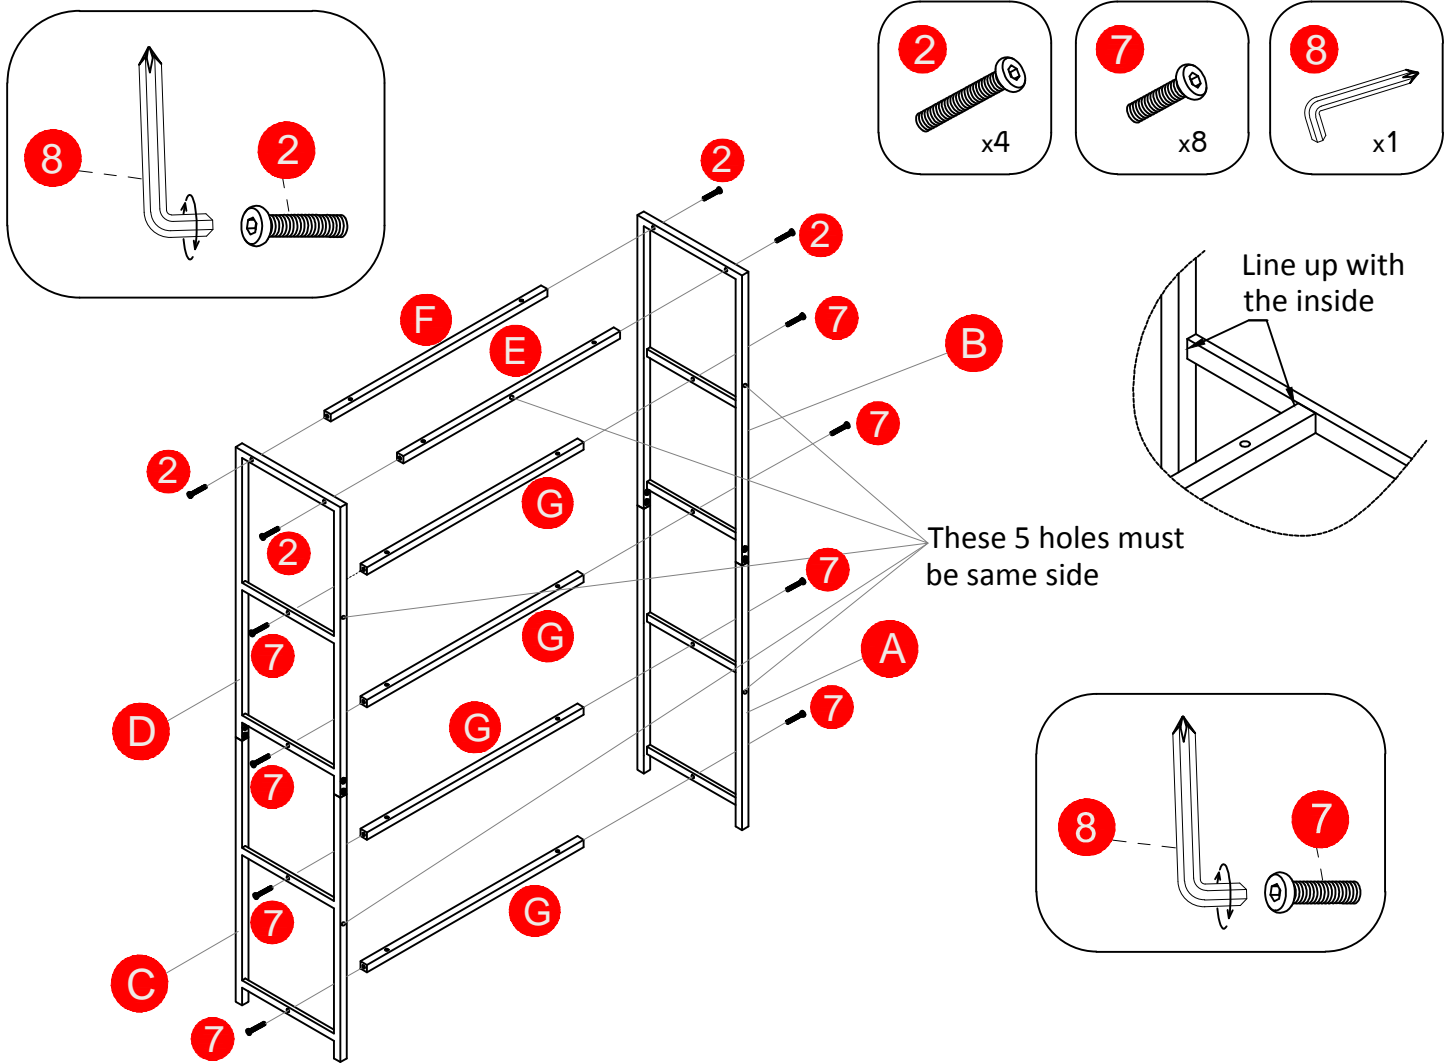


Attach Top Back Cross Bar (E), Top Front Cross Bar (F) and Shelf Cross Bar (G) to the assembled Left Side Frame (BA) and assembled Right Side Frame (DC) with Allen Bolts (2,7) by using Allen Wrench (8). DO NOT fully tighten bolts at this time.

NOTE: Make sure the holes and bolts on the back edge of the side frames are on the same side when attaching the cross bars.

Assembled View

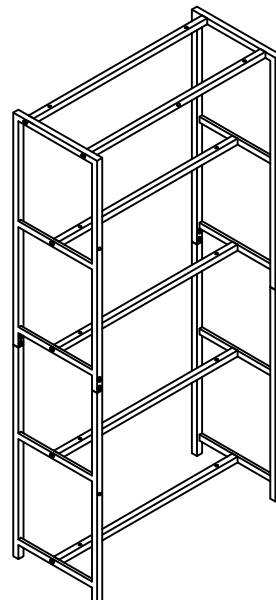


STEP 3

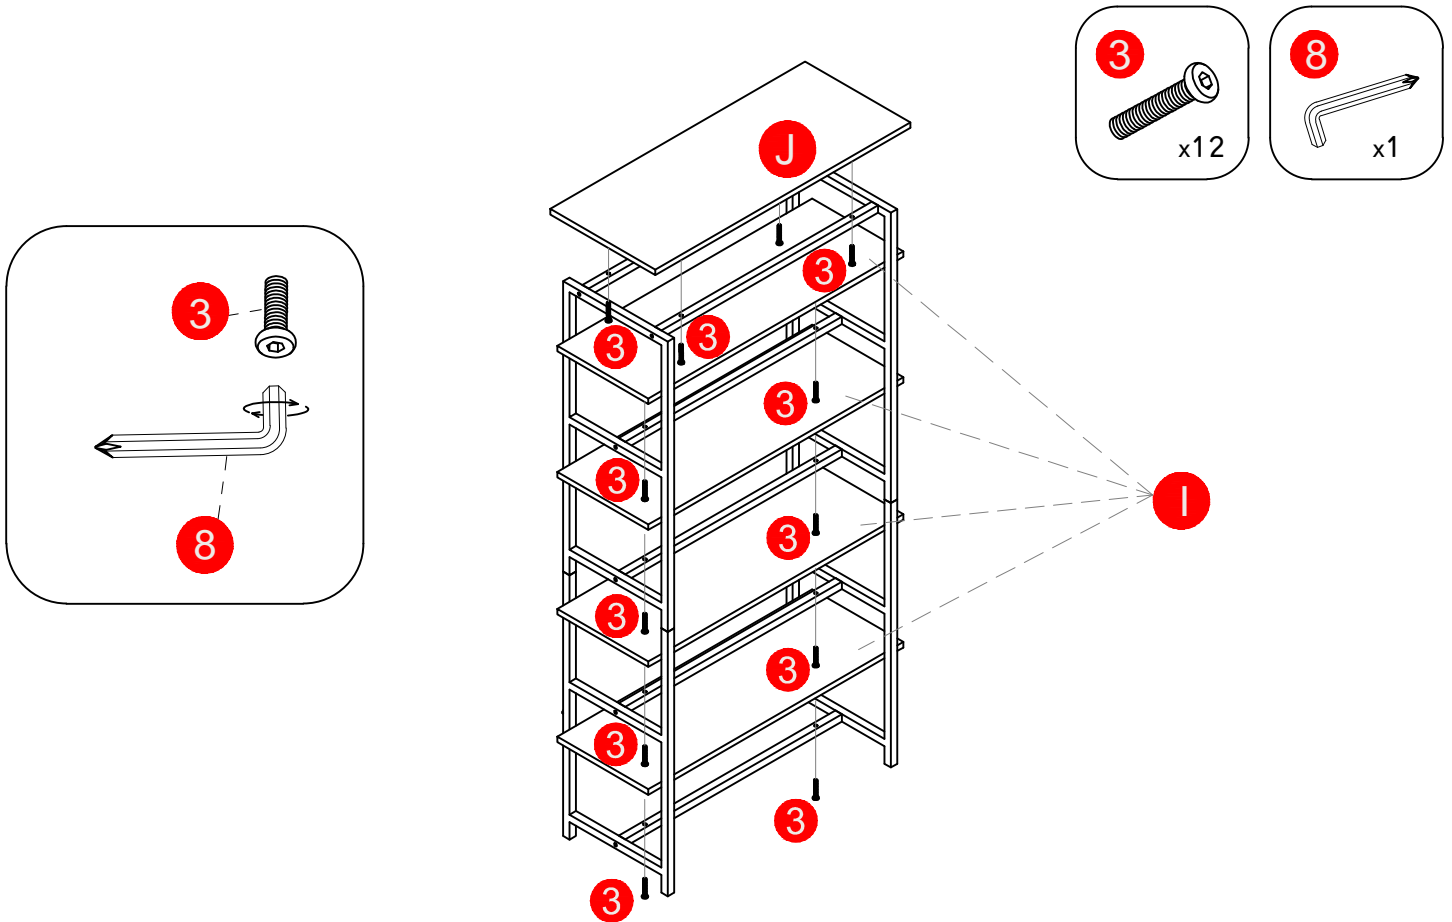


Attach Top Panel (J) and Shelf Panels (I) to the assembled frame with Allen Bolts (3) by using Allen Wrench (8). Fully tighten all bolts at this time from STEP 2 and 3.

Assembled View

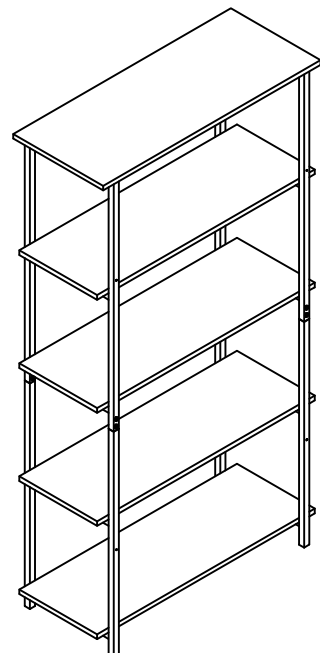


STEP 4

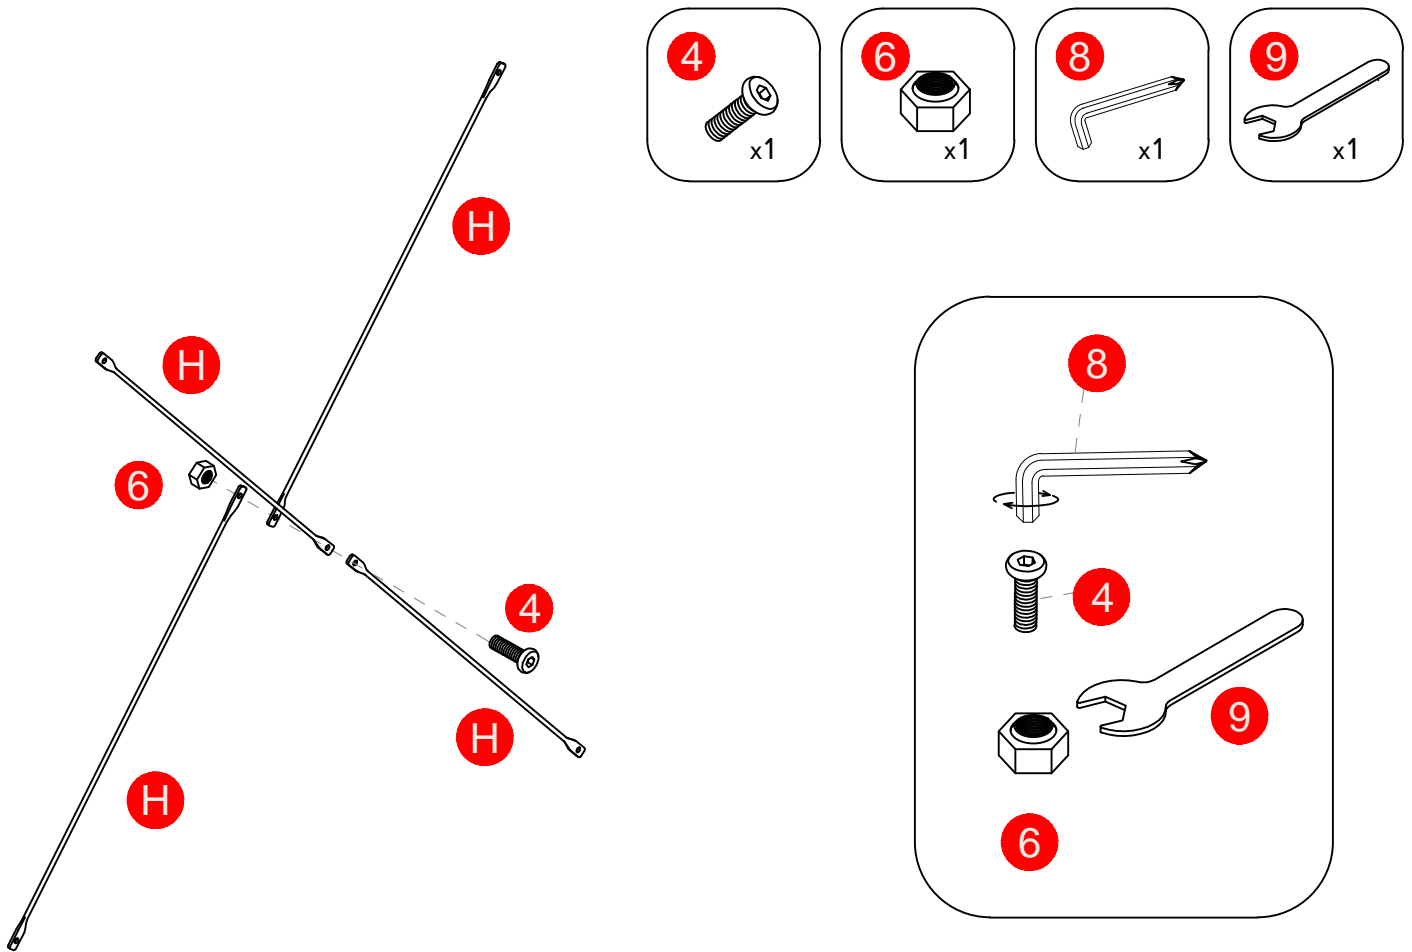


Assemble all Rear Cross Bars (H) together at one end with Allen Bolts (4) and Nut (6) by using Allen Wrench (8) and Open End Wrench (9) .

DO NOT fully tighten in this step.

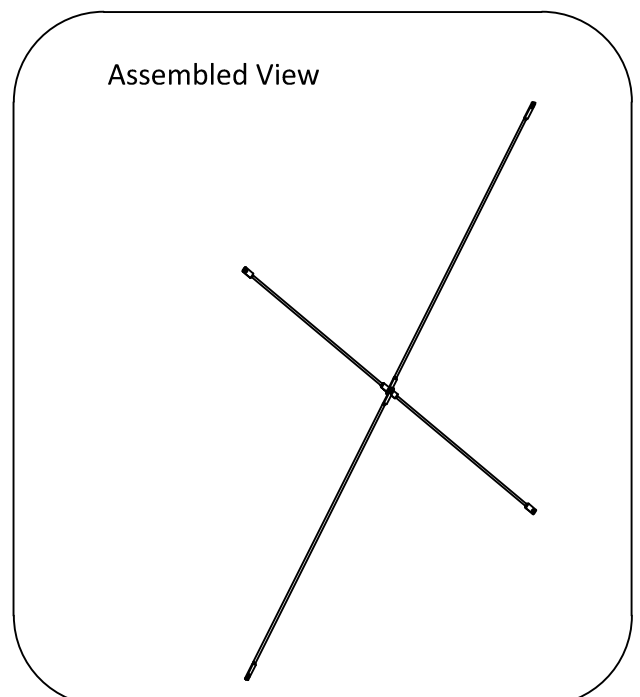


STEP 5

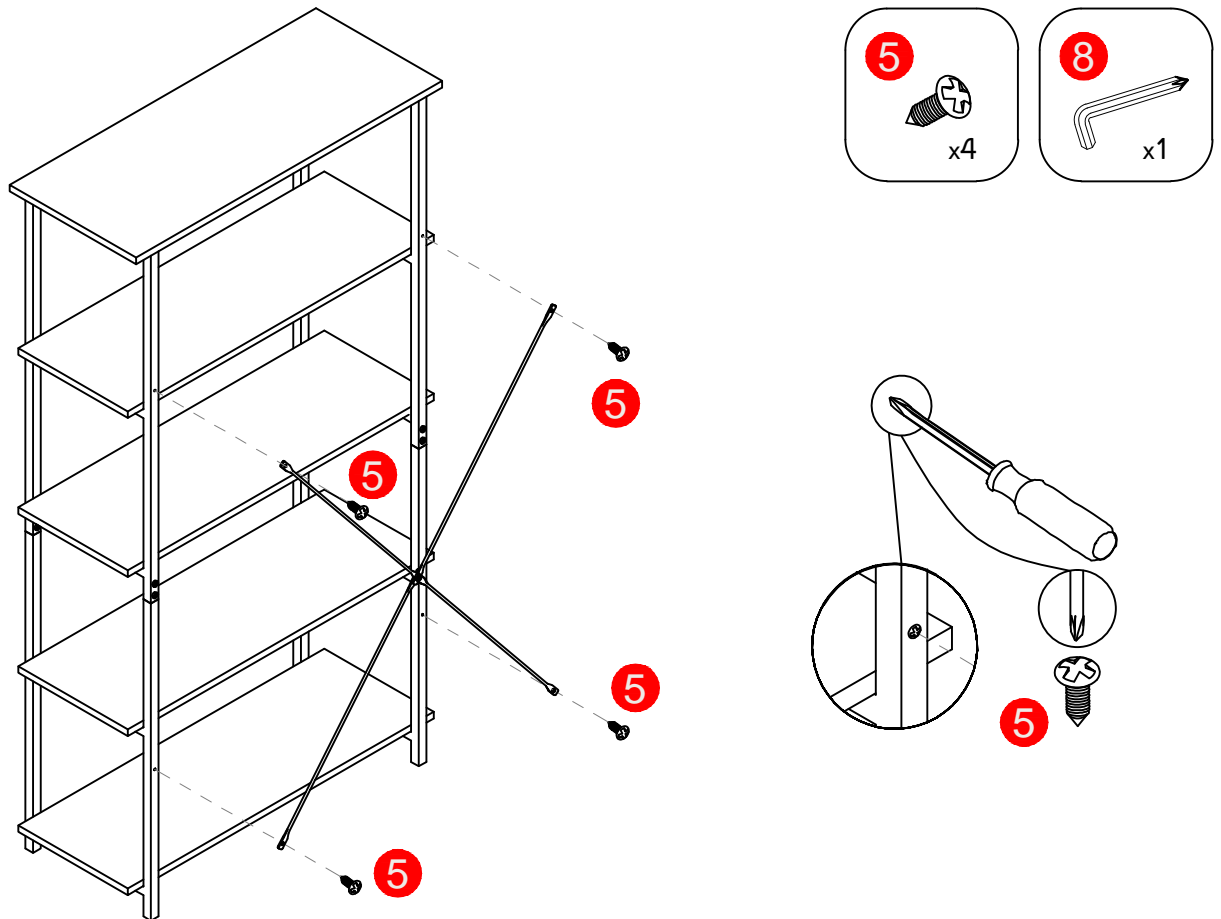


Attach the remaining ends of the rear cross bars to the back side of the assembled shelves with Phillips Screws (5) by using Allen Wrench (8). The rear cross bar should form an "X" with the nut facing the back. Fully tighten the screws and the nut and bolt of the rear cross bars.

Assembled View

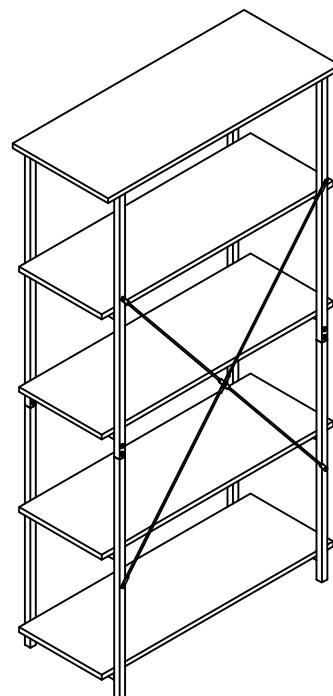


STEP 6


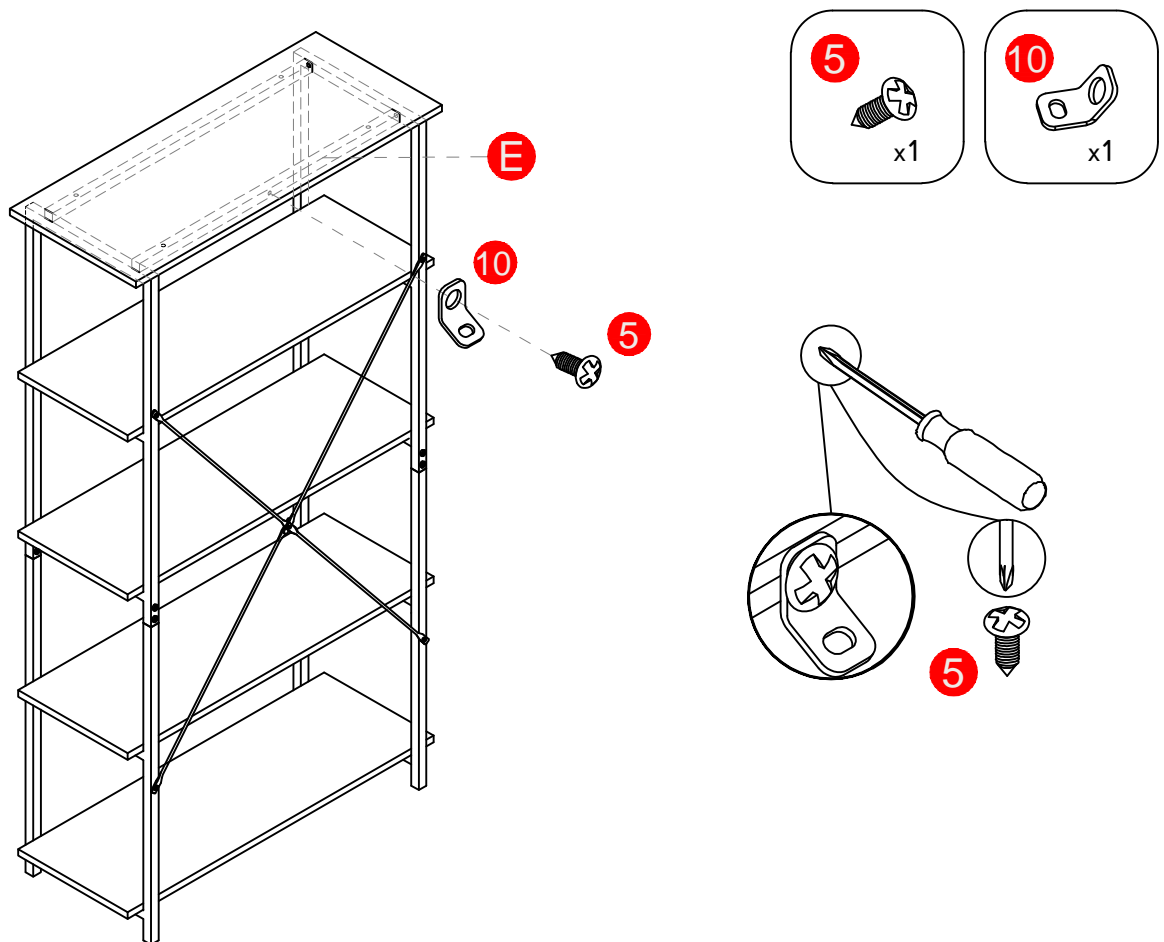


Assemble Steel Plate (10) to Shelf Cross Bar (E) with Phillips Screw (5) by using Allen Wrench (8).

Assembled View

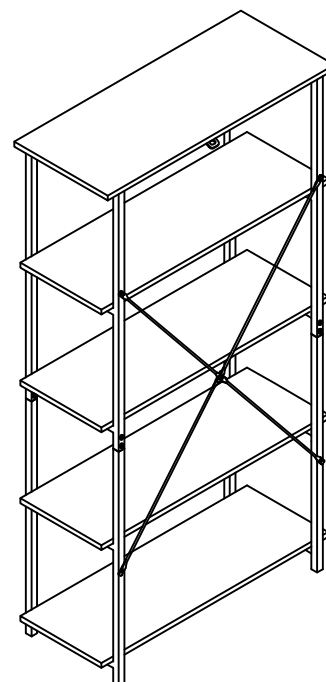

STEP 7

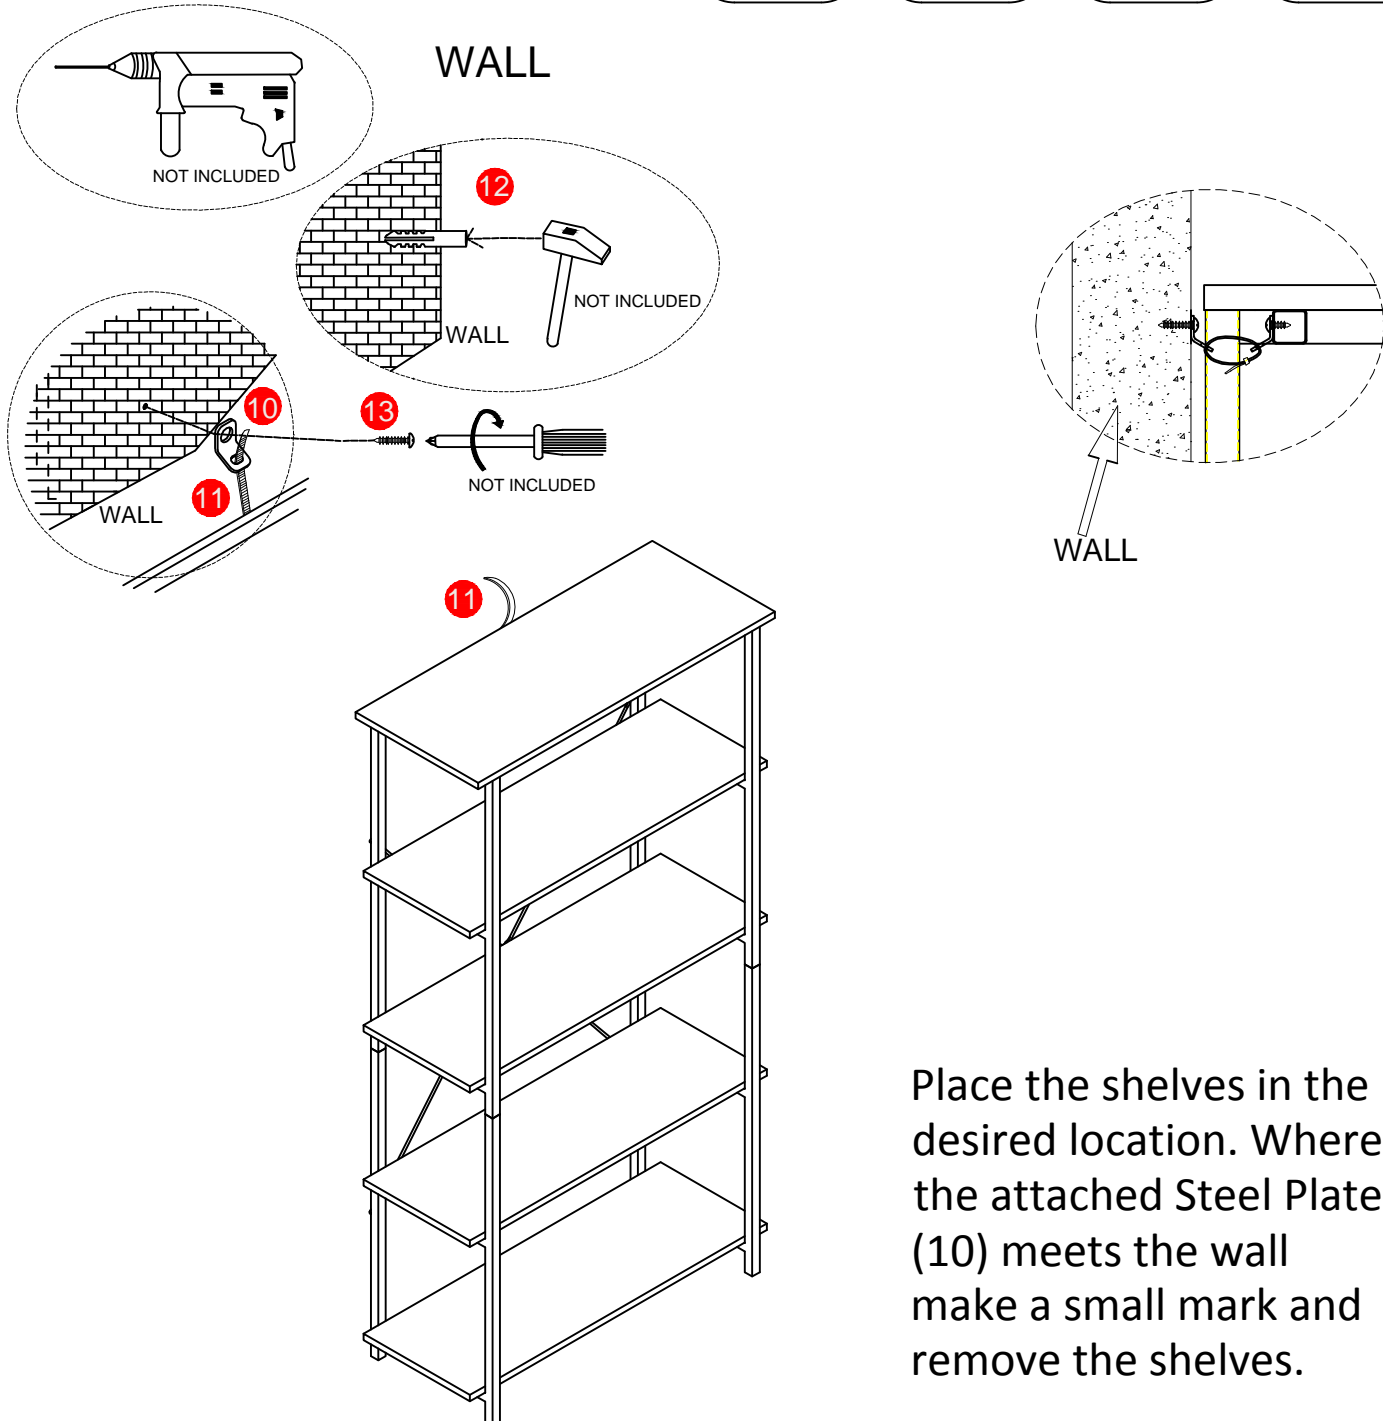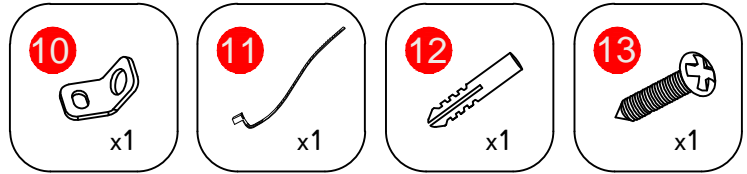


Place the shelves in the desired location. Where the attached Steel Plate (10) meets the wall make a small mark and remove the shelves.

Drill a hole on the wall at the marked location and insert Wall Anchor (12) into the pre-drilled hole. Assemble Steel Plate (10) to the Wall Anchor (12) with Screw (13) by using screwdriver. Attach Anti-Tipping Strip (11) to both Steel Plate (10) as shown.

STEP 8

WALL

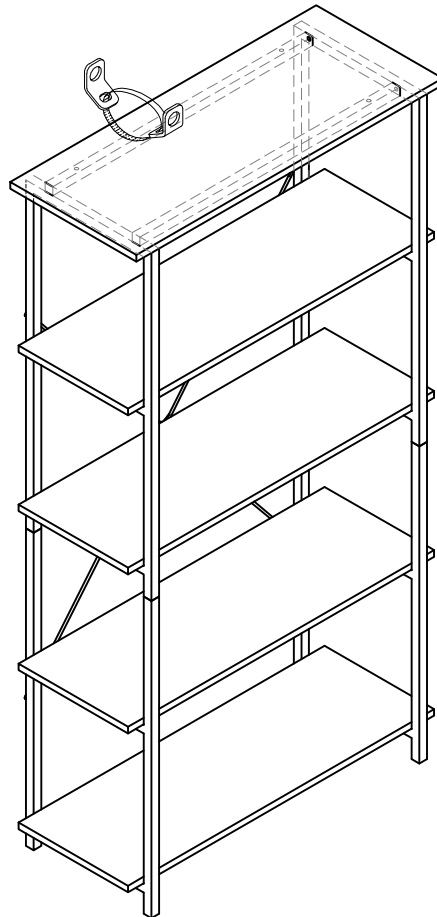

YOUR BOOKCASE IS NOW READY