


Configurations

With only one kit provided, Vego modular raised bed is able to assemble into 9 different configurations to fit any backyard space. From the classic 6'5" x 3'5" to the long 8' x 2', or the jumbo square 5' by 5', you can always find one you like.

Note: Due to manufacturing process raised bed sizing may vary +/- 2 inches

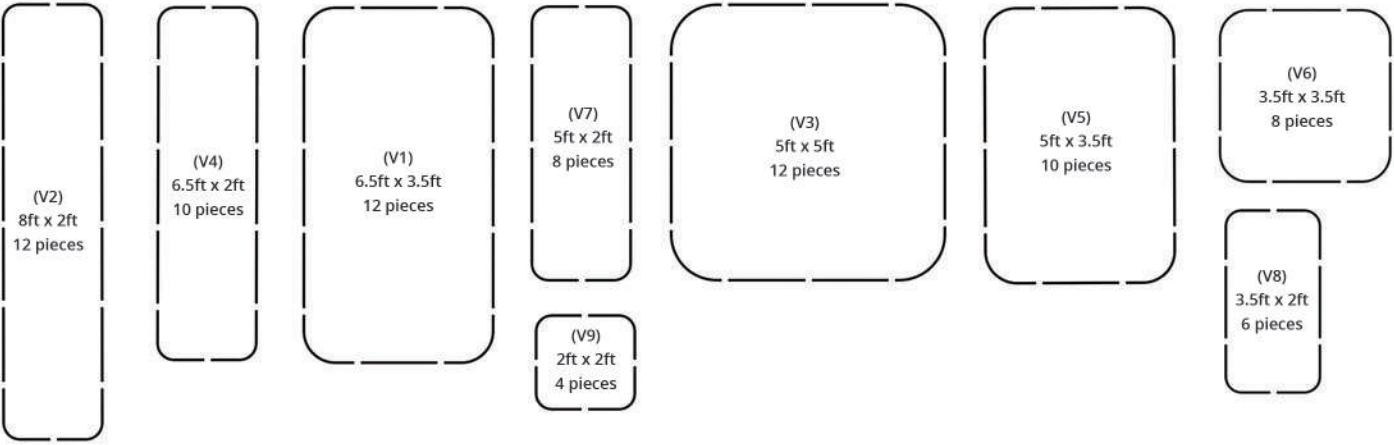

Dimensions

| Configuration | Length (ft) | Width (ft) | Height (in) | Cubic Feet | Cubic Yards |
|---------------|-------------|------------|-------------|------------|-------------|
| V1 | 6.5 | 3.5 | 17 | 32 | 1.2 |
| V2 | 8 | 2 | 17 | 22 | 0.8 |
| V3 | 5 | 5 | 17 | 35 | 1.3 |
| V4 | 6.5 | 2 | 17 | 18 | 0.7 |
| V5 | 5 | 3.5 | 17 | 25 | 0.9 |
| V6 | 3.5 | 3.5 | 17 | 17 | 0.6 |
| V7 | 5 | 2 | 17 | 14 | 0.5 |
| V8 | 3.5 | 2 | 17 | 10 | 0.4 |
| V9 | 2 | 2 | 17 | 6 | 0.2 |

Contact Us

- +1 (628) 220-8868
- Info@vegogarden.com
- www.vegogarden.com
- Houston, TX 77023



vegō garden

9 IN 1 MODULAR METAL RAISED BED



Model No. VB9N117W

Caution: Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

Packing List

A: Corner Panel • _____



X4

B: Side Panel • _____



X8

C: Bolts, Washers and Nuts • _____



X72

D: Safety Rubber Edging • _____



X1


Follow Us On Social Media

 @vegogarden  @vego_garden  #vegogarden / #raisedbedgardening / #metalgardenbed




Assembly Guide

1 Step One

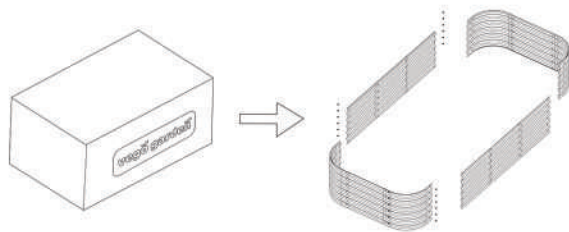


Remove protective films from all panels, and lay panels on a flat surface according to the chosen configuration.

2 Step Two

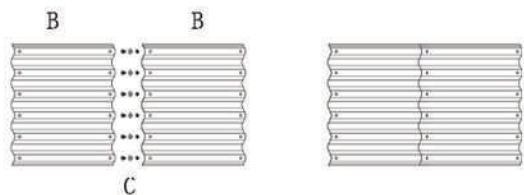


Assemble all straight panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

3 Step Three

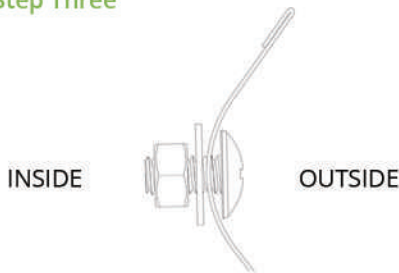

Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

4 Step Four

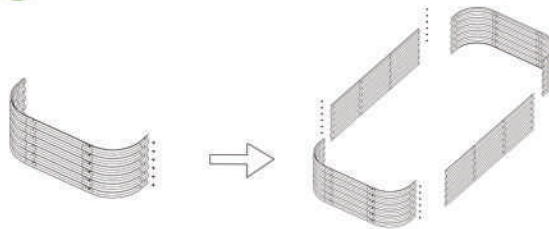


After straight panels are assembled, attach corner panels with straight panels using same method. Make sure corner panels are attached outside of the straight panels.

5 Step Five



Push the safety rubber edging to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

6 Step Six

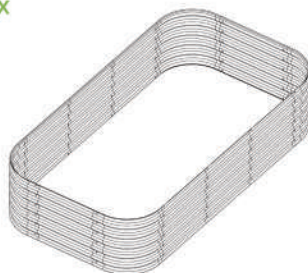

Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!