





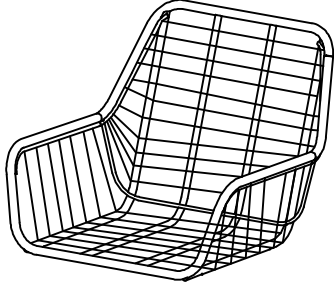
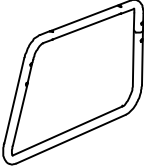
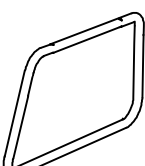

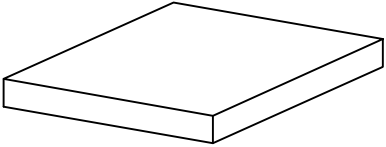
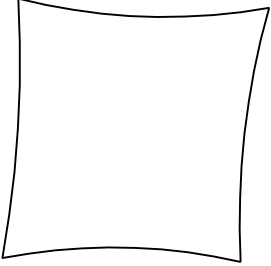
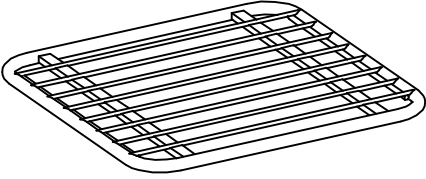
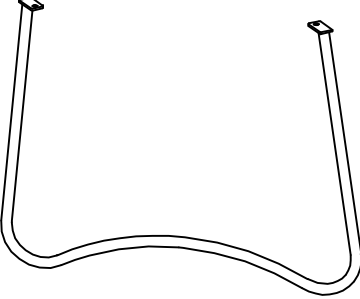
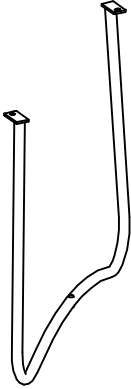
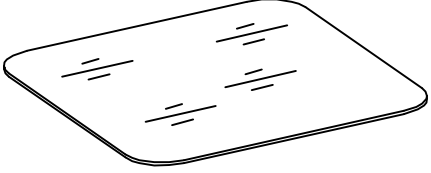




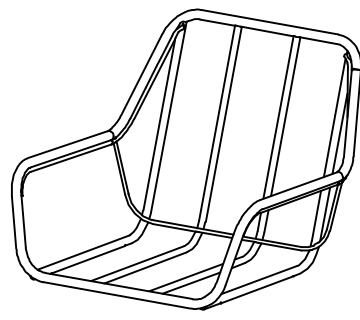
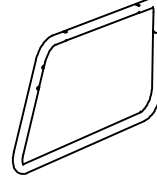
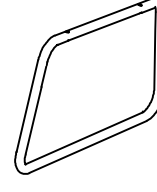

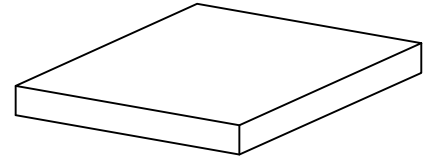
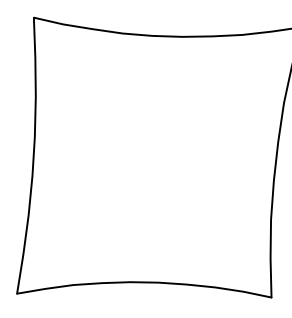


Assembly Instructions

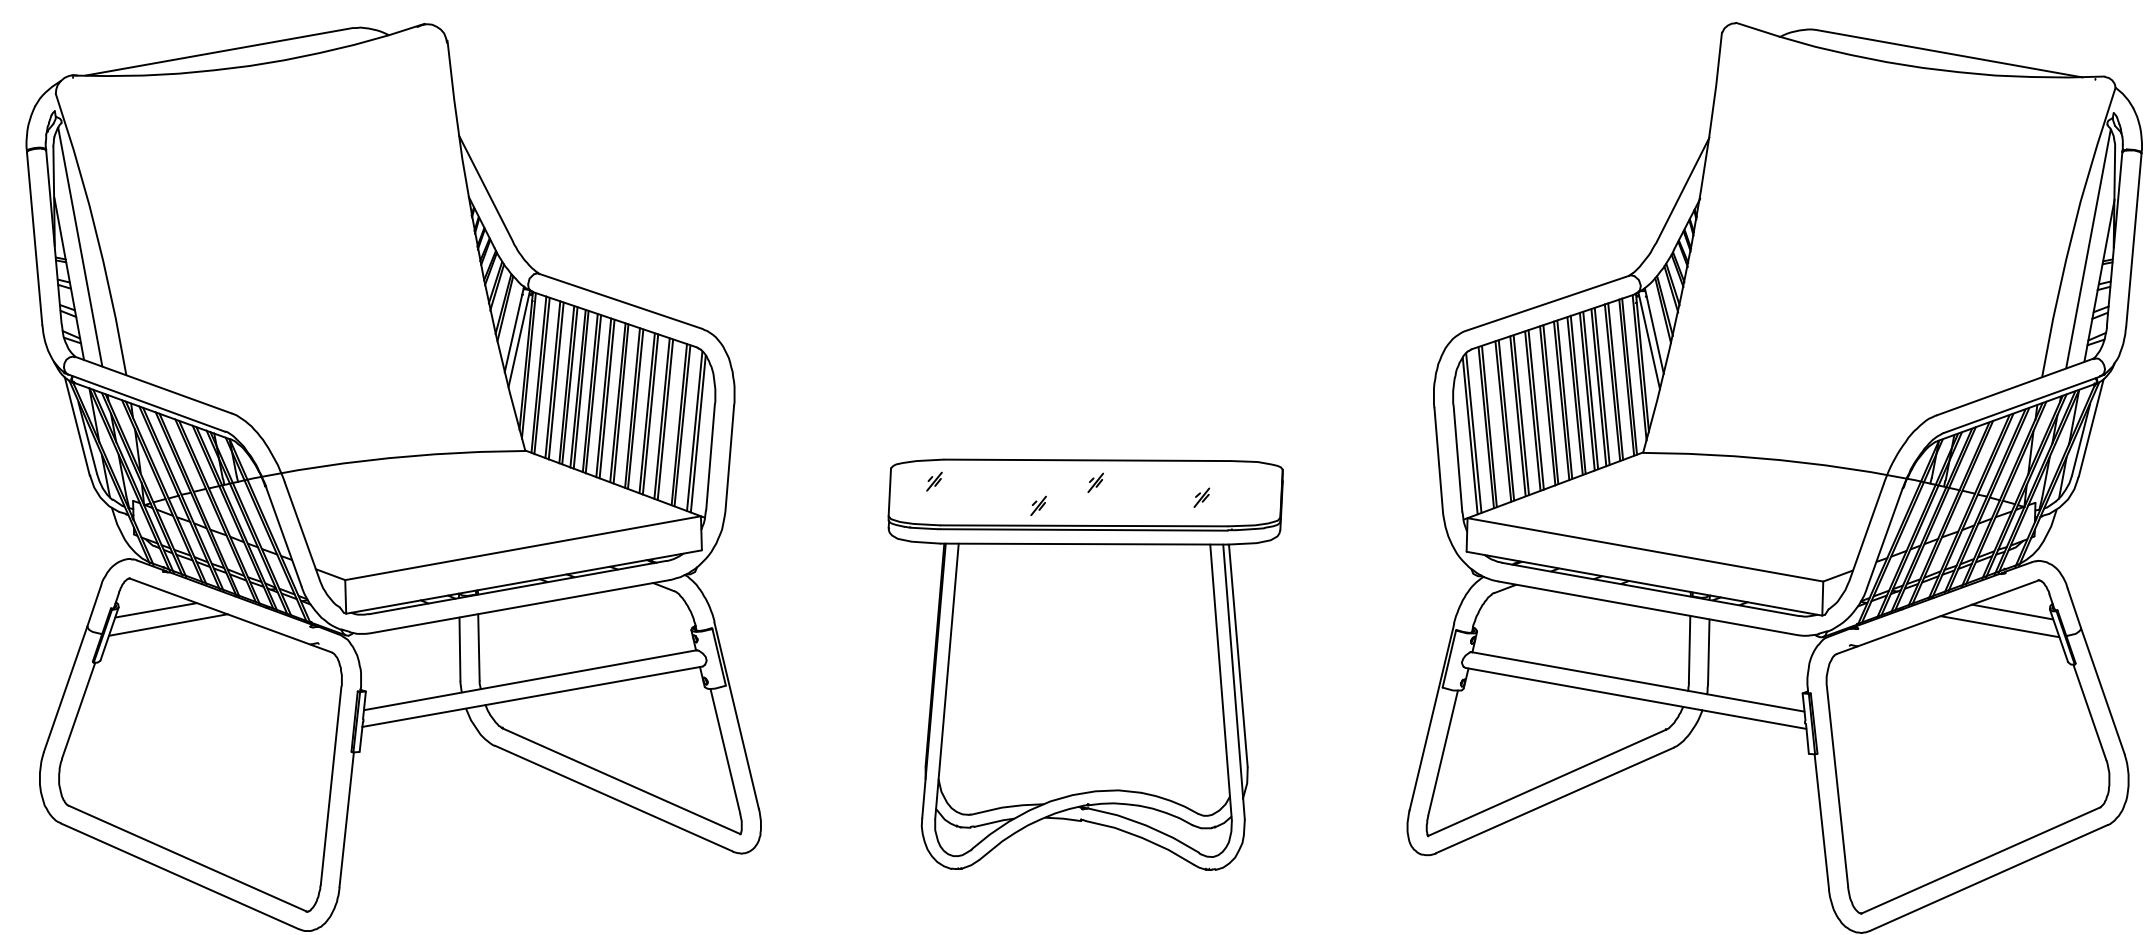


<div>①</div> <div></div> <div>Bolt M6*15mm 20pcs</div>	<div>②</div> <div></div> <div>Bolt M6*25mm 1pc</div>	<div>③</div> <div></div> <div>Bolt M6*35mm 8pcs</div>	<div>④</div> <div></div> <div>Washer 29pcs</div>	<div>⑤</div> <div></div> <div>Allen Key 1pc</div>
A <div></div> <div>2 PCS</div>	B <div></div> <div>2 PCS</div>	C <div></div> <div>2 PCS</div>	D <div></div> <div>4 PCS</div>	E <div></div> <div>2 PCS</div>
F <div></div> <div>2 PCs</div>	G <div></div> <div>1 PC</div>	H <div></div> <div>1 PC</div>	I <div></div> <div>1 PC</div>	
J <div></div> <div>1 PC</div>				


Assembly Instructions

①  Bolt M6*15mm 8pcs		③  Bolt M6*35mm 4pcs		④  Washer 12pcs		⑤  Allen Key 1pc	
A  1PC	B  1PC	C  1PC	D  2PCs	E  1PC	F  1PC		


Step1:

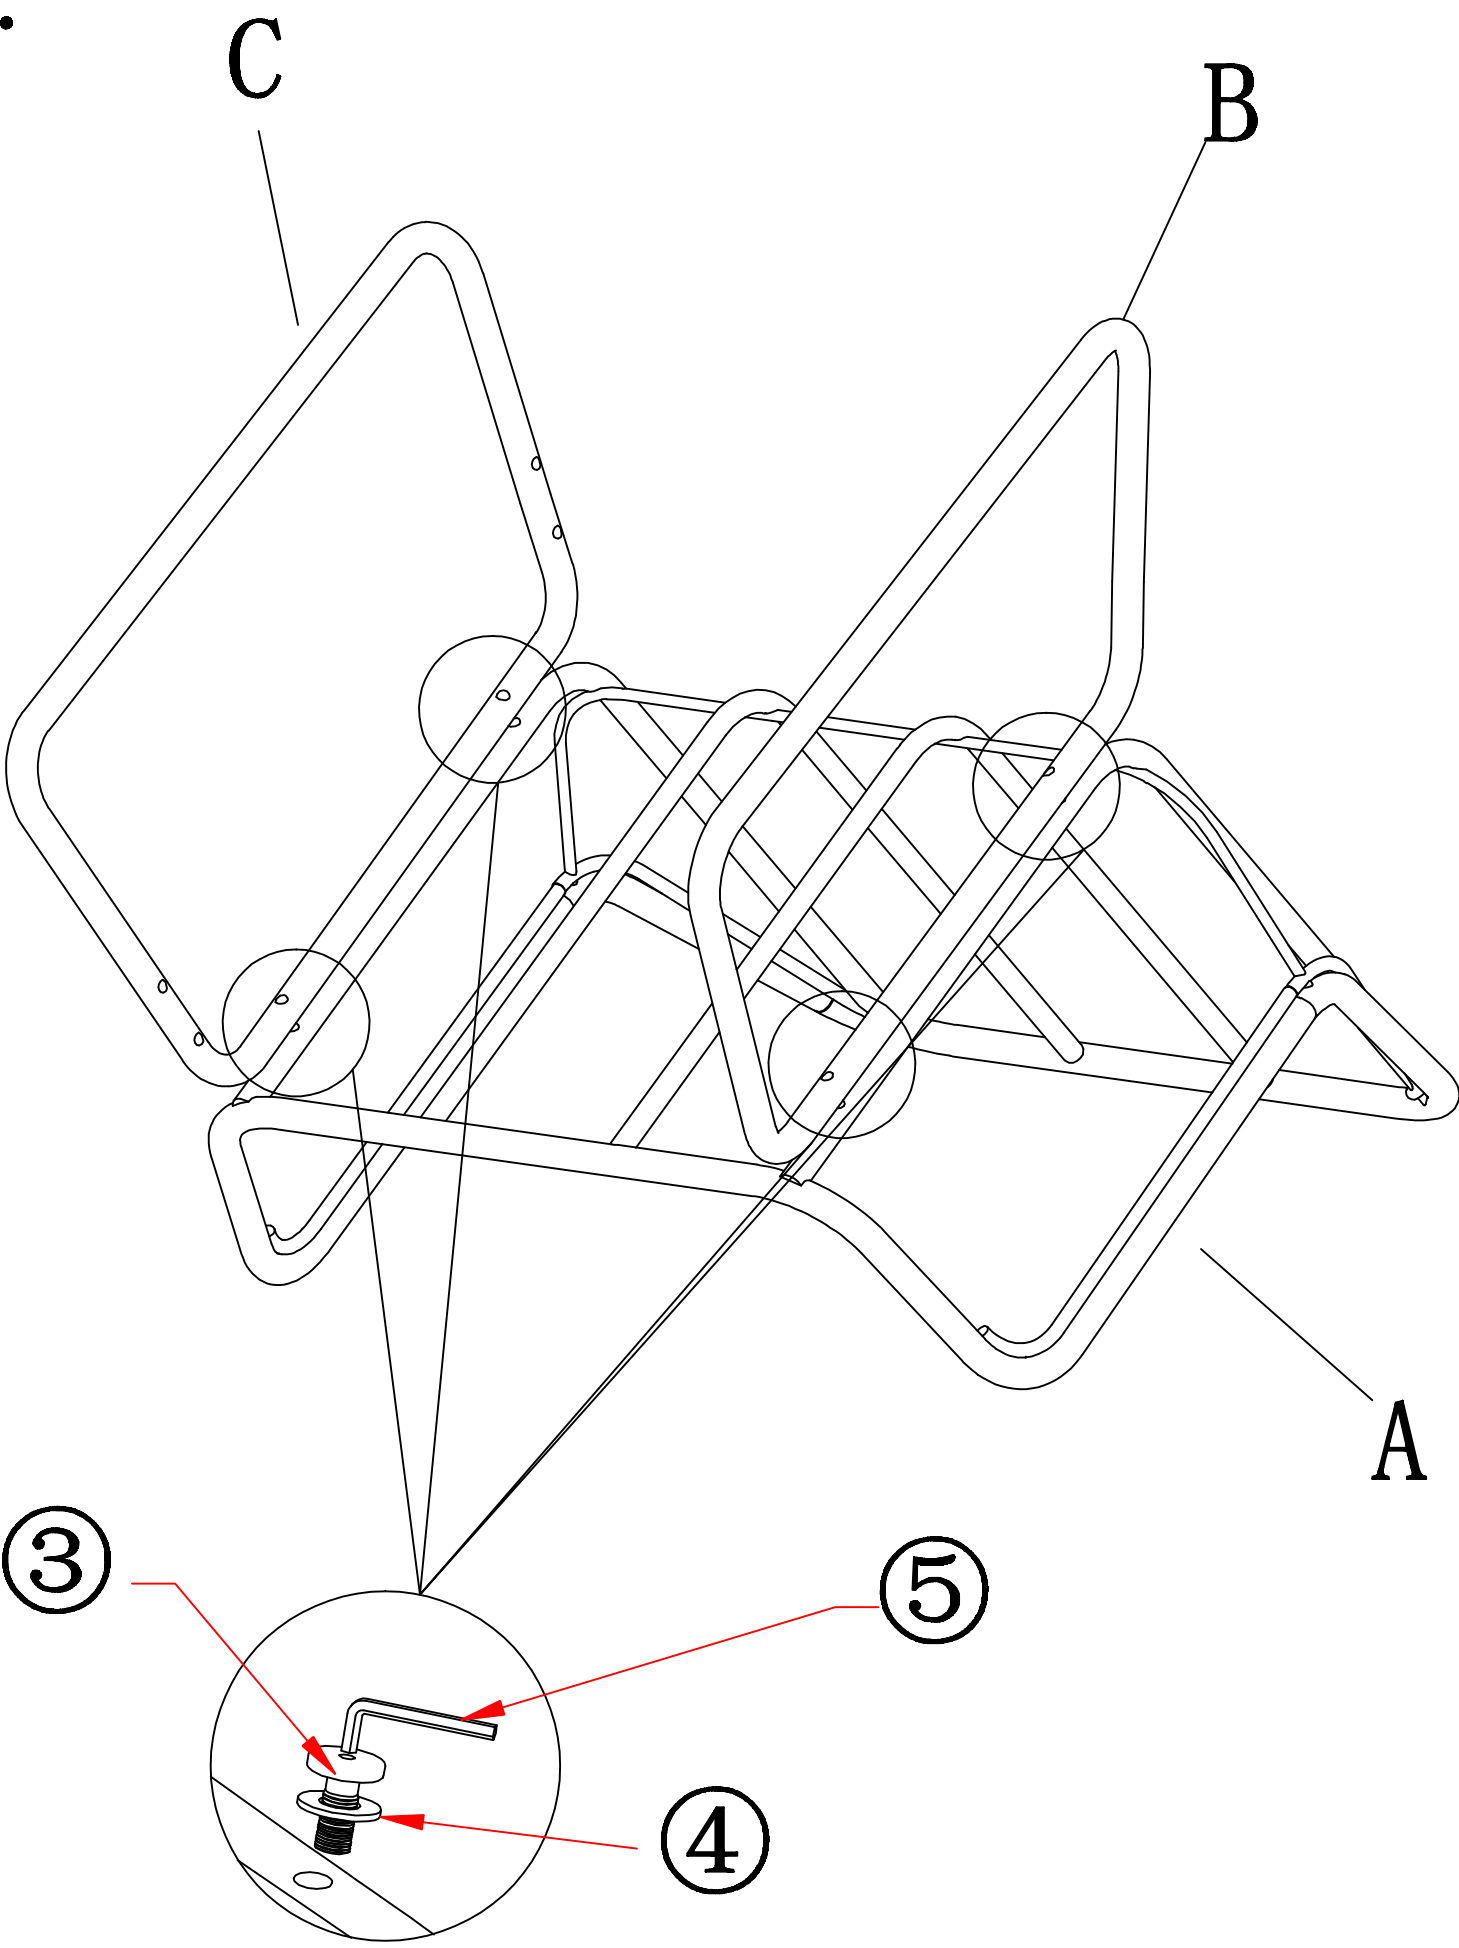





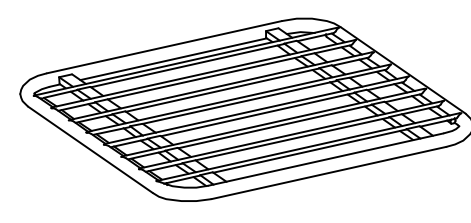
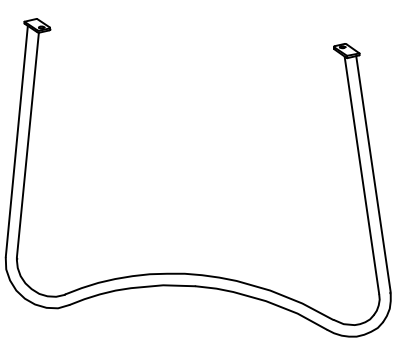
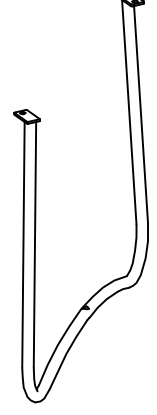
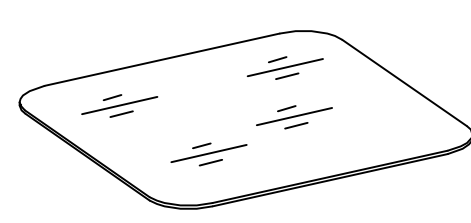
Step2:

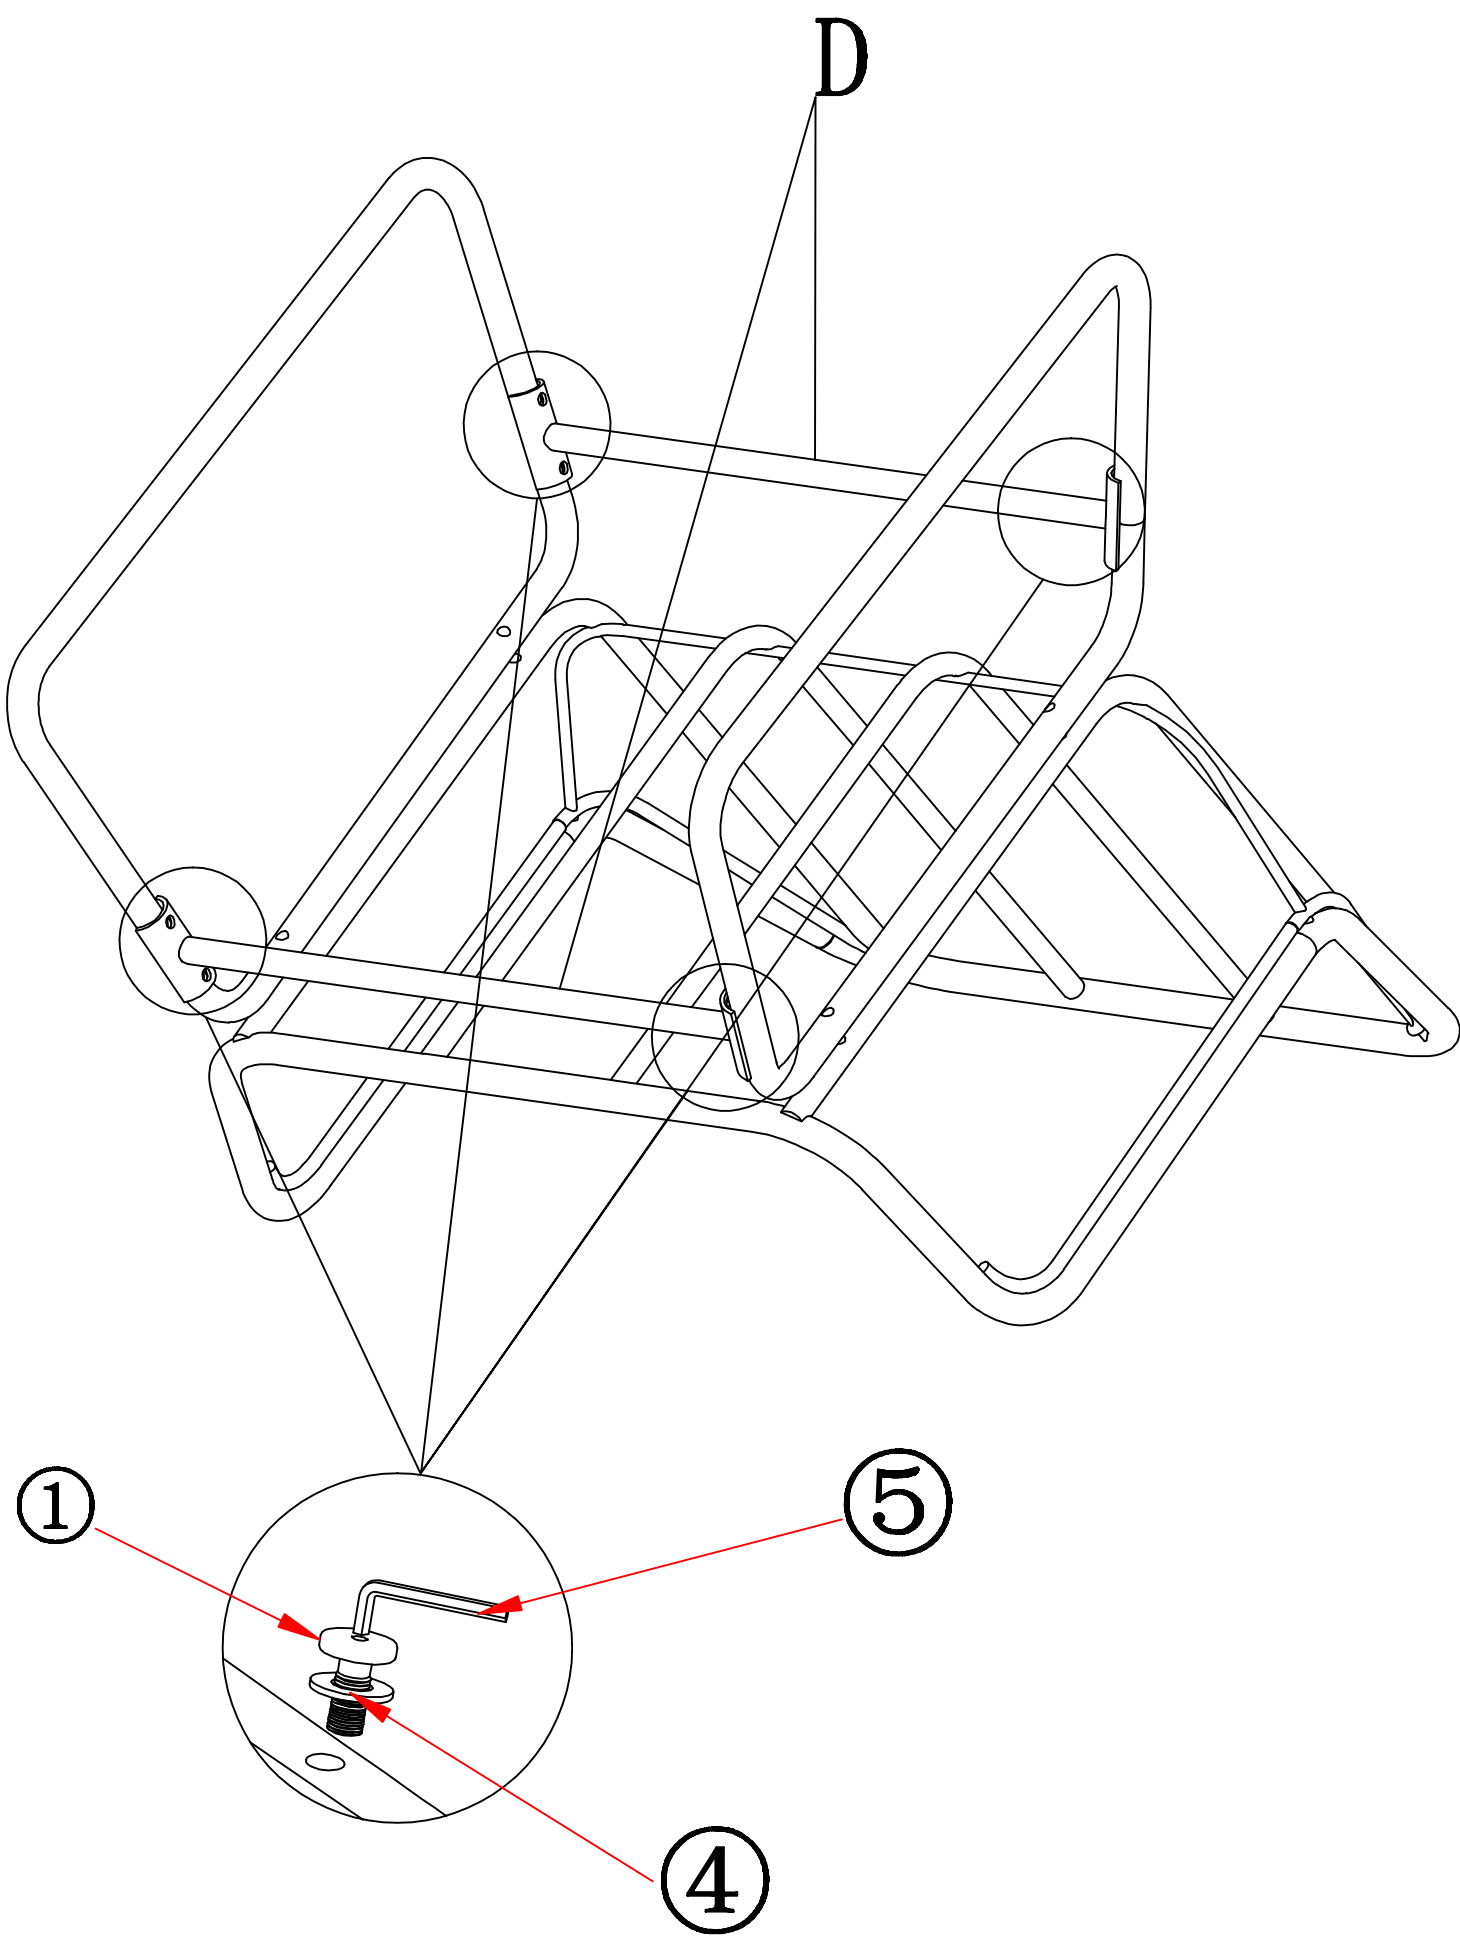


Step3:

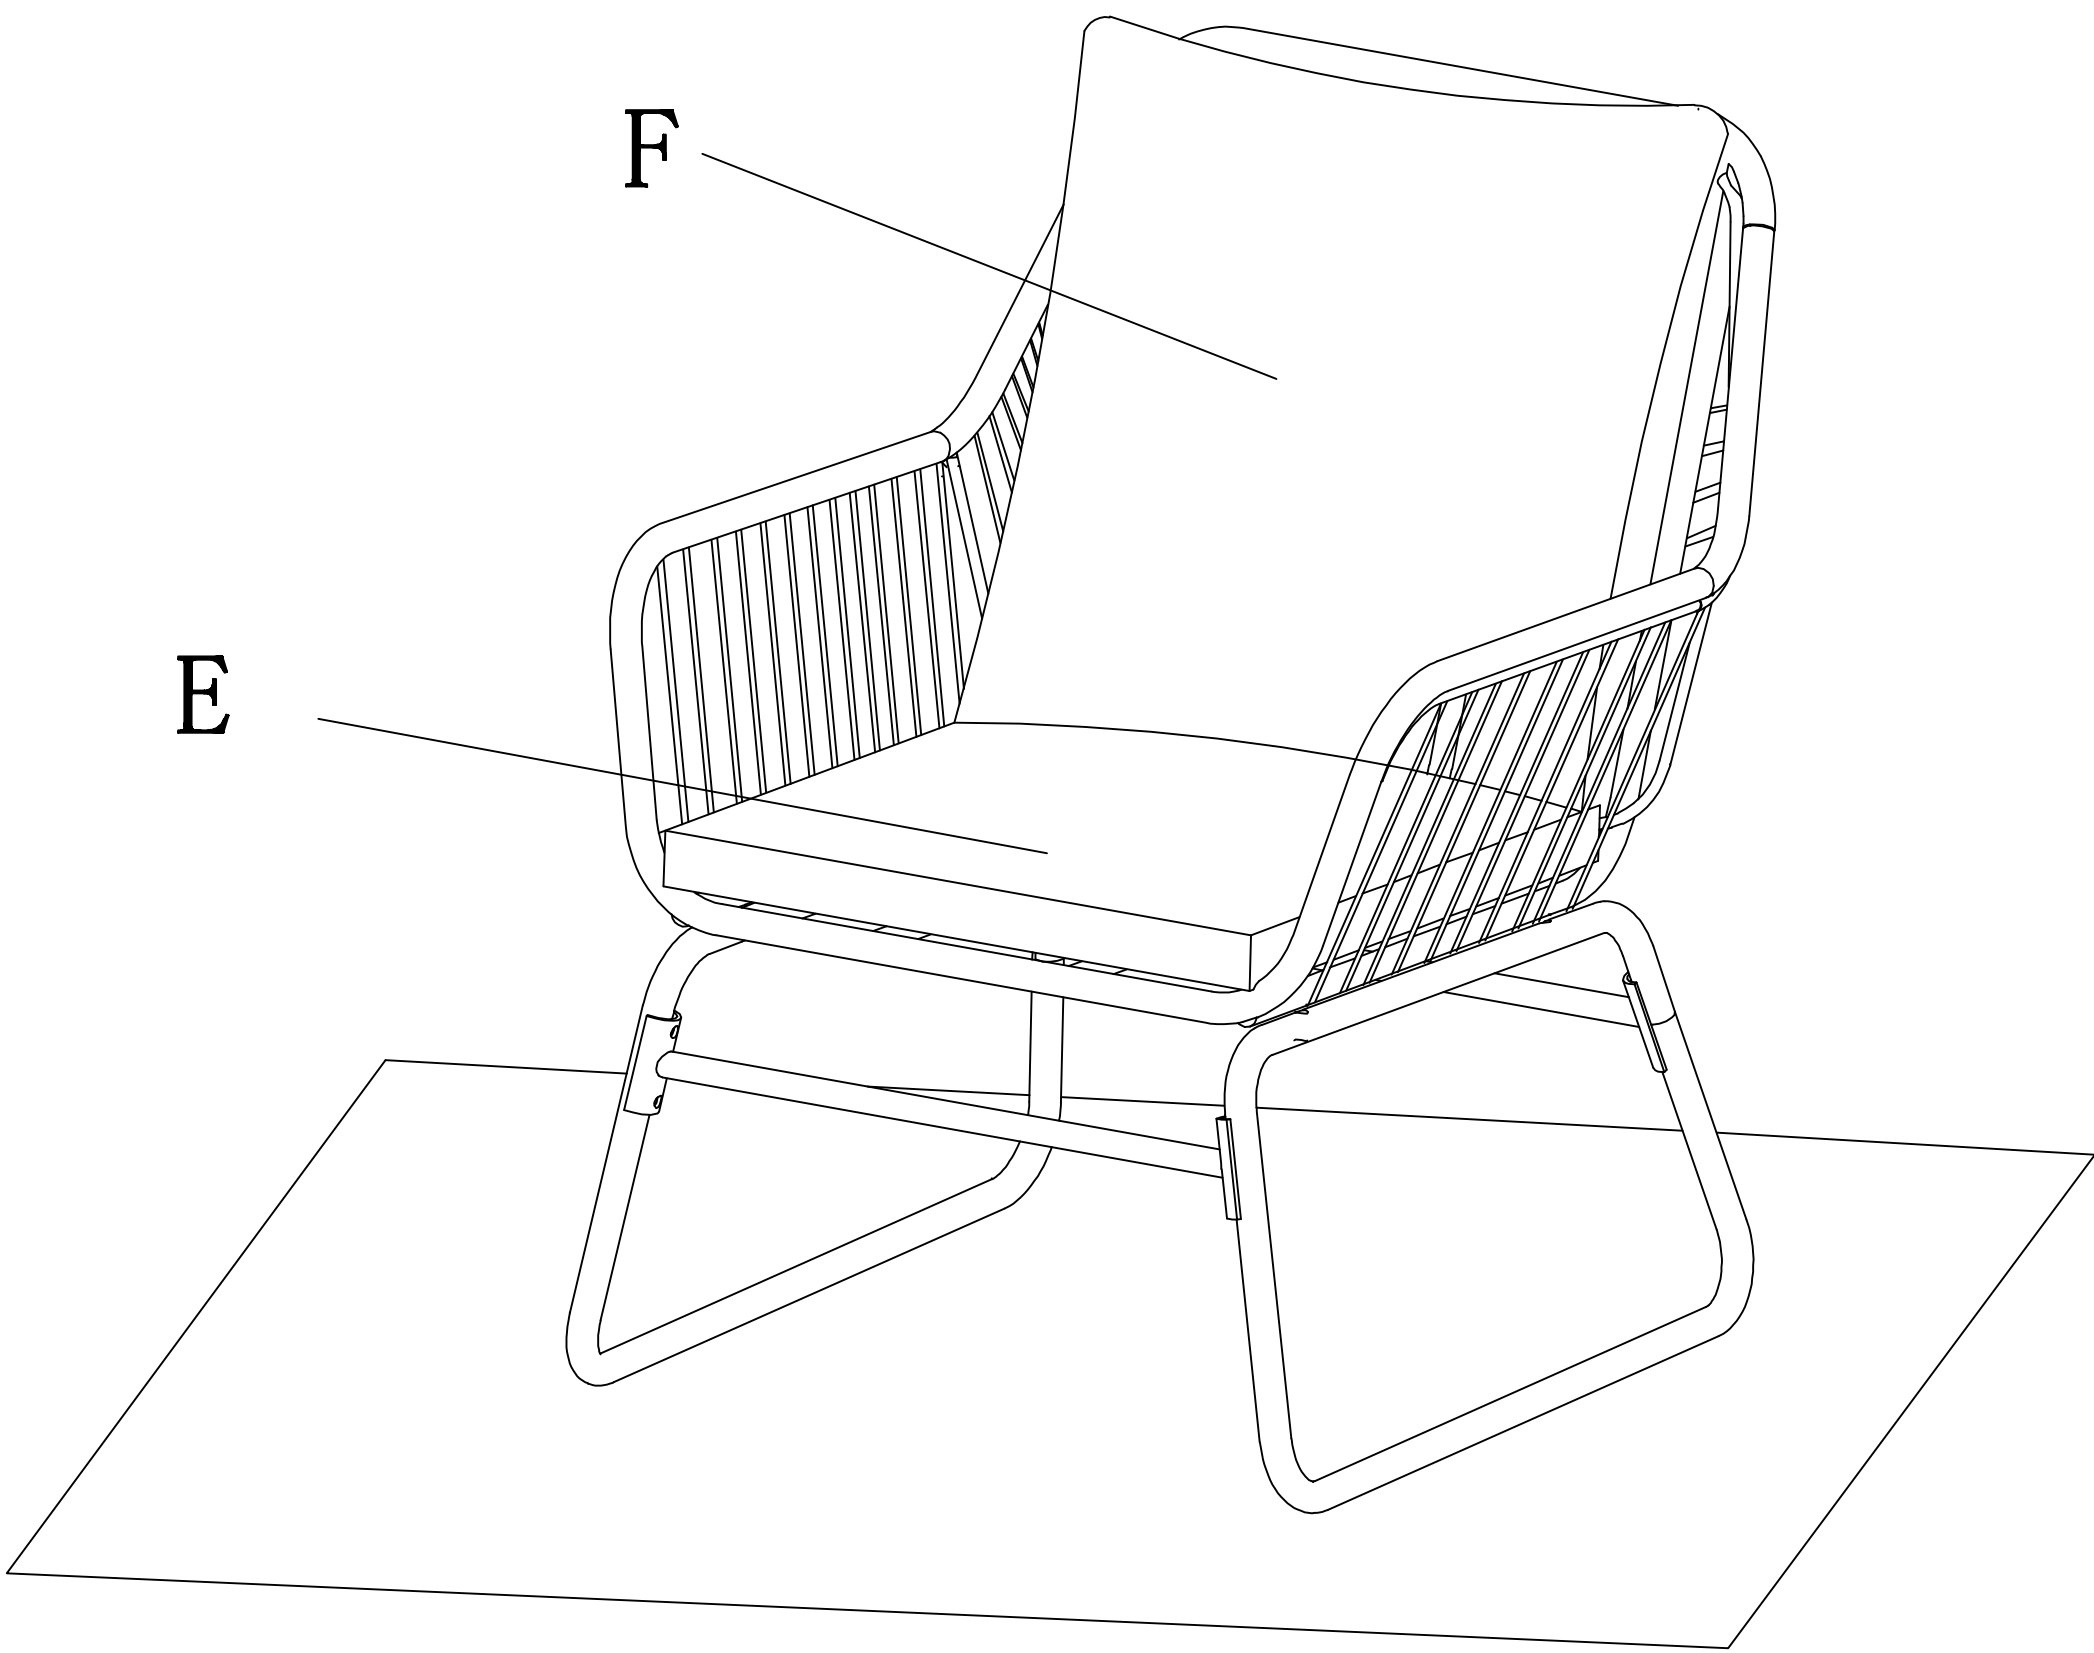


Assembly Instructions

<div>①</div> <div></div> <div>Bolt M6*15mm 4pcs</div>	<div>②</div> <div></div> <div>Bolt M6*25mm 1pc</div>	<div>④</div> <div></div> <div>Washer 5pcs</div>	<div>⑤</div> <div></div> <div>Allen Key 1pc</div>
<div>G</div> <div></div> <div>1PC</div>	<div>H</div> <div></div> <div>1PC</div>	<div>I</div> <div></div> <div>1PC</div>	<div>J</div> <div></div> <div>1PC</div>

Step1:

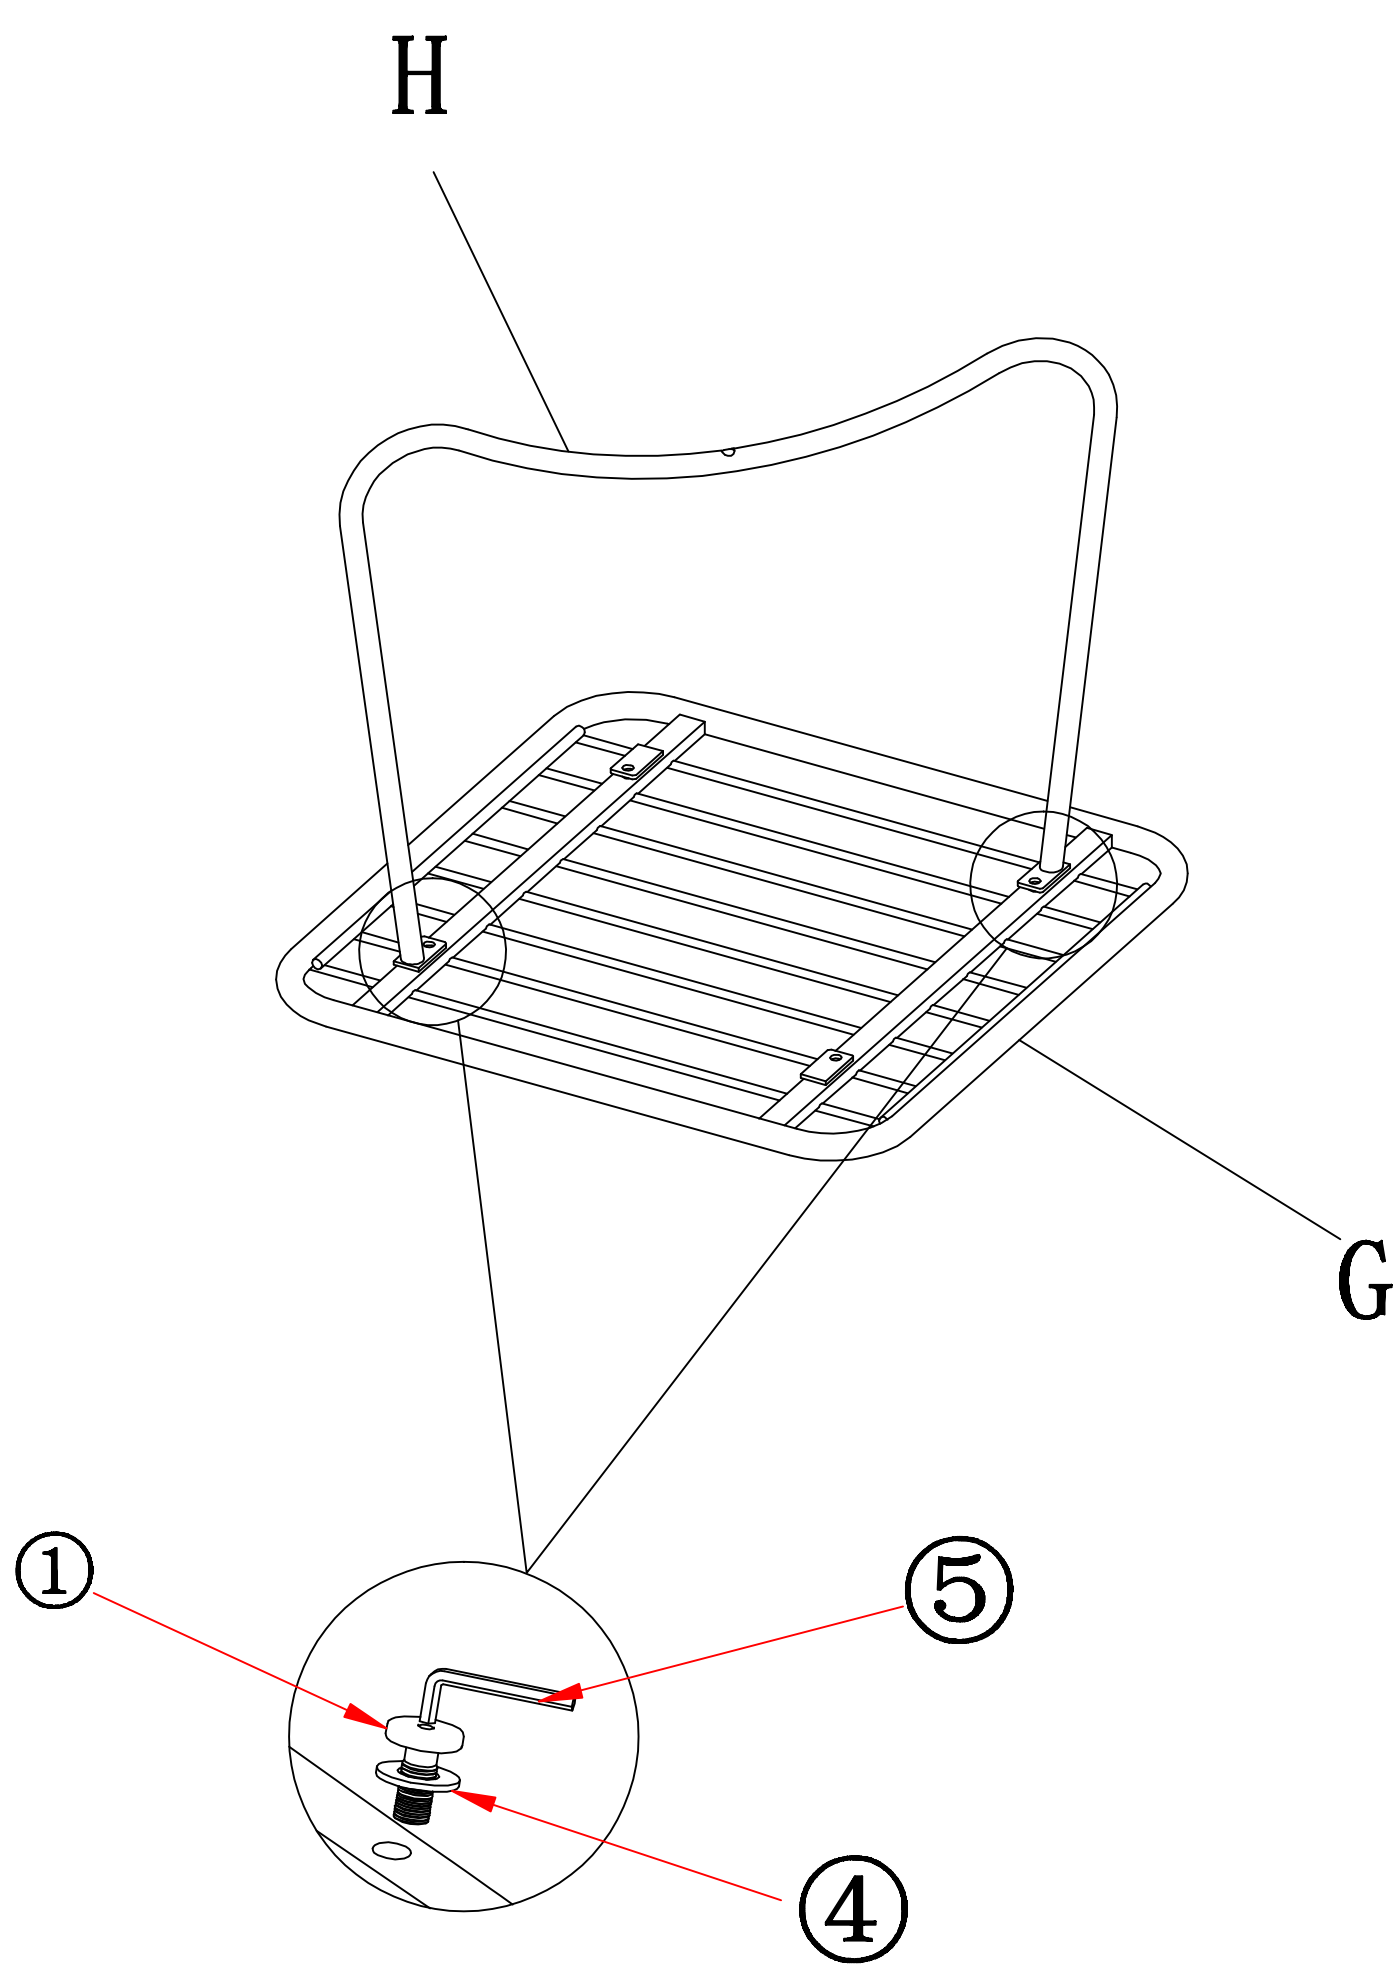

Step2:

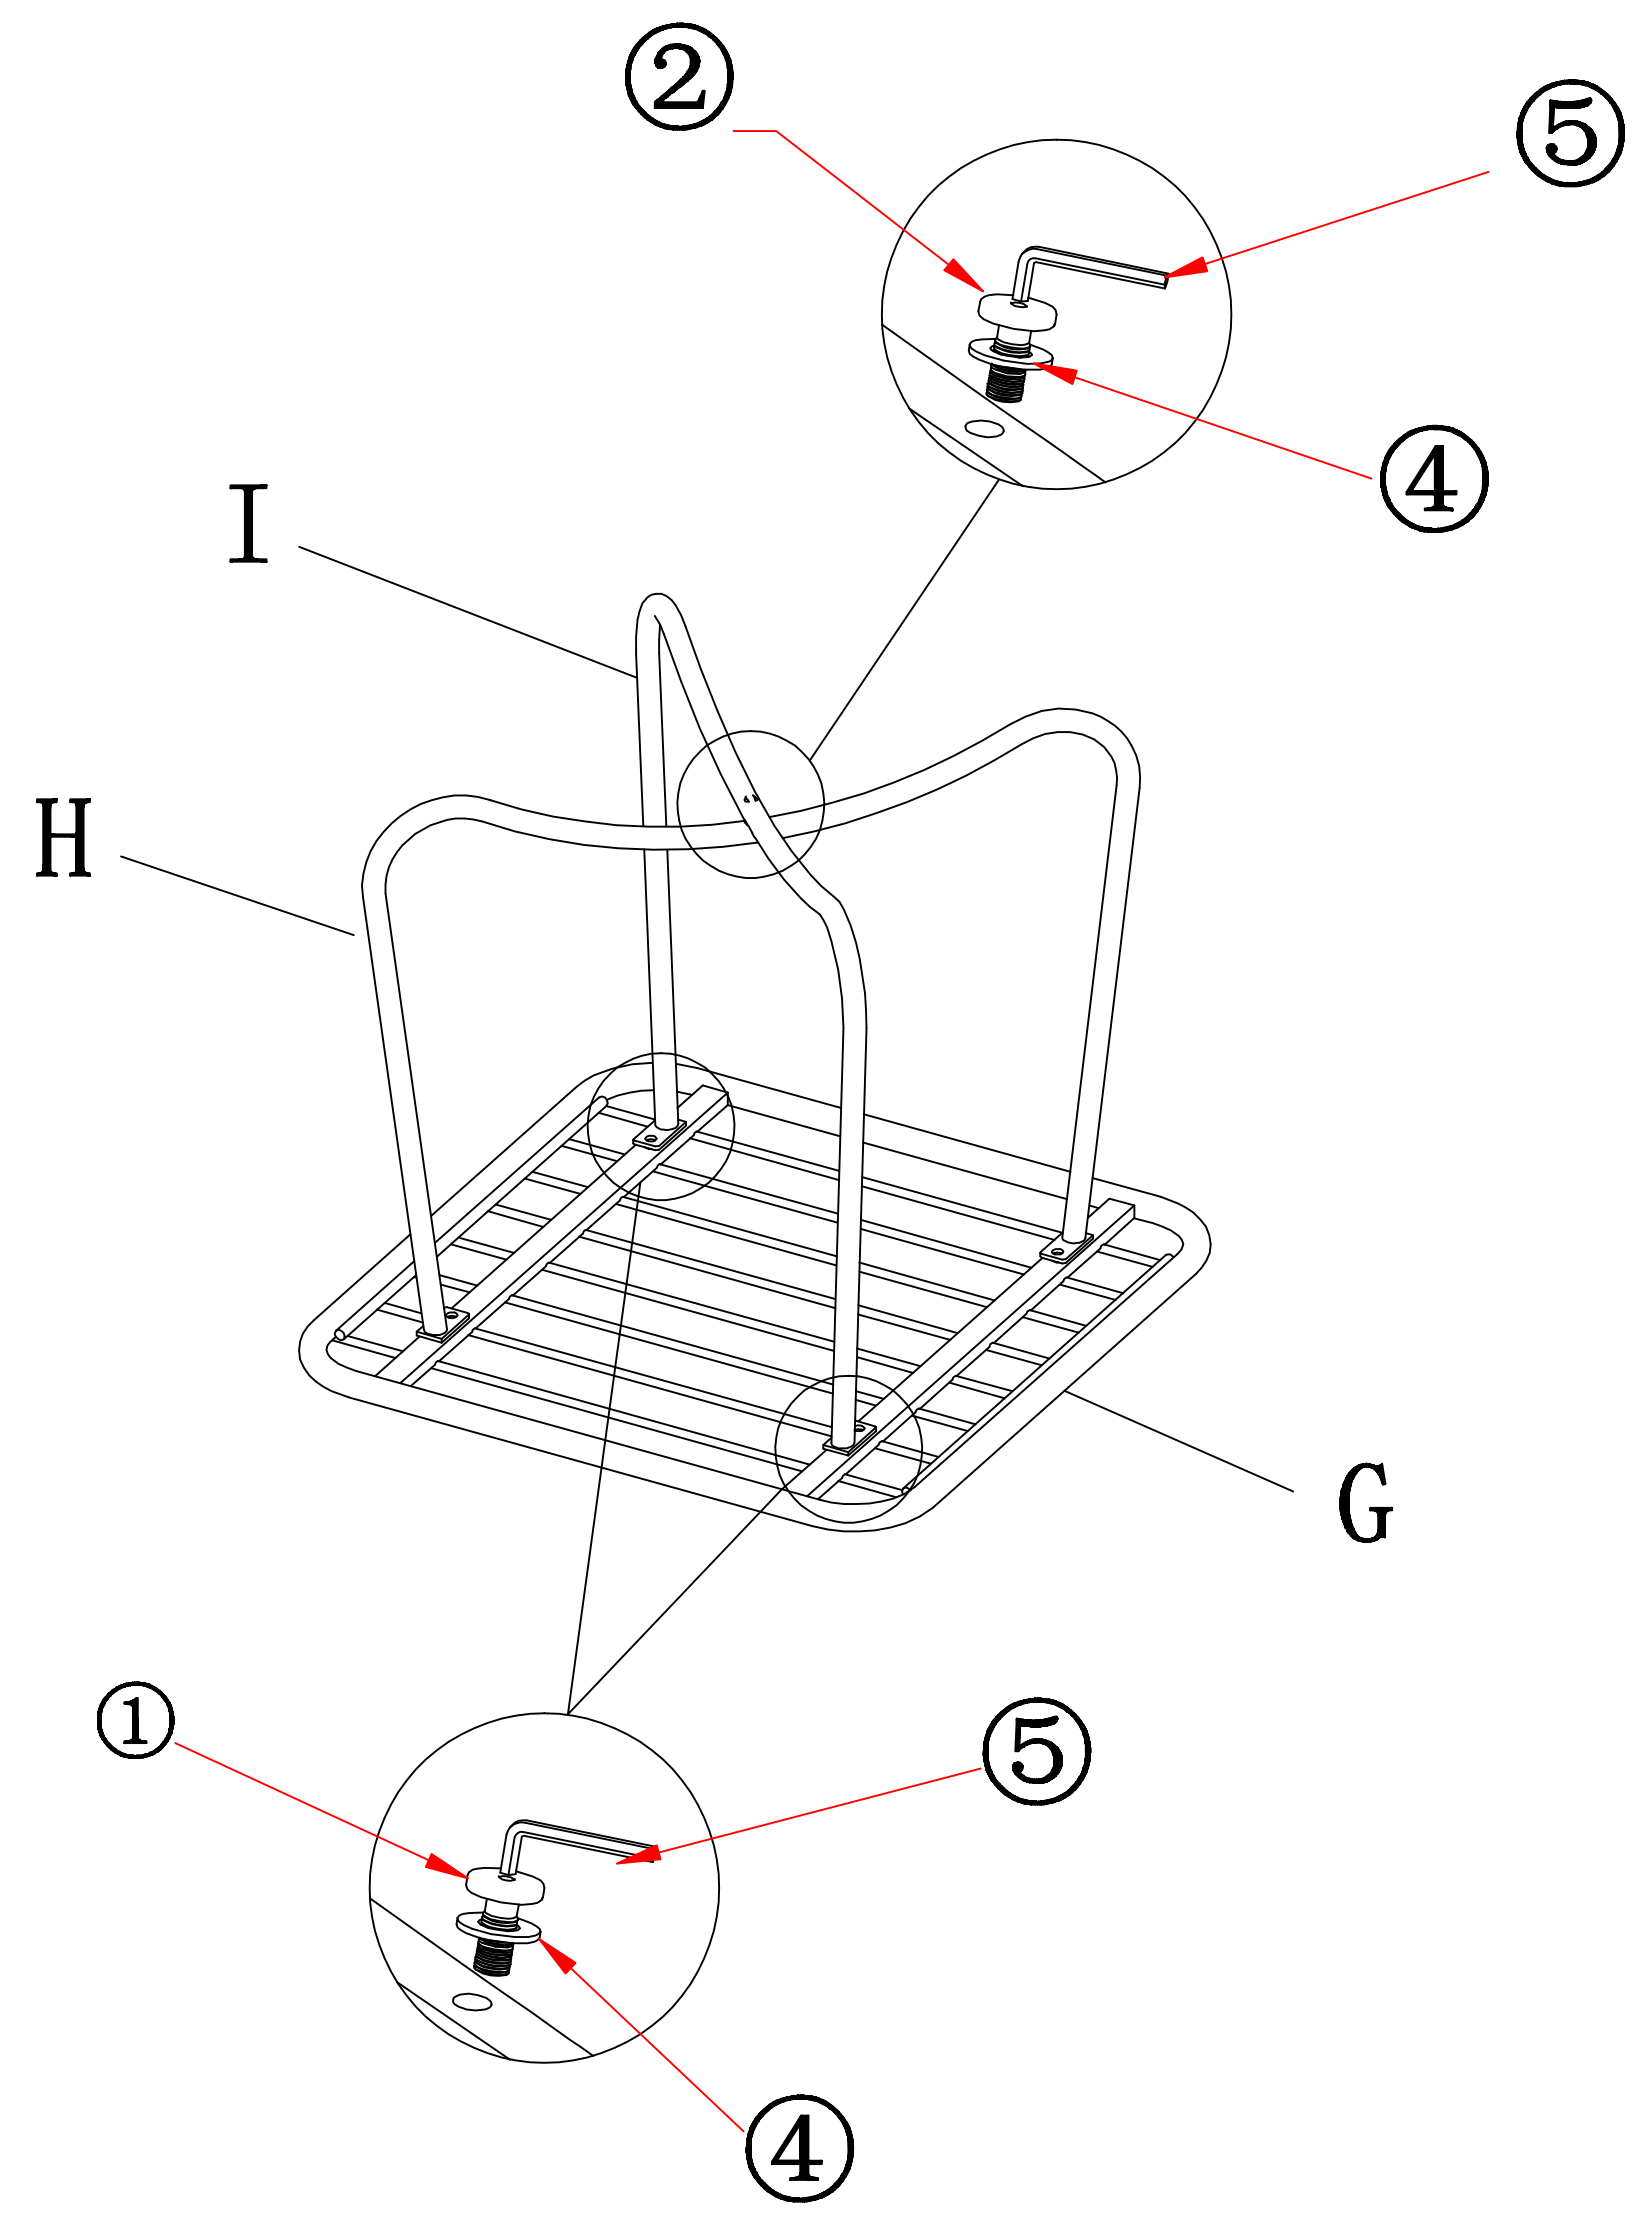

Step3:

